Electrolux


SERVICE BULLETIN MICROWAVES


PROCEDURE TO REPLACE THE MICA COVER

DESCRIPTION:

To replace the mica cover for a new one follow the above steps:

1. Identify the wave guide opening and confirm if it's clean (no grass or food residues). If necessary, clean this area with careful to avoid injuries. Be aware that is a cutting surface. To gain access to the mica cover releases the grill heater element by rotating 90° the ceramic support.

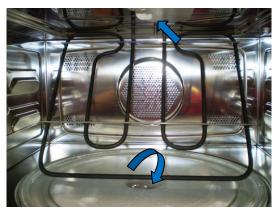


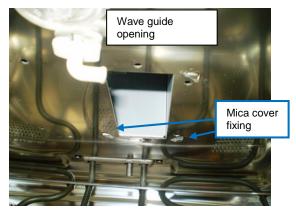

2. Place the new mica cover 50293747007 in the two rear fixing points



3. Press the mica cover against the fixing point and at same time force the mica cover to obtain an arc in the middle point.

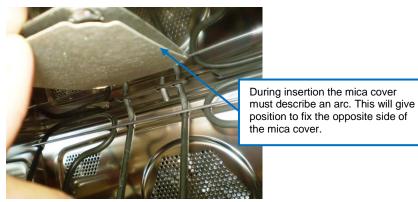

4. Place the mica cover in the front fixing points and perform a visual inspection to verify if the 4 corners are well blocked. Hold the grill heater element in his support.



REVISION:

Revision	Date	Description	Author	Approved by - on
00	10/2011	Document creation	PR	