


## NEW CHILD LOCK FUNCTION IN CRISS X USER INTERFACE

### DESCRIPTION:

In currently active Criss X user interface boards, it is very easy to accidentally activate the child lock function. Because of that, there will be a change of software. As a result, child lock function will be activated and deactivated differently. This change is done on all boards with firmware **387901702-D** and higher. Refer to picture below on how to find the firmware version. This information is not relevant for all appliances which already run firmware 387901702-D or higher

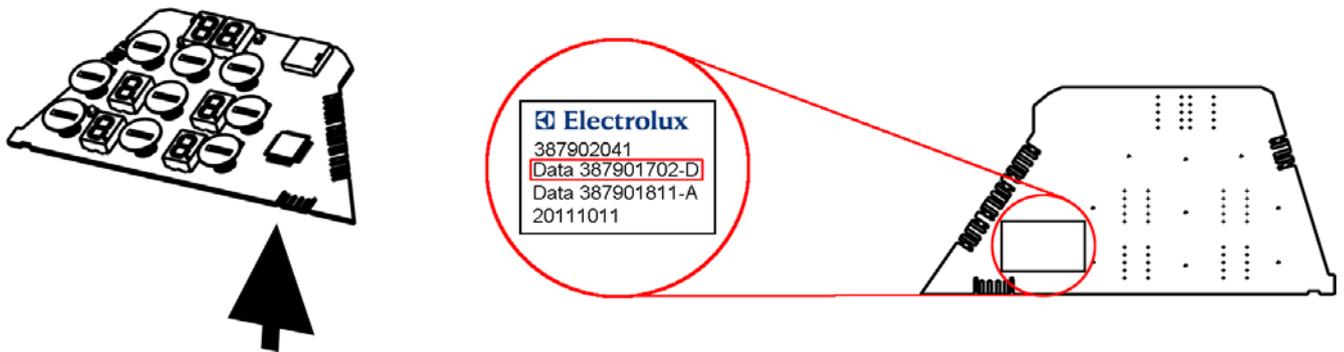

Placement of software label

### SOLUTION

**IMPORTANT:** After exchange of the user interface, instruct customer on new child lock activation/deactivation procedures

#### To activate the child safety device

- The appliance is deactivated.
- Touch  for 4 seconds until the symbol  flashes.
- Touch  when symbol  flashes, the symbol  comes on for 4 seconds.

#### To deactivate the child safety device

- The appliance is deactivated.
- Touch  until the symbol  flashes.
- Touch  in the time when symbol  flashes, the symbol  comes on for 4 seconds

#### Overriding the child safety device for one cooking session

- Activate the cooking zone. The symbol  comes on. Touch  until symbol  comes on.
- Set the heat setting from position  in less than 4 seconds. You can operate the hob.
- The child safety operates after you deactivate the appliance.

**MODELS INVOLVED:**

PNC	DATE	MODEL	BRAND	PNC	DATE	MODEL	BRAND
949593215	2011-10-13	HM634000M-B	AEG-Electrolux	940002215	2011-10-21	41116IE-WN	AEG-Electrolux
949593216	2011-10-13	HM634070M-B	AEG-Electrolux	940002223	2011-10-21	ELI13320-HV	Voss Electrolux
949593217	2011-10-13	HM634070F-B	AEG-Electrolux	940002224	2011-10-21	ELI13320-RF	Voss Electrolux
949593218	2011-10-13	HM634070IB	AEG-Electrolux	947942131	2011-10-21	ELI23020HV	Voss Electrolux
949593219	2011-10-13	HM834080F-B	AEG-Electrolux	947940132	2011-10-21	SI6603	Elektro Helios
949593220	2011-10-13	HM634200M-B	AEG-Electrolux	947941141	2011-10-21	EKD60054W	Electrolux
949593221	2011-10-13	HM634400M-B	AEG-Electrolux	947941142	2011-10-21	EKD60054W	Electrolux
949593222	2011-10-13	HM834400F-B	AEG-Electrolux	947941321	2011-10-21	EKD60406W	Electrolux
949593226	2011-10-13	HE634070X-B	AEG-Electrolux	947941322	2011-10-21	EKD60406W	Electrolux
949593227	2011-10-13	HE634070F-B	AEG-Electrolux	947941324	2011-10-21	EKD70406W	Electrolux
949593228	2011-10-13	HE634079X-B	AEG-Electrolux	947941325	2011-10-21	EKD60406X	Electrolux
949593229	2011-10-13	HE834080F-B	AEG-Electrolux	947941326	2011-10-21	EKD60406X	Electrolux
949593230	2011-10-13	HE634200X-B	AEG-Electrolux	947941328	2011-10-21	EKD70406X	Electrolux
949593231	2011-10-13	HE634200F-B	AEG-Electrolux	947942123	2011-10-21	QSI6132W	Husqvarna-Electrolux
949593232	2011-10-13	HE634209X-B	AEG-Electrolux	947942124	2011-10-21	QSI6132W	Husqvarna-Electrolux
949593233	2011-10-13	HE634400X-B	AEG-Electrolux	947942125	2011-10-21	ELI43220-HV	Voss Electrolux
949593234	2011-10-13	HM834400X-B	AEG-Electrolux	947942126	2011-10-21	QSI7132W	Husqvarna-Electrolux
949595004	2011-10-13	HE634250XB	AEG-Electrolux	947942128	2011-10-21	QSI6132X	Husqvarna-Electrolux
949595005	2011-10-13	HE634250FB	AEG-Electrolux	947942129	2011-10-21	ELI43220-RF	Voss Electrolux
949595006	2011-10-13	HE634259XB	AEG-Electrolux	947942133	2011-10-21	QSI 6102W	Husqvarna-Electrolux
949595055	2011-10-13	HE634070XB	AEG-Electrolux	947942308	2011-10-21	QSI6148W	Husqvarna-Electrolux
949595056	2011-10-13	HE634070FB	AEG-Electrolux	947942310	2011-10-21	QSI7148W	Husqvarna-Electrolux
949595057	2011-10-13	HE634079XB	AEG-Electrolux	947942312	2011-10-21	QSI6148K	Husqvarna-Electrolux
949595058	2011-10-13	HE834080XB	AEG-Electrolux	947941019	2011-10-21	EKD60253W	Electrolux
949595059	2011-10-13	HE634200XB	AEG-Electrolux	947941020	2011-10-21	EKD60253W	Electrolux
949595060	2011-10-13	HE634400XB	AEG-Electrolux	947942008	2011-10-21	ELI13320-HV	Voss Electrolux
949595061	2011-10-13	HM834400XB	AEG-Electrolux	947942009	2011-10-21	ELI13320-RF	Voss Electrolux
949595062	2011-10-13	HE634258XB	AEG-Electrolux	947942003	2011-10-21	42106IU-WN	AEG-Electrolux
949595063	2011-10-13	HE634078XB	AEG-Electrolux	947942014	2011-10-21	ELI23320-HV	Voss Electrolux
949595086	2011-10-13	HE634200FB	AEG-Electrolux				

**REVISION:**

Revision	Date	Description	Author	Approved by-on
00	10/2011	DocumentCreation	MK	FB-2011-10-17