

### NEW DOOR GASKET TO AVOID THE SWITCH OFF OR START PROBLEMS IN “MW” FUNCTIONS

The following instructions for the Service regarding exchange of Compact Microwave door gasket, valid for Compact ovens (models listed below) with new plastic inner door cover starting with serial No. **9 09 30360** until serial No **2 01 30083**.

- Problem:** During microwave operation, the appliance switches off or can't be started.
- Reason:** The micro switches behind the front frame are not switched steadily
- Cause:**
- a) Door gasket too high (dimensional)
  - b) Adjustment of door switch not aligned
- Line of action:**
- 1. Move door switch completely into direction to the door and fix it with the new T25 M4x8 screw (Spare Code **315 96 21 00/6**).
  - 2. Insert new door gasket (Spare Code **315 97 29 00/7**).
  - 3. When performing the functional test, the appliance must remain in operation until the gap between door and front frame exceeds 0.5mm.
- Built in situation:** Cross section through the door (door handle on the left) the rectangular gap is filled with the plastic door cover both spikes are pressed against the enamelled door frame.

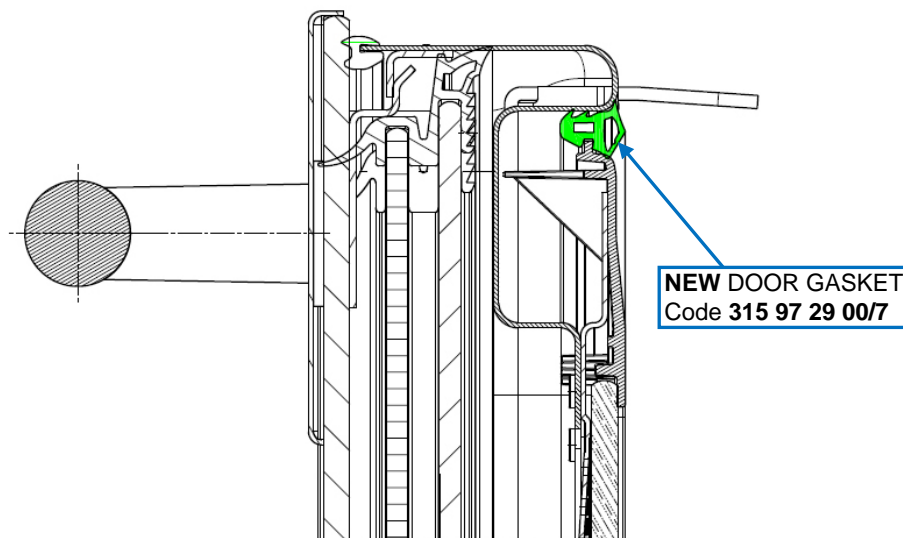


Fig. 1

**Factory :** New door gasket in use from serial No **201 30084**

**Report :** Report as failure code **244 / 17**

#### IMPORTANT INFORMATION TO THE CUSTOMER:

Recommendation, press the door firmly against the cavity when closing.

**MODELS INVOLVED:**

PNC	MODEL	BRAND	COUNTRY
944270745	IKC7705-RF	Voss-Electrolux	DK
944270746	QCK6438K	Husqvarna Electrolux	SE NO
944270751	KM9800E-M	AEG Electrolux	HR CZ DK EE FI KZ LV LT RU UA NO BE
944270752	KB9810E-M	AEG Electrolux	HR CZ DK EE FI KZ LV LT NO PL RU SI SE UA BE
944270755	KB98105E-M	AEG Electrolux	AT DE
944270756	KM9800E-M	AEG Electrolux	BE FR NL PT ES
944270757	KB9810E-M	AEG Electrolux	BE FR NL PT ES
944270758	KB9810E-M	AEG Electrolux	IT BE NL ES
944270762	KM9800E-M	AEG Electrolux	IE GB
944270763	KB9810E-M	AEG Electrolux	IE ZA GB
944270765	KB9810E-M	AEG Electrolux	JP
944270766	KB9810E-M	AEG Electrolux	JP
944270767	KB9810E-M	AEG Electrolux	AU NZ
944270770	EOK86030X	Electrolux	BE HR CZ DK EE FI HU IT KZ LV LT LU MN NL NO PT RO RU SK SI ES SE TR UA
944270773	EOK86030X	Electrolux	CN IE SG GB
944270775	QCK6438X	Husqvarna Electrolux	NO SE
944270776	JOK86030X	Juno-Electrolux	DE
944270778	EOK76030X	Electrolux	AU
944270779	EOK86030X	Electrolux	AU NZ
944270850	BOCMG-M	AEG Electrolux	CH
944270976	BOCHMG-M	AEG Electrolux	CH SZ
944270977	KB9810E-M	AEG Electrolux	AT DE LU
944271054	EBCGL9WE	Electrolux	CH SZ
944271055	EBCGL9SP	Electrolux	CH
944271056	EBCGL9CN	Electrolux	CH
944271057	EBCSL9WE	Electrolux	CH
944271058	EBCSL9SP	Electrolux	CH
944271059	EBCSL9CN	Electrolux	CH
944271068	EBCGL90WE	Electrolux	CH
944271069	EBCGL90SP	Electrolux	CH
944271070	EBCGL90CN	Electrolux	CH
944271071	EBCSL90WE	Electrolux	CH
944271072	EBCSL90SP	Electrolux	CH
944271073	EBCSL90CN	Electrolux	CH
944271093	KM7100000M	AEG Electrolux	AT BY BE HR CZ DK EE FR DE HU LV LT LU NL PL PT RU SK SI ES UA
944271097	KM7100000M	AEG Electrolux	JP
944271098	KM7100000M	AEG Electrolux	JP
944271099	BOCHMGM	AEG Electrolux	CH
944271169	EBCSL9SP	Electrolux	CH
944271170	EBCSL9CN	Electrolux	CH
944271171	EBCGL9SP	Electrolux	CH
944271172	EBCGL9CN	Electrolux	CH
944271179	EBCSL90SP	Electrolux	CH
944271180	EBCSL90CN	Electrolux	CH
944271181	EBCGL90SP	Electrolux	CH
944271182	EBCGL90CN	Electrolux	CH
944271185	KM7100000M	AEG Electrolux	CN

**REVISION:**

Revision	Date	Description	Author	Approved by - on
00	02/2012	Document Creation	FV	