

PULSE WASH DEACTIVATION TO IMPROVE WASHING RESULTS

DESCRIPTION:

Several claims from the Markets are about bad washing results or below expectations. That could be for several reasons depending on both faults and specific working conditions but on Customer misuse also.

SOLUTION:

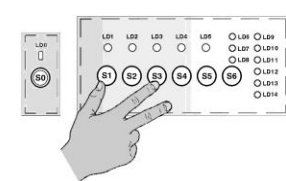
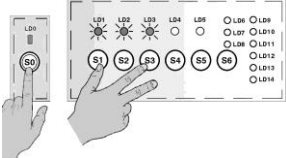
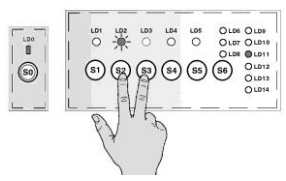
Anyway the aim of this Service Bulletin is to bring at your attention the chance to deactivate the Pulse Wash - through the Service Mode - as possible solution. The Continuous Wash so running in the appliance will improve the washing results.

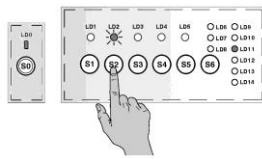
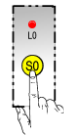
But unfortunately the above cannot be made on all the DIVA2 appliances on the Markets. That because first productions haven't this feature on board in the software and also because some other appliances, produced after w36/2011, has the chance to deactivate Pulse Wash.

SERVICE INSTRUCTIONS:

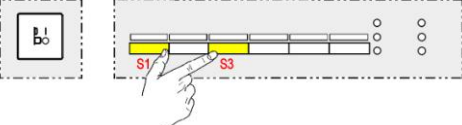
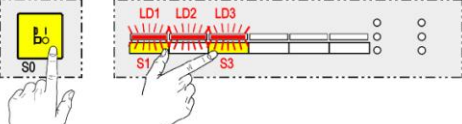
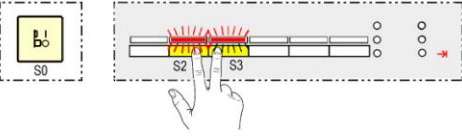
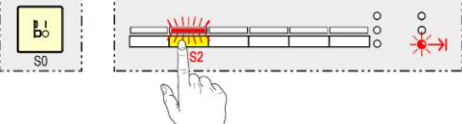
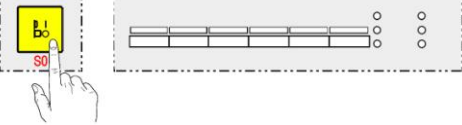
Please refer to the following examples in case you are going to deactivate the Pulse Wash, depending on which electronic platform your dishwasher belongs to. Further will be included from next revision.

EDW1100:

<p>1. Switch off the appliance, press buttons S1-S3 simultaneously.</p>	
<p>2. Press button S0 to switch the appliance on, <u>holding buttons S1-S3 down</u>, till the LEDs LD1, LD2, LD3 start to flash (about 4 sec.)</p>	
<p>3. Press buttons S2-S3 simultaneously till LD2 starts flashing:</p> <p>The End of cycle LED indicates the status of the function:</p> <ul style="list-style-type: none"> • If the end of cycle LED is switched off, the continuous washing system is used. • If the end of cycle LED is lit, the pulse washing system is used. 	

<p>4. Press button S2 to deactivate this function.</p>	
<p>5. To store the operation in memory: press button S0 and switch off the appliance or wait 60 second (LD1 ÷ LD6 light)</p>	

EDW1103:

 
<p>1. Switch off the appliance, press buttons S1-S3 simultaneously and hold down</p>	
<p>2. Press key S0 to switch the appliance on, <u>still holding down buttons S1 - S3</u> until LEDs LD1, LD2 and LD3 start to flash (about 4 seconds)</p>	
<p>3. Press buttons S2-S3 simultaneously:</p> <p>The end of cycle LED indicates the status of the function:</p> <ul style="list-style-type: none"> • If the end of cycle LED is switched off, the continuous washing system is used selected. • If the end of cycle LED is lit, the pulse washing system is used 	
<p>4. Press button S2 to deactivate this function.</p>	
<p>5. To store the operation in memory: press key S0 and switch the appliance off; alternatively, wait for 60 seconds (LEDs LD1 - LD6 light).</p>	

EDW1500-1510-1750:

 
1. Switch off the appliance.
2. Press buttons **S1-S3** simultaneously and hold down.
3. Press key **S0** to switch the appliance on, still holding down buttons S1 - S3 until LEDs LD1, LD2 and LD3 begin to flash.



4. Press buttons **S2-S3** simultaneously. The display indicates the status of the function:
 ↪ [**OP**] continuous washing “**Ctrl**”; [**1P**] pulse washing “**PW**” active.

 


5. Press button **S2** to deactivate this function:
 ↪ [**OP**] continuous washing “**Ctrl**”; [**1P**] pulse washing “**PW**” active.
6. To store the operation in memory: press key **S0** and switch the appliance off or wait for 60 seconds (appliance in selection mode)

 


EDW1503-1753:

 
1. Switch off the appliance.
2. Press buttons **S1-S3** simultaneously and hold down.
3. Press key **S0** to switch the appliance on, still holding down buttons **S1 - S3** until LEDs LD1, LD2 and LD3 begin to flash.



4. Press buttons **S2-S3** simultaneously. The display indicates the status of the function:
 ↪ [**OP**] continuous washing “**Ctrl**”; [**1P**] pulse washing “**PW**” active.



5. Press button **S2** to deactivate this function:
 ↪ [**OP**] continuous washing “**Ctrl**”; [**1P**] pulse washing “**PW**” active.
6. To store the operation in memory: press key **S0** and switch the appliance off or wait for 60 seconds (appliance in selection mode)



REVISION:

Revision	Date	Description	Author	Approved by - on
00	05/2012	Document creation	PR	