

REPLACEMENT OF OVC3000 AND FOOD PROBE MODULE (FPM)

- There has been an update to the electronic boards for ovens:
- OVC3000 has been updated to OVC3000 EOS
 - FPM has been updated to FPM EOS

New versions of the boards are not functionally compatible with older ones, so it may be necessary, in some cases, to replace both electronics. Mixing of EOS and non-EOS boards is not allowed.

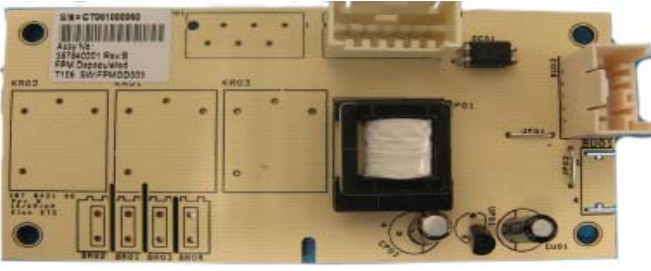
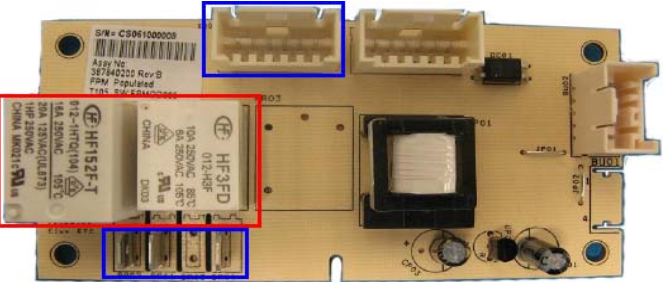
SOLUTION:

If there is no FPM in the appliance being serviced, it is allowed to replace OVC3000 with OVC3000 EOS.

In case there is an OCV3000 and FPM basic in the appliance, it is possible to replace only the OVC3000 board with OVC3000 EOS. If FPM has to be replaced, than it is necessary to replace both OVC3000 and FPM Basic to OVC3000 EOS and FPM Full EOS

In case of appliances which have both OVC3000 and FPM Full version, and one of them fails, there is a need to replace both boards to OVC3000 EOS and FPM Full EOS, for proper operation of the oven.

IDENTIFICATION OF FPM Basic and FPM Full

FPM Basic	FPM Full
	
<ul style="list-style-type: none"> • No mounted relays • Only 2 connectors 	<ul style="list-style-type: none"> • Additional relays marked in red • Additional connectors marked in blue

INTERCHANGEABILITY

- The spare part numbers for new boards are:
- OVC3000 EOS - 3878401037
 - FPM EOS - 3878402027

MODELS INVOLVED:

PNC	DATE	MODEL	BRAND	PNC	DATE	MODEL	BRAND
94418597000	20120130	BS9304401M	AEG	94032102900	20100723	EE7304031M	AEG Electrolux
94418596300	20120224	BP7314001M	AEG	94032109000	20101004	EE7304151M	AEG Electrolux
94418596600	20120224	BP9314001M	AEG	94032109100	20100913	EP7304151M	AEG Electrolux
94418701602	20120316	BS8314001M	AEG	94418571400	20100818	BE7304021M	AEG Electrolux
94418587002	20120416	BS8304001M	AEG	94418572400	20100922	BP7304021M	AEG Electrolux
94418590802	20120416	BS9304001M	AEG	94418575800	20100804	BE7004001M	AEG Electrolux
94418592402	20120424	BS9314001M	AEG	94418578100	20101014	BP7314001M	AEG Electrolux
94418596901	20120411	BS9304001M	AEG	94418580000	20101020	BP9304151M	AEG Electrolux
94418596902	20120420	BS9304001M	AEG	94418584200	20101020	BE7304151M	AEG Electrolux
94418579002	20120502	BS7304401M	AEG	94418584000	20101104	BS7304021M	AEG Electrolux
94418579301	20120419	BS9304401M	AEG	94418578800	20100805	BS7304001M	AEG Electrolux
94418588602	20120416	BS8304021M	AEG	94418580801	20110121	BP9314001M	AEG Electrolux
94418588901	20120411	BS8304001M	AEG	94418584300	20110209	BE7004421M	AEG Electrolux
94418588902	20120416	BS8304001M	AEG	94032103601	20110216	EP5004031M	AEG Electrolux
94418589001	20120411	BS8304021M	AEG	94418577701	20110217	BP5304001M	AEG Electrolux
94418589002	20120423	BS8304021M	AEG	94418586100	20110301	BP5304001B	AEG Electrolux
94418590601	20120410	BS7304001M	AEG	94418586200	20110301	BP5304001W	AEG Electrolux
94418590602	20120416	BS7304001M	AEG	94418580901	20110302	BS9304001M	AEG Electrolux
94418590701	20120411	BS7304021M	AEG	94418584400	20110304	BP7004021M	AEG Electrolux
94418590702	20120423	BS7304021M	AEG	94418575900	20110308	BE7304071M	AEG Electrolux
94418592302	20120423	BS7314021M	AEG	94418578300	20110308	BP7314071M	AEG Electrolux
94418596801	20120411	BS7304001M	AEG	94418576200	20110309	BE9314071M	AEG Electrolux
94418596802	20120416	BS7304001M	AEG	94418571500	20110128	BE7314421M	AEG Electrolux
94418701800	20120222	BS9304001M	AEG	94418576000	20110128	BE7314401M	AEG Electrolux
94418597100	20120417	BS9314401M	AEG	94418579000	20110128	BS7304401M	AEG Electrolux
94418597600	20120417	BS7314421M	AEG	94418579300	20110128	BS9304401M	AEG Electrolux
94418578902	20120410	BS7304071M	AEG	94418582800	20110203	BP7304151M	AEG Electrolux
94418597502	20120418	BS7304021M	AEG	94418578700	20110120	BP9314001M	AEG Electrolux
94418579202	20120411	BS7304001M	AEG	94427111000	20111017	EBKGL7SP	Electrolux
94418580302	20120420	BS9304001M	AEG	94427112200	20111020	EBSL80CN	Electrolux
94418702400	20120427	BS7314401M	AEG	94418410200	20120206	EOB8851AAX	Electrolux
94418588800	20120312	BS8304001M	AEG	94427110600	20120127	EBSL70CN	Electrolux
94418702900	20120514	BS931440PM	AEG	94427110400	20120217	EBKSL7CN	Electrolux
94418590801	20120411	BS9304001M	AEG	94427112100	20120220	EBSL80SP	Electrolux
94418580902	20120706	BS9304001M	AEG	94427110500	20120221	EBSL70SP	Electrolux
94418592202	20120703	BS7314001M	AEG	94418434800	20120905	EOB8841WOX	Electrolux
94418705300	20120817	BS8314001M	AEG	94418431201	20120907	EOB8851AAX	Electrolux
94418705400	20120817	BS8314021M	AEG	94418429500	20120824	EOB8711AOX	Electrolux
94418704500	20120830	BS9304001M	AEG	94418423100	20120803	EOC5753AAM	Electrolux
94418704200	20120907	BS8304001M	AEG	94418423200	20120806	EOC5753AAV	Electrolux
94418704300	20120907	BS8304021M	AEG	94418422200	20120713	EOC5743AOM	Electrolux
94418705900	20120907	BS9314001M	AEG	94418423400	20120713	EOC5753AAZ	Electrolux
94418707100	20120921	BS9314001M	AEG	94418422300	20120726	EOC5743AOV	Electrolux
94418705200	20121004	BP8314001M	AEG	94418423300	20120315	EOC5753AAX	Electrolux
94418596500	20111121	BP9004001M	AEG Electrolux	94427118800	20120503	BOGEPM	Electrolux
94418597900	20111121	BP7004021M	AEG Electrolux	94427111300	20120223	EBGL70SP	Electrolux
94418596800	20111222	BS7304001M	AEG Electrolux	94427111400	20120223	EBGL70CN	Electrolux
94032103801	20111004	EP7304031M	AEG Electrolux	94427110300	20120222	EBKSL7SP	Electrolux
94418596900	20120102	BS9304001M	AEG Electrolux	94418431600	20120509	EEB8585POX	Electrolux

PNC	DATE	MODEL	BRAND	PNC	DATE	MODEL	BRAND
94418585400	20110411	BP7304021M	AEG Electrolux	94418422500	20120320	EOC5743AOZ	Electrolux
94418585801	20110411	BP5004021M	AEG Electrolux	94418422400	20120321	EOC5743AOX	Electrolux
94418581200	20110509	BP7304001M	AEG Electrolux	94427110200	20120227	EBSL7CN	Electrolux
94418579900	20110330	BP7304151M	AEG Electrolux	94418410300	20120402	EOB8851AAX	Electrolux
94104732000	20111018	BOGESM	AEG Electrolux	94418410500	20120402	EOB8851AOX	Electrolux
94418577602	20110505	BP5304001M	AEG Electrolux	94418419500	20120403	EOB8751AOX	Electrolux
94418577802	20110428	BP5304001W	AEG Electrolux	94418427300	20120411	EOB8741AOX	Electrolux
94418590400	20110726	BP9004001M	AEG Electrolux	94418410400	20120412	EOB8851AAX	Electrolux
94418590500	20110726	BP9304151M	AEG Electrolux	94427110900	20120228	EBGL7CN	Electrolux
94418590800	20110726	BS9304001M	AEG Electrolux	94427111100	20120223	EBKGL7CN	Electrolux
94032107201	20110808	EP7004011M	AEG Electrolux	94427111200	20120223	EBGL70WE	Electrolux
94418579801	20110808	BP7304151M	AEG Electrolux	94427110100	20120306	EBSL7SP	Electrolux
94032112800	20110815	EE7304031M	AEG Electrolux	94427110700	20120307	EBGL7WE	Electrolux
94032113600	20110815	EE7004011M	AEG Electrolux	94427110800	20120307	EBGL7SP	Electrolux
94418589400	20110815	BE7304021M	AEG Electrolux	94418425500	20120306	EOB8841AOX	Electrolux
94418590000	20110815	BE7004001M	AEG Electrolux	94406603000	20120628	EVY9741AAX	Electrolux
94418590600	20110815	BS7304001M	AEG Electrolux	94418221405	20120427	QCE5765X	Husqvarna Electrolux
94418590700	20110815	BS7304021M	AEG Electrolux	94418221002	20120416	QCE5445W	Husqvarna Electrolux
94418592500	20110815	BP7304021M	AEG Electrolux	94418221102	20120416	QCE5445X	Husqvarna Electrolux
94418598900	20110815	BS7304021M	AEG Electrolux	94418221304	20120418	QCE5765K	Husqvarna Electrolux
94418587000	20110822	BS8304001M	AEG Electrolux	94418221404	20120420	QCE5765X	Husqvarna Electrolux
94418588600	20110822	BS8304021M	AEG Electrolux	94418221305	20120621	QCE5765K	Husqvarna Electrolux
94418578001	20110824	BP7004001M	AEG Electrolux	94418220901	20110406	QCE5445K	Husqvarna Electrolux
94418586800	20110908	BP8314021M	AEG Electrolux	94418221200	20110406	QCE5745X	Husqvarna Electrolux
94418586900	20110908	BP8314001M	AEG Electrolux	94406455500	20120910	OV21 702-451-98	IKEA
94418590200	20110907	BE7304151M	AEG Electrolux	94406455600	20120910	OV22 502-451-99	IKEA
94418588900	20110912	BS8304001M	AEG Electrolux	94418217000	20120130	JLBIOS614	John Lewis
94418589000	20110908	BS8304021M	AEG Electrolux	94418223101	20110331	IEL9301-RF	Voss-Electrolux
94418591900	20110916	BP7314021M	AEG Electrolux	94418223500	20110505	IEL9700-S	Voss-Electrolux
94418592000	20110916	BP7314001M	AEG Electrolux	94418223900	20110610	IEL9302-RF	Voss-Electrolux
94418592100	20110916	BP9314001M	AEG Electrolux	94418223300	20110407	IEL9700-HV	Voss-Electrolux
94418592200	20110915	BS7314001M	AEG Electrolux	94418223600	20110209	IEL9900-RF	Voss-Electrolux
94418592300	20110915	BS7314021M	AEG Electrolux	94418223001	20110330	IEL9301-HV	Voss-Electrolux
94418592400	20110914	BS9314001M	AEG Electrolux	94418223400	20110131	IEL9700-RF	Voss-Electrolux
94032106200	20100715	EE7004011M	AEG Electrolux	94418221504	20120420	IED6900-RF	Voss-Electrolux
94418578600	20100721	BP9004001M	AEG Electrolux	94418221505	20120508	IED6900-RF	Voss-Electrolux
94418579100	20100722	BS9304001M	AEG Electrolux				

REVISION:

Revision	Date	Description	Author	Approved by - on
00	10/2012	Document Creation	Marcin Kobialka	2013-03-26 P. Lämmermann