

# SERVICE BULLETIN DISH 2430

## Signal of the Touchpad disturbed by the "Metal protection for steam"

### **DESCRIPTION:**

In some occasion has been detected a bad functioning of the "Electronic Touchpad" of the dishwashers due to the metal protection for steam (A) (Stainless Steel or Aluminium foil) that creates a false impulse to the electronic


The problem happens only in the "Fully Integrated"\_dishwashers, if the metal protection for steam under the worktop of the kitchen is present and if the distance between the "touchpad" and the metal protection is less than 4mm when the door is closed

#### **SOLUTION:**

a) Remove the metal protection for steam

Or

b) Increase the distance between the Touchpad and the metal protection

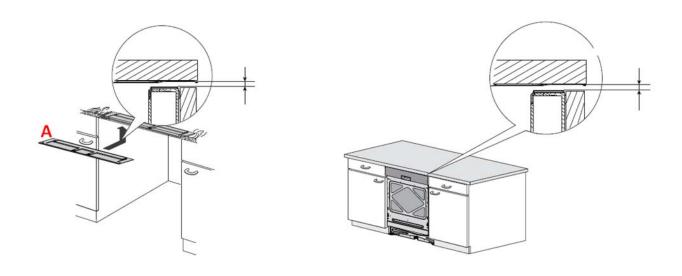

To protect the kitchen worktop, in alternative to the metal steam protection, an "Adhesive Plastic foil" is available. It avoids any kind of disturb signal of the Electronic

Spare Part Code plastic steam protection: 807201001

## **MODELS INVOLVED:**

## PNC/MODELS WITH EDW1953 ELECTRONIC (TOUCH USER INTERFACE)

	911437001	
60cm	911437002	
	911437003	
	911437004	
	911437005	
	911437006	
	911437007	
	911437008	
	911437009	
	911437010	
	911437012	
	911437014	
	911437015	
	911437017	
	911437020	
	911437021	
	911437022	
	911437023	
	911437024	
	911437025	
	911437026	
	911437027	
	911437028	
	911437029	
	911437030	
	911437031	
	911447010	
	011677001	
45cm	911677001 911677002	
450111	911677003	
	3110//003	

### **REVISIONS:**

Revision	Date	Description	Author	Approved by - on
00	01/2013	Document Creation	OW	PC