

**DEFROST DOES NOT WORK, THERMAL CUT-OUT EXCHANGE IN THE EVAPORATOR
BATTERY**

DESCRIPTION:

Faulty thermal cut-out can cause defrost heater fault (the thermostat will not switch on and the heater will not get voltage for defrosting)

SOLUTION:


Defrost problem can be solved by replacing thermal cut-out:



1. Remove all boxes and shelves from freezer compartment.



2. Unscrew air duct cover.

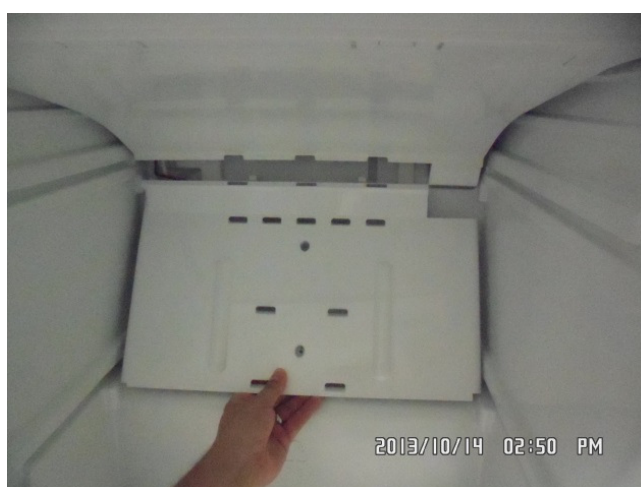

3. Remove air duct cover.




4. Unscrew and remove evaporator grid.



5. Remove evaporator battery fixing screws.



6. Disconnect evaporator battery from appliance.

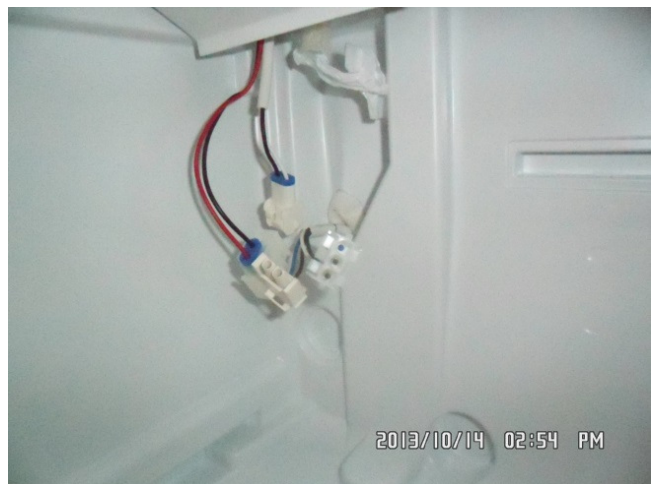



7. Pull the evaporator battery away from back wall.



8. Bend the back side of evaporator battery down.




9. Turn the left side of evaporator battery to front and right side.



10. Remove white adhesive tape.



11. Remove EPS insulation.

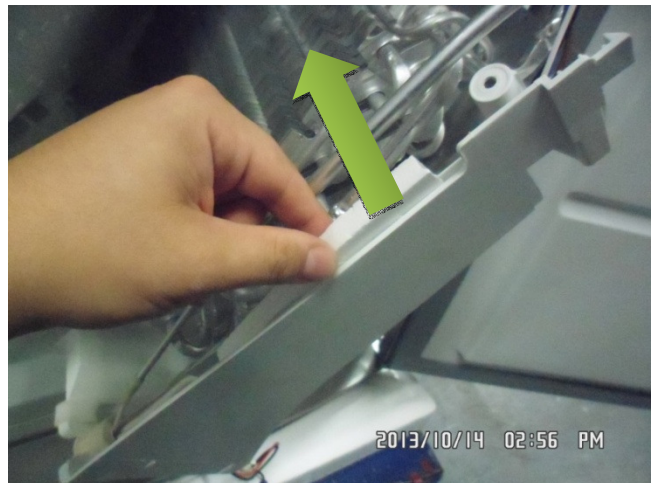


12. Remove side insulation from evaporator battery.



13. Cut off cable clamps.
IMPORTANT: Be careful not to damage wires.




14. Unplug connectors as shown on pictures above.
IMPORTANT: Connect brown+blue wires from thermal cut-out to white+black wires from defrost heater.

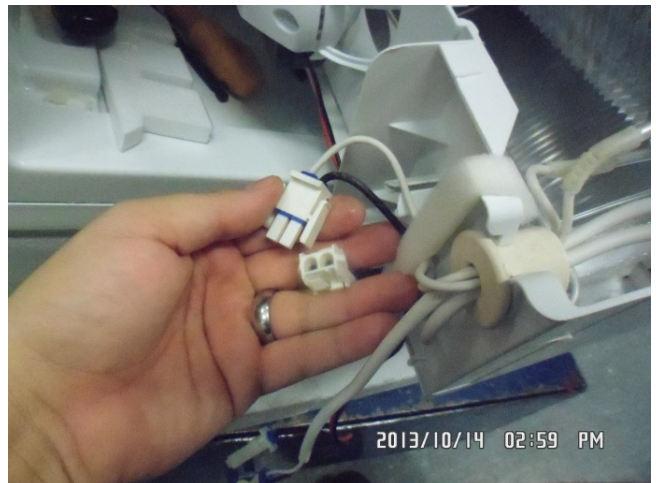

15. Pull out the rubber ring from hole.



16. Remove faulty thermal cut-out.

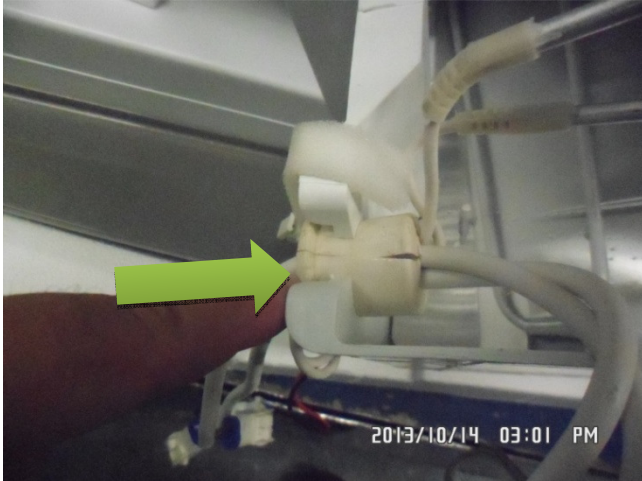


16. Insert new thermal cut-out and put rubber ring back into hole.




17. Plug in the connectors.



18. Place the connectors back into the connector holder.

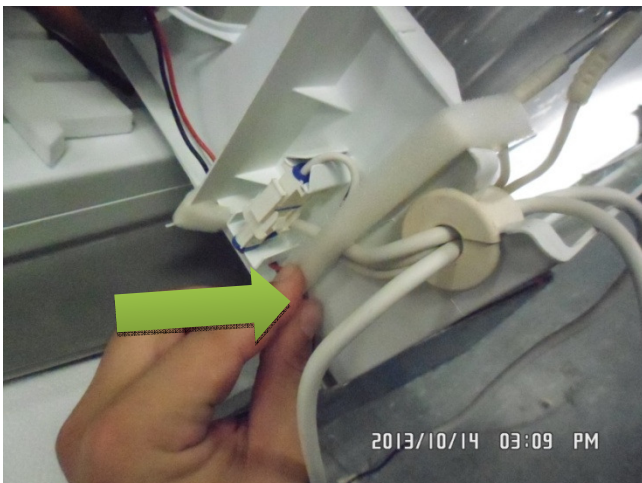

19. Adjust the cables and push back the sponge.

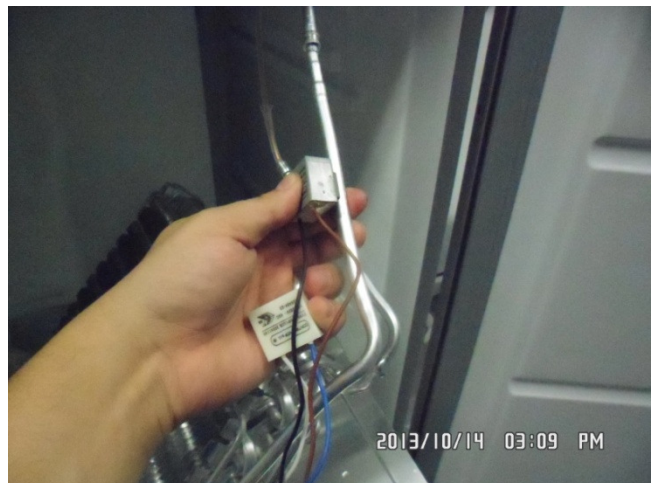

20. Place the new thermal cut-out onto the evaporator tube.




21. Adjust the wires (pull out few mm if needed).



22. Insert cables into cable channel.



23. Put back side EPS insulation.

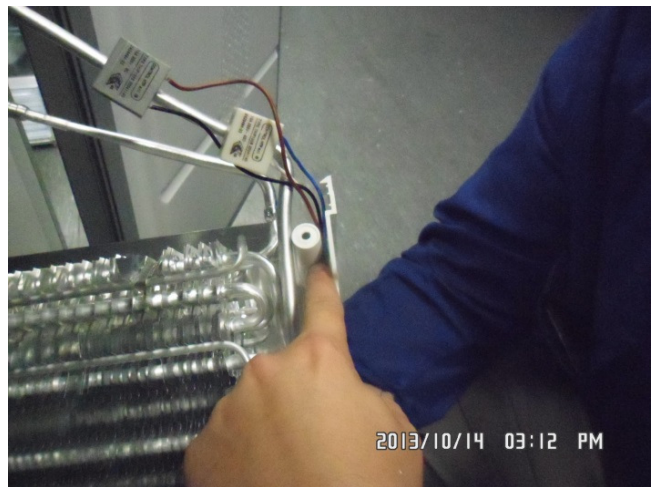

24. Adjust the wires.



25. Put back the upper EPS.



26. Attach insulation with adhesive tape.



27. Place back the evaporator battery.



28. Insert the drain outlet into drainage hole.



29. Plug in the connectors.



30. Screw evaporator battery to compartment ceiling.



31. Assemble evaporator grid onto module.



32. Put back and screw the air duct cover in original place.

32. Insert shelves and boxes.

SPARE PART NUMBER:

Description	Spare part code
White, adhesive tape	4055059028
Thermal cut-out	see spare parts list

MODELS INVOLVED:

PNC	MODEL	TYPE	BRAND
925033048	JLFFW1803	CBFF340	John Lewis
925033082	ANA34100W	CBFF340	Arthur Martin Electrolux
925033114	S75348KG5	CBFF340	AEG Electrolux
925033134	S75348KG98	CBFF340	AEG Electrolux
925033135	S75348KG98	CBFF340	AEG
925033135	S75348KG98	CBFF340	AEG Electrolux
925033154	S75340KG2	CBFF340	AEG Electrolux
925033155	S75348KG2	CBFF340	AEG Electrolux
925033165	PCX36NF	CBFF340	Zoppas
925033181	ZRB634FW	CBFF340	Zanussi
925033192	ENB34000W	CBFF340	Electrolux
925033235	JLFFW2004	CBFF380	John Lewis
925033283	S75388KG5	CBFF380	AEG Electrolux
925033292	S65380KG18	CBFF380	AEG Electrolux
925033294	S75380KG18	CBFF380	AEG Electrolux
925033317	ENB38607X	CBFF380	Electrolux
925033318	S75380KG2	CBFF380	AEG Electrolux
925033319	S75388KG2	CBFF380	AEG Electrolux
925033324	PCX38NF	CBFF380	Zoppas
925033334	ZRB638FW	CBFF380	Zanussi
925033345	ZNB383W	CBFF380	Zanussi

PNC	MODEL	TYPE	BRAND
925033346	QT4609RX	CBFF380	Husqvarna Electrolux
925033361	PC382NFX	CBFF380	Zoppas
925033369	ZRB938NX	CBFF380	Zanussi
925033373	ENA38733W	CBFF380	Electrolux
925033374	ENA38733X	CBFF380	Electrolux
925033379	ENA38933W	CBSD380	Electrolux
925033380	ENA38933X	CBSD380	Electrolux
925033382	ENA38970C	CBFF380	
925033383	ENA38970S	CBFF380	
925033384	ENA38970Y	CBFF380	
925033385	ENA38970Z	CBFF380	
925033386	ENB38633W	CBFF380	Electrolux
925033390	ENB38633X	CBFF380	Electrolux
925033391	ENA38835W	CBFF380	
925033393	ENA38935X	CBFF380	Electrolux
925033394	ENA38935X	CBFF380	Electrolux
925033399	ENB38933W	CBFF380	Electrolux
925033414	ANB32000W	CBFF320	
925033433	ZKN3217	CBFF320	Zanker
925033434	ZKN3217S	CBFF320	Zanker
925033435	ZRB632FW	CBFF320	Zanussi
925033436	ZRB632FX	CBFF320	Zanussi
925033438	ZRB632FW	CBFF320	Zanussi
925033439	ZRB632FX	CBFF320	Zanussi
925033440	S65326KG	CBFF320	AEG Electrolux
925033443	ENB32003W	CBFF320	Electrolux
925033448	S65320KG	CBFF320	AEG Electrolux
925033449	ENB32200W	CBFF320	AEG Electrolux
925033449	ENB32200W	CBFF320	Electrolux
925033450	ENB32633W	CBFF320	Electrolux
925033451	ENB32633X	CBFF320	Electrolux
925033453	ENB32201W	CBFF320	Electrolux
925033454	KF3420W	CBFF320	Elektro Helios
925033455	S73200CNS0	CBFF320	AEG
925033455	S73200CNS0	CBFF320	AEG Electrolux
925033456	S73200CNW0	CBFF320	AEG Electrolux
925033458	ZRB732FW	CBFF320	
925033459	ZRB732FX	CBFF320	
925033460	EN3240AOW	CBFF320	Electrolux
925033461	EN3241AOW	CBFF320	Electrolux
925033462	EN3241AOX	CBFF320	Electrolux
925033463	ZRB632FW2	CBFF320	
925033464	ZRB932FW2	CBFF320	Zanussi
925033465	ZRB932FW2	CBFF320	Zanussi
925033466	ZRB932FX2	CBFF320	Zanussi
925033467	S73200CNW1	CBFF320	AEG
925033468	S73200CNS1	CBFF320	AEG
925033469	KF32500	CBFF320	Elektro Helios
925033470	EN3240COW	CBFF320	
925033471	EN3240COX	CBFF320	

PNC	MODEL	TYPE	BRAND
925033472	ZRB932CW	CBFF320	Zanussi
925033473	S73200CNW1	CBFF320	AEG
925033608	ZRB634FW	CBFF340	Zanussi
925033609	ZRB634FX	CBFF340	Zanussi
925033612	RJP3341	CBFF340	Rosenlew
925033625	ZRB934NXL	CBFF340	Zanussi
925033626	ZRB634FX	CBFF340	Zanussi
925033637	FRB634NW	CBFF340	Faure
925033645	ZRB634NW	CBFF340	Zanussi
925033656	ENA34733W	CBFF340	Electrolux
925033657	ENA34733X	CBFF340	Electrolux
925033660	ENA34835W	CBFF340	
925033661	ENA34933W	CBSD340	Electrolux
925033662	ENA34933X	CBSD340	Electrolux
925033663	ENA34935X	CBFF340	Electrolux
925033664	ENB34200W	CBFF340	Electrolux
925033665	ENB34633W	CBFF340	Electrolux
925033666	ENB34633X	CBFF340	Electrolux
925033672	KF3440W	CBFF340	Elektro Helios
925033673	ENA34835W	CBFF340	Electrolux
925033674	ENA34835W	CBFF340	
925033676	ENA34935X	CBFF340	Electrolux
925033679	ENB34933W	CBFF340	Electrolux
925033680	ENB34933X	CBFF340	Electrolux
925033681	ZRB934TW	CBSD340	Zanussi
925033682	ZRB934TX	CBSD340	Zanussi
925033683	ZRB835NW1	CBFF340	Zanussi
925033684	ZRB835NXL1	CBFF340	Zanussi
925033689	SB323N14	CBFF340	Electrolux
925033691	ENB34633W	CBFF340	
925033692	ENB34633X	CBFF340	
925033693	KF3440X	CBFF340	Elektro Helios
925033695	QT4409RX	CBFF340	Husqvarna Electrolux
925033701	ENB34233W	CBFF340	Electrolux
925033703	ZRB634NXL	CBFF340	Zanussi
925033704	RJP3351	CBFF340	Rosenlew
925033706	S83400CTW0	CBFF340	AEG Electrolux
925033707	S83400CTM0	CBFF340	AEG
925033707	S83400CTM0	CBFF340	AEG Electrolux
925033708	ENA34739X	CBFF340	
925033709	RNA34739X	CBFF340	
925033712	S73400CNS0	CBFF340	AEG Electrolux
925033713	S73400CNW0	CBFF340	AEG Electrolux
925033714	QRT4260W	CBSD340	Husqvarna Electrolux
925033715	QRT4260K	CBSD340	Husqvarna Electrolux
925033717	S83200CMM0	CBSD340	AEG
925033717	S83200CMM0	CBSD340	AEG Electrolux
925033718	S83200CMB0	CBSD340	AEG Electrolux
925033720	S83200CMW0	CBSD340	AEG Electrolux
925033721	RNA34733X	CBFF340	Rex-Electrolux

PNC	MODEL	TYPE	BRAND
925033722	RNA34770S	CBFF340	Rex-Electrolux
925033724	RNA34770Y	CBFF340	Rex-Electrolux
925033725	RNA34770C	CBFF340	Rex-Electrolux
925033726	QRT4260X	CBSD340	Husqvarna Electrolux
925033727	S83409CTW0	CBFF340	AEG Electrolux
925033728	S83409CTM0	CBFF340	AEG
925033728	S83409CTM0	CBFF340	AEG Electrolux
925033731	QRT4220W	CBFF340	Husqvarna Electrolux
925033732	QRT4220X	CBFF340	
925033733	S83400CTW0	CBFF340	AEG Electrolux
925033734	S83400CTM0	CBFF340	AEG
925033734	S83400CTM0	CBFF340	AEG Electrolux
925033735	S73400CNS0	CBFF340	AEG Electrolux
925033736	S83200CMW0	CBSD340	AEG
925033736	S83200CMW0	CBSD340	AEG Electrolux
925033737	S83200CMM0	CBSD340	AEG
925033737	S83200CMM0	CBSD340	AEG Electrolux
925033738	AKG3171M	CBSD340	
925033739	JLFFW1815	CBFF340	John Lewis
925033740	JLSS1816	CBFF340	John Lewis
925033742	ENB34633BW	CBFF340	
925033743	RNA34733W	CBFF340	Rex-Electrolux
925033744	RNA34933W	CBSD340	
925033745	ENA34938X	CBSD340	
925033746	PC342NF	CBFF340	Zoppas
925033747	ENB34943W	CBFF340	Electrolux
925033748	PC342NFX	CBFF340	Zoppas
925033749	QRT4230W	CBFF340	Husqvarna Electrolux
925033750	QRT4230X	CBFF340	Husqvarna Electrolux
925033751	S83408CTW0	CBFF340	AEG Electrolux
925033752	S83408CTM0	CBFF340	AEG
925033752	S83408CTM0	CBFF340	AEG Electrolux
925033753	ENA34980S	CBFF340	Electrolux
925033754	ENA34633W	CBFF340	Electrolux
925033755	RNA34633X	CBFF340	Rex-Electrolux
925033756	ENB34943X	CBFF340	Electrolux
925033757	ENA34953W	CBSD340	Electrolux
925033758	ENA34953X	CBSD340	Electrolux
925033759	ZKK36A9SF	CBFF340	Zanker
925033760	ZKK3407F	CBFF340	Zanker
925033761	ZKK3407SLF	CBFF340	Zanker
925033762	RNA34980S	CBFF340	Rex-Electrolux
925033763	RNA34980Y	CBFF340	Rex-Electrolux
925033764	RNA34980Z	CBFF340	Rex-Electrolux
925033765	RNA34980C	CBFF340	Rex-Electrolux
925033766	S73400CNW0	CBFF340	AEG
925033766	S73400CNW0	CBFF340	AEG Electrolux
925033769	ENB34963X	CBFF340	Electrolux
925033770	ENA34980C	CBFF340	Electrolux
925033771	ENB34953X	CBFF340	Electrolux

PNC	MODEL	TYPE	BRAND
925033772	ZRB734FW	CBFF340	Zanussi
925033773	EN3487AOX	CBSD340	Electrolux
925033774	RN3487AOX	CBSD340	Rex-Electrolux
925033775	EN3487AOY	CBSD340	Electrolux
925033776	RN3487AOY	CBSD340	Rex-Electrolux
925033777	EN3487AOO	CBSD340	Electrolux
925033778	RN3487AOO	CBSD340	Rex-Electrolux
925033779	EN3487AOH	CBSD340	Electrolux
925033780	RN3487AOH	CBSD340	Rex-Electrolux
925033781	EN3487AOJ	CBSD340	Electrolux
925033782	RN3487AOJ	CBSD340	Rex-Electrolux
925033783	ENA34980Z	CBFF340	Electrolux
925033784	ENA34980Y	CBFF340	Electrolux
925033785	RNA34633W	CBFF340	Rex-Electrolux
925033786	ZRB734FX	CBFF340	
925033787	EN3440AOW	CBFF340	
925033788	EN3450AOW	CBFF340	Electrolux
925033789	EN3450AOX	CBFF340	Electrolux
925033790	EN3441AOW	CBFF340	Electrolux
925033791	EN3441AOX	CBFF340	Electrolux
925033792	EN3450DOX	CBFF340	
925033793	EN3442AOW	CBFF340	Electrolux
925033794	EN3442AOX	CBFF340	Electrolux
925033795	RN3451AOW	CBFF340	Rex-Electrolux
925033796	RN3451AOX	CBFF340	Rex-Electrolux
925033797	EN3451AOW	CBFF340	Electrolux
925033798	EN3451AOX	CBFF340	Electrolux
925033799	RJP3355	CBFF340	Rosenlew
925033800	ENB38933X	CBFF380	Electrolux
925033801	ZRB938TW	CBSD380	Zanussi
925033802	ZRB938TX	CBSD380	Zanussi
925033803	PC382NF	CBFF380	Zoppas
925033806	RNA38733X	CBFF380	
925033808	QT4609RK	CBFF380	Husqvarna Electrolux
925033809	PC384NFX	CBFF380	Zoppas
925033812	ENA38833X	CBFF380	Electrolux
925033813	ZRB638NW	CBFF380	Zanussi
925033815	S83800CTW0	CBFF380	AEG Electrolux
925033816	S83800CTM0	CBFF380	AEG
925033816	S83800CTM0	CBFF380	AEG Electrolux
925033818	RNA38739X	CBFF380	
925033823	S73400CTW0	CBFF340	AEG Electrolux
925033824	S73400CTS0	CBFF340	AEG Electrolux
925033825	S83600CMM1	CBSD380	AEG
925033825	S83600CMM1	CBSD380	AEG Electrolux
925033826	S83600CMM0	CBSD380	AEG
925033826	S83600CMM0	CBSD380	AEG Electrolux
925033827	S83600CMB0	CBSD380	
925033829	S83600CMW0	CBSD380	AEG Electrolux
925033831	RNA38970Y	CBFF380	Rex-Electrolux

PNC	MODEL	TYPE	BRAND
925033834	RNA38733X	CBFF380	Rex-Electrolux
925033835	RNA38933W	CBSD380	Rex-Electrolux
925033836	RNA38933X	CBSD380	Rex-Electrolux
925033837	QRT4650W	CBSD380	Husqvarna Electrolux
925033838	QRT4650K	CBSD380	Husqvarna Electrolux
925033839	QRT4650X	CBSD380	AEG
925033839	QRT4650X	CBSD380	Husqvarna Electrolux
925033839	QRT4650X	CBSD380	Elektro Helios
925033840	S83809CTW0	CBFF380	
925033841	S83809CTM0	CBFF380	
925033842	S83600CMM0	CBSD380	Husqvarna Electrolux
925033842	S83600CMM0	CBSD380	AEG Electrolux
925033843	JLFFW2016	CBFF380	John Lewis
925033844	JLSS2017	CBFF380	John Lewis
925033846	RNA38733W	CBFF380	Rex-Electrolux
925033847	QRT4630W	CBFF380	Husqvarna Electrolux
925033848	QRT4630X	CBFF380	Husqvarna Electrolux
925033849	ENB38739X	CBFF380	Electrolux
925033850	ENB38943W	CBFF380	Electrolux
925033851	EN3887AOX	CBSD380	Electrolux
925033852	RN3887AOX	CBSD380	Rex-Electrolux
925033853	ENA38980S	CBFF380	Electrolux
925033854	ENB38953X	CBFF380	Electrolux
925033855	ENA38953W	CBSD380	Electrolux
925033856	ENA38953X	CBSD380	Electrolux
925033857	ENA38980C	CBFF380	
925033858	ENB38943X	CBFF380	Electrolux
925033859	RNA38980S	CBFF380	Rex-Electrolux
925033860	RNA38980Y	CBFF380	Rex-Electrolux
925033861	RNA38980Z	CBFF380	Rex-Electrolux
925033862	RNA38980C	CBFF380	Rex-Electrolux
925033863	S83800CTM0	CBFF380	AEG
925033863	S83800CTM0	CBFF380	AEG Electrolux
925033864	S83800CTW0	CBFF380	AEG
925033864	S83800CTW0	CBFF380	AEG Electrolux
925033865	S83600CMW0	CBSD380	AEG Electrolux
925033866	RNA38953W	CBSD380	Rex-Electrolux
925033867	RNA38953X	CBSD380	Rex-Electrolux
925033868	ZRB738FW	CBFF380	
925033869	EN3840AOW	CBFF380	
925033870	EN3840AOX	CBFF380	
925033871	EN3850DOX	CBFF380	Electrolux
925033872	EN3851AOX	CBFF380	Electrolux
925033873	EN3853AOW	CBFF380	Electrolux
925033874	EN3853AOX	CBFF380	Electrolux
925033875	RN3881AOW	CBSD380	Rex-Electrolux
925033876	RN3881AOX	CBSD380	Rex-Electrolux
925033877	EN3880AOW	CBSD380	Electrolux
925033878	EN3880AOX	CBSD380	Electrolux
925033879	EN3881AOY	CBSD380	

PNC	MODEL	TYPE	BRAND
925033880	EN3881AOO	CBSD380	Electrolux
925033881	EN3881AOW	CBSD380	Electrolux
925033882	EN3881AOX	CBSD380	Electrolux
925033883	EN3841AOX	CBFF380	
925033884	EN3850AOW	CBFF380	Electrolux
925033885	EN3850AOX	CBFF380	Electrolux
925033886	ENA38938X	CBSD380	Electrolux
925033887	ZRB638FW2	CBFF380	
925033888	ZRB938FW2	CBFF380	Zanussi
925033889	ZRB938FW2	CBFF380	Zanussi
925033890	ZRB938NW2	CBFF380	Zanussi
925033891	ZRB939NX2	CBFF380	Zanussi
925033892	S83600CMM3	CBSD380	
925033893	S83600CMM2	CBSD380	
925033894	S83600CMW1	CBSD380	AEG
925033895	S83600CMB1	CBSD380	
925033896	S63600CMM1	CBSD380	AEG
925033897	S73800CTW1	CBFF380	
925033898	S73800CTS1	CBFF380	
925033899	QRT4651X	CBSD380	
925033900	QRT4651W	CBSD380	
925033901	QRT4651K	CBSD380	
925033902	PRB939NW2	CBFF380	Zoppas
925033903	PRB939NX2	CBFF380	Zoppas
925033904	EN3887AOW	CBSD380	Electrolux
925033905	ZRB939NW2	CBFF380	Zanussi
925033906	ZRB939NX2	CBFF380	Zanussi
925033907	EN3850COW	CBFF380	Electrolux
925033908	EN3850COX	CBFF380	Electrolux
925033909	S83600CMM2	CBSD380	
925033910	S83600CMW1	CBSD380	AEG
925033911	EN3881AOY	CBSD380	Electrolux
925033912	EN3881AOX	CBSD380	Electrolux
925033913	S73800CNW1	CBFF380	AEG
925033914	S73800CNS1	CBFF380	AEG
925033915	EN3851AOW	CBFF380	Electrolux
925033916	RN3881AOY	CBSD380	Rex-Electrolux
925033917	RN3881AOO	CBSD380	Rex-Electrolux
925033918	RN3851AOW	CBFF380	Rex-Electrolux
925033919	RN3851AOX	CBFF380	Rex-Electrolux
925033920	RN3850COW	CBFF380	Rex-Electrolux
925033920	RN3850COW	CBFF380	Electrolux
925033921	RN3850COX	CBFF380	Rex-Electrolux
925033922	ZRB938FWD2	CBFF380	Zanussi
925033923	ZRB938FXD2	CBFF380	
925033924	S73801CTW1	CBFF380	
925033925	S73801CNW1	CBFF380	
925033926	EN3851ACX	CBFF380	Electrolux
925033927	S8360PCMM2	CBSD380	
925033928	S8360PCMW1	CBSD380	

PNC	MODEL	TYPE	BRAND
925033929	S73600CMX2	CBSD380	AEG
925033930	S63600CMX0	CBSD380	AEG
925033931	QRT4640W	CBFF380	
925033932	S83800CTX0	CBFF380	AEG
925033933	EN3881ASX	CBSD380	Electrolux
925033934	S73801CNX0	CBFF380	AEG
925033935	EN3851AOW	CBFF380	Electrolux
925033936	EN3851AOX	CBFF380	Electrolux
925033937	JLFFW2018	CBFF380	John Lewis
925033938	JLSS2019	CBFF380	John Lewis
925033939	RN3850ADW	CBFF380	AEG
925033940	RN3850ADX	CBFF380	Rex-Electrolux
925033941	EN53853AW	CBFF380	Electrolux
925033942	EN53853AX	CBFF380	Electrolux
925033943	S57380CNX0	CBFF380	AEG
925033944	S58360CMM0	CBSD380	AEG
925033945	S73913CTM0	CBFF380	
925033946	DYNAMISK	CBSD380	IKEA
925033947	DYNAMISK	CBSD380	IKEA
925033948	DYNAMISK	CBSD380	IKEA
925033949	S83600CMM4	CBSD380	AEG
925033950	SJBM361EWH	CBFF380	
925033951	SJBM361ESL	CBFF380	
925033952	SJBP361UWH	CBFF380	
925033953	SJBM362ESL	CBFF380	
925033954	SJBP361EWH	CBFF380	
925033955	SJBP361EST	CBFF380	
925033956	SJBP361UST	CBFF380	
925033957	EN3888AOX	CBSD380	AEG
925033958	EN3889AOX	CBSD380	Electrolux
925033959	S52933CTWO	CBFF380	AEG
925033960	S52933CTM0	CBFF380	
925034500	EN3480AOW	CBSD340	Electrolux
925034501	EN3480AOX	CBSD340	Electrolux
925034502	EN3481AOW	CBSD340	Electrolux
925034503	EN3481AOX	CBSD340	Electrolux
925034504	EN3453AOW	CBFF340	Electrolux
925034505	EN3453AOX	CBFF340	Electrolux
925034506	ZRB634FW2	CBFF340	
925034507	ZRB934FW2	CBFF340	Zanussi
925034508	ZRB934FW2	CBFF340	Zanussi
925034509	ZRB634FX2	CBFF340	
925034510	ZRB934FX2	CBFF340	Zanussi
925034511	FRB934NW2	CBFF340	Faure
925034512	ZRB934NW2	CBFF340	Zanussi
925034513	ZRB934NX2	CBFF340	Electrolux
925034514	S73402CNS1	CBFF340	AEG
925034515	ZRB835NX2	CBFF340	
925034516	ZRB935NX2	CBFF340	Zanussi
925034517	ZRB934FX2	CBFF340	Zanussi

PNC	MODEL	TYPE	BRAND
925034518	RJP3342	CBFF340	Rosenlew
925034519	S83200CMM1	CBSD340	
925034520	S83200CMW1	CBSD340	AEG
925034521	S83200CMB2	CBSD340	AEG Electrolux
925034522	S83200CMB1	CBSD340	
925034523	S63200CMW1	CBSD340	AEG
925034524	S73400CTW1	CBFF340	AEG
925034525	S73400CTS1	CBFF340	AEG
925034526	S73400CNW1	CBFF340	AEG
925034527	S73400CNS1	CBFF340	AEG
925034528	QRT4261X	CBSD340	
925034529	QRT4261W	CBSD340	
925034530	QRT4261K	CBSD340	
925034531	QRT4221W	CBFF340	Husqvarna Electrolux
925034532	ZRB734NW	CBFF340	
925034533	PRB934NW2	CBFF340	Zoppas
925034534	PRB934NX2	CBFF340	Zoppas
925034535	SB323N15	CBFF340	Electrolux
925034536	S73401CNS1	CBFF340	AEG
925034537	ZRB934NW2	CBFF340	Zanussi
925034538	ZRB934NX2	CBFF340	Zanussi
925034539	ZRB935NW2	CBFF340	Zanussi
925034540	ZRB935NX2	CBFF340	Zanussi
925034541	EN3450COW	CBFF340	Electrolux
925034542	EN3450COX	CBFF340	Electrolux
925034543	S83200CMM1	CBSD340	
925034544	S83200CMW1	CBSD340	
925034545	S73400CTW1	CBFF340	AEG
925034546	S73400CTS1	CBFF340	AEG
925034547	EN3487AOY	CBSD340	Electrolux
925034548	EN3487AOO	CBSD340	Electrolux
925034549	EN3487AOH	CBSD340	Electrolux
925034550	EN3487AOJ	CBSD340	Electrolux
925034551	EN3481AOW	CBSD340	Electrolux
925034552	EN3481AOX	CBSD340	Electrolux
925034553	EN3486AOY	CBSD340	
925034554	EN3486AOH	CBSD340	
925034555	RN3450COW	CBFF340	Rex-Electrolux
925034556	RN3450COX	CBFF340	Rex-Electrolux
925034557	ZRB934FWD2	CBFF340	Zanussi
925034558	ZRB934FXD2	CBFF340	
925034559	ZRB934FX2C	CBFF340	
925034560	S73401CTW1	CBFF340	AEG
925034561	S73401CNW1	CBFF340	AEG
925034562	EN3487AOW	CBSD340	Electrolux
925034563	ZRB934EW	CBFF340	Zanussi
925034564	ZRB934NW2S	CBFF340	Zanussi
925034565	ZRB935NX2S	CBFF340	Zanussi
925034566	EN3451ACX	CBFF340	Electrolux
925034567	S8320PCMM1	CBSD340	

PNC	MODEL	TYPE	BRAND
925034568	S83200CMX2	CBSD340	AEG
925034569	S83200CMW2	CBSD340	AEG
925034570	S73200CMW2	CBSD340	
925034571	QRT4240W	CBFF340	
925034572	S83400CTX0	CBFF340	AEG
925034573	ZRB934FX2	CBFF340	Zanussi
925034574	EN3481ASX	CBSD340	Electrolux
925034575	S73401CNX0	CBFF340	AEG
925034576	S73409CNS2	CBFF340	AEG
925034577	S73409CNW2	CBFF340	AEG
925034578	EN3451AOW	CBFF340	Electrolux
925034579	EN3451AOX	CBFF340	Electrolux
925034580	EN3450AOW	CBFF340	
925034581	EN3450AOX	CBFF340	
925034582	S8900CTW0	CBFF340	
925034583	S8900CTX0	CBFF340	
925034584	JLFFW1817	CBFF340	John Lewis
925034585	JLSS1819	CBFF340	John Lewis
925034586	S73402CNS2	CBFF340	AEG
925034587	S73402CNW2	CBFF340	AEG
925034588	EN3440COW	CBFF340	Electrolux
925034589	EN3440COX	CBFF340	Electrolux
925034590	EN3433AOW	CBFF340	
925034591	EN3433AOX	CBFF340	
925034592	RN3451ADW	CBFF340	Rex-Electrolux
925034593	RN3451ADX	CBFF340	Rex-Electrolux
925034594	EN53453AX	CBFF340	Electrolux
925034595	EN53453AW	CBFF340	Electrolux
925034596	S57340CNX0	CBFF340	AEG
925034597	S58320CMM0	CBSD340	AEG
925034598	SUPERBT	CBFF340	IKEA
925034599	SUPERBT	CBFF340	IKEA
925034600	SUPERBT	CBFF340	IKEA
925034601	EN3449AFW	CBFF340	Electrolux
925034602	EN3449AFX	CBFF340	Electrolux
925034603	EN3489AFX	CBSD340	Electrolux
925034604	EN3489AFW	CBSD340	Electrolux
925034605	SJBM321EWH	CBFF340	
925034606	SJBM321ESL	CBFF340	
925034607	SJBM322EWH	CBFF340	
925034608	SJBM322ESL	CBFF340	
925034609	SJBP321EWH	CBFF340	
925034610	SJBP321UWH	CBFF340	
925034611	SJBP321EST	CBFF340	
925034612	SJBP321UST	CBFF340	
925034613	SJBM321UWH	CBFF340	
925034614	SJBM321USL	CBFF340	
925034615	S83200CMM2	CBSD340	AEG
925034616	EN3488AOW	CBSD340	Electrolux
925034617	EN3455COW	CBFF340	Electrolux

PNC	MODEL	TYPE	BRAND
925034618	S73402CNW1	CBFF340	AEG
925041400	A42000GNW0	FzFF200	AEG Electrolux
925041401	A52010GNW0	FzFF200	AEG Electrolux
925041402	A72010GNW0	FzFF200	AEG Electrolux
925041403	A72010GNX0	FzFF200	AEG
925041403	A72010GNX0	FzFF200	AEG Electrolux
925041404	EUF20230W	FzFF200	Electrolux
925041405	EUF20430W	FzFF200	Electrolux
925041406	EUF20430X	FzFF200	Electrolux
925041407	ZFU420FW	FzFF200	Zanussi
925041411	RUF20430W	FzFF200	Rex-Electrolux
925041412	FFU420FW	FzFF200	Faure
925041413	A72019GNW0	FzFF200	AEG Electrolux
925041414	A72018GNW0	FzFF200	AEG Electrolux
925041415	A72010GNW0	FzFF200	AEG
925041416	JLFZW1606	FzFF200	John Lewis
925041417	KFP20201WE	FzFF200	Zanker
925041418	EUF2040AOW	FzFF200	Electrolux
925041419	181GSA++NF	FzFF200	Satrap
925041420	EUF2042AOW	FzFF200	Electrolux
925041421	RUF2042AOW	FzFF200	Rex-Electrolux
925041422	EUF2042AOX	FzFF200	Electrolux
925041423	SG181N	FzFF200	Electrolux
925041424	ZFU420FW	FzFF200	Zanussi
925041425	AGN1811	FzFF200	AEG
925041426	ZFU420FWC	FzFF200	
925041427	ZFU420FW	FzFF200	Zanussi
925041428	A72010GNX0	FzFF200	AEG
925041429	ZFU20200WA	FzFF200	
925041430	FFU20200WA	FzFF200	Faure
925041431	ZFU20200WA	FzFF200	Zanussi
925041432	ZFU20201WA	FzFF200	
925041433	SG2000N	FzFF200	Electrolux
925041434	ZFU720FW	FzFF200	Zanussi
925052750	EUF2740AOW	FzFF250	
925052751	A72719GNW0	FzFF250	AEG
925052752	EUF2742AOW	FzFF250	Electrolux
925052753	A52708GNW0	FzFF250	AEG
925052756	EUF2744AOW	FzFF250	Electrolux
925052757	EUF2744AOX	FzFF250	Electrolux
925052758	ZFU727FW	FzFF250	Zanussi
925052759	A42700GNW0	FzFF250	AEG
925052760	A52700GNW0	FzFF250	AEG
925052761	A72710GNW0	FzFF250	AEG
925052762	A72710GNX0	FzFF250	AEG
925052763	A82700GNW0	FzFF250	AEG
925052764	A82700GNX0	FzFF250	AEG
925052765	A72710GNW0	FzFF250	AEG
925052766	A72710GNX0	FzFF250	AEG
925052769	ZFU727FW	FzFF250	Zanussi

PNC	MODEL	TYPE	BRAND
925052770	JLFZW1816	FzFF250	John Lewis
925052775	SG231N	FzFF250	Electrolux
925052776	EUF2745AOW	FzFF250	Electrolux
925052777	EUF2745AOX	FzFF250	Electrolux
925052778	RUF2742AOW	FzFF250	Rex-Electrolux
925052779	RUF2742AOX	FzFF250	Rex-Electrolux
925052780	FFU727FW	FzFF250	Faure
925052781	AGN2291	FzFF250	AEG
925052782	A62710GNX0	FzFF250	
925052783	A62710GNW0	FzFF250	AEG
925052784	229GSA++NF	FzFF250	Satrap
925052785	ZFU25200WA	FzFF250	Zanussi
925052786	FFU25200WA	FzFF250	Faure
925052787	ZFU25200WA	FzFF250	Zanussi
925052788	FG2650	FzFF250	Elektro Helios
925052789	ZFU25201WA	FzFF250	
925052790	EUF2742AOW	FzFF250	Electrolux
925052791	EUF2742AOX	FzFF250	Electrolux
925052793	A72700GNX0	FzFF250	AEG
925052794	FG2650	FzFF250	Elektro Helios
925052795	FG2645	FzFF250	Elektro Helios
925052796	FG2650X	FzFF250	Elektro Helios
925052797	FROSTFRI	FzFF250	IKEA
925052798	ZFU25200XA	FzFF250	Zanussi
925052799	RPP2440	FzFF250	Rosenlew
925052800	EUF2748AOW	FzFF250	Electrolux
925052801	FG2651X	FzFF250	Elektro Helios
925052802	FG2651	FzFF250	Elektro Helios
925052803	ZFU25200XA	FzFF250	Zanussi
925052804	ZFU25200WA	FzFF250	Zanussi
925052805	A42700GNX0	FzFF250	AEG
925052806	A42700GNW0	FzFF250	AEG
925052807	A52700GNW1	FzFF250	
925052808	A62710GNW1	FzFF250	
925052809	EUF2743AOW	FzFF250	
925052810	EUF2743AOX	FzFF250	
925052811	ZFU25200XA	FzFF250	Zanussi

REVISION:

Revision	Date	Description	Author	Approved by - on
00	10/2013	Document Creation	Krzysztof Łazowski	Sándor Kórik – 21.10.2013