

WINE CELLAR SWITCHES OFF AND DOES NOT SWITCH ON.

DESCRIPTION:

After switching off the Inspiration Range Wine cellar appliances it is not possible to turn it back on. Unplugging and then plugging in the appliance does not solve this problem.

Problem is caused by software error. After turning off of the appliance using touch screen on/off button it is not possible to turn the appliance on. After restart of appliance , it goes into service mode and it is not possible to switch it on.

SOLUTION:

To solve the problem it is necessary to replace display board with new one.

SPARE PART NUMBER:

Old spare part code	New spare part code	Description
2425797095	2425797137	Display, PCB

MODELS INVOLVED:

PNC	MODEL	BRAND	NOTE
92380201700	ERW3313AOX	Electrolux	All since production start
92380201701	ERW3313AOX	Electrolux	All since production start
92380201702	ERW3313AOX	Electrolux	All since production start
92380201801	ERW3313BOX	Electrolux	All since production start
92380201802	ERW3313BOX	Electrolux	All since production start
92380202101	ERW3313AOX	Electrolux	All since production start
92380202102	ERW3313AOX	Electrolux	All since production start
92380202500	WI3300DXV	Rex-Electrolux	All since production start
92380202501	WI3300DXV	Rex-Electrolux	All since production start
92380202600	WI3300DXVS	Rex-Electrolux	All since production start
92380202901	ERW3313AOX	Electrolux	All since production start

REVISION:

Revision	Date	Description	Author	Approved by - on
00	12/2013	Document Creation	Krzysztof Łazowski	Stefania Piccin – 07.01.2014