



Hob lid turns yellow after prolonged operation

DESCRIPTION:


Hot air coming out of the ventilation channel of the free standing cookers may cause discoloration of the hob lid. As a result, a yellow area starts appearing on the part. Please conduct below operation only if problem arises.

SOLUTION:

It is necessary to redirect the airflow away from the lid to eliminate this effect. To do that some additional parts are needed (provided in a service kit along with a new lid).

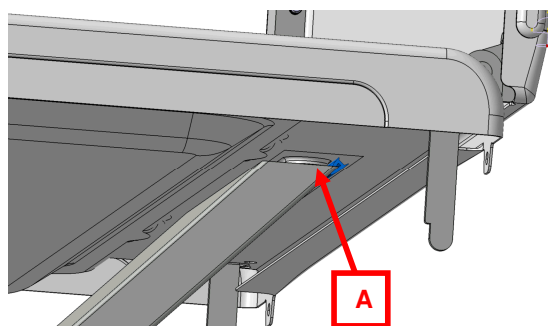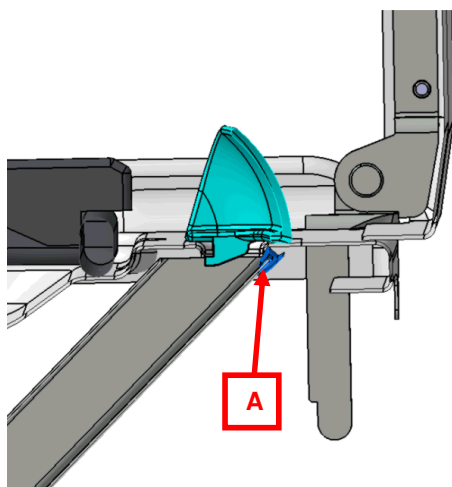

1. Place the gasket (A) under the hob, on rear top edge of the chimney (spare part number 140001310022).

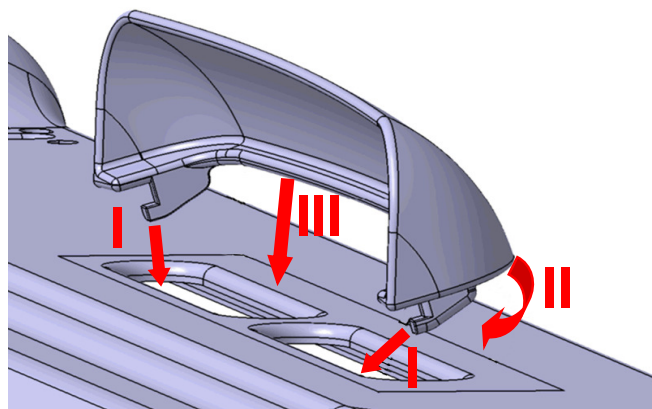

2. Place the hooks of the exhaust deflector (spare part 8084372013) under the front edge of the exhaust holes (step I).
3. Lock the part by pushing the back edge of the deflector downwards (steps II and III).
4. Replace the hob lid.

SPARE PART NUMBER:

There are three spare part kits defined for this service bulletin, each for a specific group of appliances.

Kit number	Exhaust deflector	Gasket	Hob lid	Comment
4055275053	8084372013	140001310022	3422233142	For 50x50 appliances
4055275061	8084372013	140001310022	3422348205	For 50x60 appliances
4055275079	8084372013	140001310022	3421848023	For 60x60 appliances

MODELS INVOLVED:

PNC	MODEL	BRAND	COUNTRIES	Kit number
943003161	FCG665GW	Faure	FR	4055275079
943003162	PCG665GW	Zoppas	IT	4055275079
943003209	FCG666GW	Faure	FR	4055275079
943003222	ZCG664GW	Zanussi	DZ	4055275079
943003225	ZCG61211WA	Zanussi	RO	4055275079
943003226	ZCG61201WA	Zanussi	RO	4055275079
943003228	ZCG61001WA	Zanussi	RO	4055275079
943003262	ZCG961011W	Zanussi	RU;UA;	4055275079
943003264	ZCG961021W	Zanussi	RU;UA;	4055275079
943003266	ZCG961211W	Zanussi	RU;UA;	4055275079
943003282	EKG961101W	Electrolux	RU;UA;KZ	4055275079
943003289	ZCG61031WA	Zanussi	LUX, BEL	4055275079
943003295	ZCG61211WA	Zanussi	ES, POR	4055275079
943003306	FCG61201WA	Faure	FR	4055275079
943003307	FCG61001WA	Faure	FR	4055275079
943003326	PCG61201WA	Zoppas	IT	4055275079
943004208	FCG661MWC	Faure	FR	4055275079
943004226	FCM660MWC	Faure	FR	4055275079
943004317	FCM660NW	Faure	FR	4055275079
943004349	PCG660NW	Zoppas	IT	4055275079
943004376	FCM661MW	Faure	FR	4055275079
943004444	ZCM64001WA	Zanussi	HR;SLO;BG;MK;OSM;LV;LT	4055275079
943004453	FCM662MW	Faure	FR	4055275079
943004454	FCM663MW	Faure	FR	4055275079
943004455	FCM661NWC	Faure	FR	4055275079
943004489	ZCM65301WA	Zanussi	GR	4055275079
943004496	EKM60300OW	Electrolux	FR	4055275079
943004567	FCM6400CWA	Faure	FR	4055275079
943004569	FCK6520CWA	Faure	FR	4055275079
943004571	FCM65201WA	Faure	FR	4055275079
943004572	FCM65301WA	Faure	FR	4055275079
943004573	FCM6530CWA	Faure	FR	4055275079
943004609	PCK64201WA	Zoppas	IT	4055275079
943003105	PCG550GW	Zoppas	IT	4055275053
943003148	RCG57	Curtiss	FR	4055275053

PNC	MODEL	BRAND	COUNTRIES	Kit number
943003153	HRCG57	Horn	FR	4055275053
943003210	PCG552GW	Zoppas	IT	4055275053
943003237	ZCG21081WA	Zanussi	RO	4055275053
943003238	ZCG21201WA	Zanussi	RO	4055275053
943003239	ZCG21071WA	Zanussi	RO,SK,EST,LV,LT,BG,OSM, MK	4055275053
943003240	ZCG21061WA	Zanussi	RO	4055275053
943003241	ZCG21051WA	Zanussi	RO	4055275053
943003242	ZCG21041WA	Zanussi	RO	4055275053
943003243	ZCG21031WA	Zanussi	RO	4055275053
943003244	ZCG21021WA	Zanussi	RO	4055275053
943003245	ZCG21011WA	Zanussi	RO;LV;LT;	4055275053
943003246	ZCG21011WA	Zanussi	HU	4055275053
943003247	ZCG21001WA	Zanussi	HU	4055275053
943003248	ZCG21001WA	Zanussi	HR;SLO;RO	4055275053
943003250	ZCG921091W	Zanussi	RU;UA;	4055275053
943003251	ZCG9210A1W	Zanussi	RU;UA;	4055275053
943003252	ZCG9210B1W	Zanussi	RU;UA;	4055275053
943003254	ZCG921081W	Zanussi	RU;UA;	4055275053
943003255	ZCG9210C1W	Zanussi	RU;UA;KZ	4055275053
943003287	ZCG55CGW	Zanussi	MA	4055275053
943003290	ZCG21081WA	Zanussi	ES, POR	4055275053
943003291	ZCG210E1WA	Zanussi	ES, POR	4055275053
943003323	PCG21011WA	Zoppas	IT	4055275053
943003325	PCG21001WA	Zoppas	IT	4055275053
943004186	PCG550NW	Zoppas	IT	4055275053
943004443	ZCK24201WA	Zanussi	HU	4055275053
943004448	ZCM24001WA	Zanussi	HR;SLO;BG;MK;OSM;LV;LT	4055275053
943004466	ZCK24201WA	Zanussi	EST,LV,LT	4055275053
943004490	ZCK924201W	Zanussi	RU;UA;KZ	4055275053
943004607	PCK24001WA	Zoppas	IT	4055275053
943003019	FCG560GW	Faure	FR	4055275061
943003021	FCG561GWC	Faure	FR	4055275061
943003022	FCG562GWC	Faure	FR	4055275061
943003087	FCG565GW	Faure	FR	4055275061
943003128	ZCG560GW	Zanussi	CH	4055275061
943003171	EKG51100OW	Electrolux	HU;GR	4055275061
943003173	EKG51101OW	Electrolux	HU	4055275061
943003175	EKG51101OW	Electrolux	RO	4055275061
943003176	EKG51102OW	Electrolux	HU	4055275061
943003177	EKG51102OW	Electrolux	RO;EST;LV;LT	4055275061
943003179	EKG51103OW	Electrolux	HU	4055275061
943003180	EKG51103OW	Electrolux	PL	4055275061
943003183	FGH50K3101	Electrolux	CH	4055275061

PNC	MODEL	BRAND	COUNTRIES	Kit number
943003191	EKG51104OW	Electrolux	RO;BG;OSM;MK	4055275061
943003197	EKG54101OW	Electrolux	HU	4055275061
943003206	EKG51103OW	Electrolux	EST;LV;LT;SK	4055275061
943003230	ZCG51201WA	Zanussi	RO	4055275061
943003232	ZCG51001WA	Zanussi	HU	4055275061
943003233	ZCG51011WA	Zanussi	HU	4055275061
943003257	ZCG951011W	Zanussi	RU;UA;KZ	4055275061
943003259	ZCG951001W	Zanussi	RU;UA;KZ	4055275061
943003260	ZCG951201W	Zanussi	RU;UA;KZ	4055275061
943003268	EKG951100W	Electrolux	RU;UA;	4055275061
943003269	EKG951101W	Electrolux	RU;UA;KZ	4055275061
943003270	EKG951102W	Electrolux	RU;UA;KZ	4055275061
943003271	EKG951103W	Electrolux	RU;UA;KZ	4055275061
943003273	EKG951104W	Electrolux	RU;UA;KZ	4055275061
943003275	EKG951300W	Electrolux	RU;UA;KZ	4055275061
943003277	EKG954100W	Electrolux	RU;UA;KZ	4055275061
943003292	ZCG51001WA	Zanussi	ES, POR	4055275061
943003302	FCG51001WA	Faure	FR	4055275061
943003304	FCG5100CWA	Faure	FR	4055275061
943003305	FCG5200CWA	Faure	FR	4055275061
943003308	EKG951105W	Electrolux	RU;UA;CY	4055275061
943003309	EKG951106W	Electrolux	RU;UA;KZ	4055275061
943003310	EKG951107W	Electrolux	RU;UA;KZ	4055275061
943003311	EKG951108W	Electrolux	RU;UA;KZ	4055275061
943003313	EKG951109W	Electrolux	RU;UA;KZ	4055275061
943003315	EKG951302W	Electrolux	RU;UA;KZ	4055275061
943003317	EKG954101W	Electrolux	RU;UA;KZ	4055275061
943003320	ZCG51011WA	Zanussi	CH	4055275061
943003321	ZCG951021W	Zanussi	RU	4055275061
943003333	EKG51150OW	Electrolux	HU;GR	4055275061
943003334	EKG51151OW	Electrolux	HU	4055275061
943003335	EKG51151OW	Electrolux	RO	4055275061
943003336	EKG51152OW	Electrolux	HU	4055275061
943003337	EKG51152OW	Electrolux	RO;EST;LV;LT	4055275061
943003338	EKG51153OW	Electrolux	HU	4055275061
943003339	EKG51153OW	Electrolux	PL	4055275061
943003340	EKG51153OW	Electrolux	EST;LV;LT;SK	4055275061
943003343	EKG51154OW	Electrolux	RO;BG;OSM;MK	4055275061
943003347	EKG54151OW	Electrolux	HU	4055275061
943004037	FCM560NWC	Faure	FR	4055275061
943004139	20045FA-wn	AEG	DE	4055275061
943004140	40045FA-wn	AEG	DE	4055275061
943004223	HRCE57	Horn	FR	4055275061

PNC	MODEL	BRAND	COUNTRIES	Kit number
943004244	EKK51300OW	Electrolux	CZ;SK;EST;LV;LT;	4055275061
943004245	EKK51300OW	Electrolux	HU	4055275061
943004253	EKK52500OW	Electrolux	CZ;SK;RO;EST;LV;LT;GR	4055275061
943004254	EKK52500OW	Electrolux	HU	4055275061
943004261	EKK54500OW	Electrolux	CZ;SK;EST;LV;LT;	4055275061
943004262	EKK54500OW	Electrolux	PL	4055275061
943004296	FEH50P2102	Electrolux	CH	4055275061
943004304	EKK54503OW	Electrolux	CZ;SK;LV;LT;	4055275061
943004305	EKK54503OW	Electrolux	HU	4055275061
943004306	EKK54503OW	Electrolux	PL	4055275061
943004437	ZCE55001WA	Zanussi	BG;OSM;MK;GR;CZ;EST;LV	4055275061
943004440	ZCK55201WA	Zanussi	HU	4055275061
943004441	ZCK55201WA	Zanussi	RO	4055275061
943004445	ZCM55001WA	Zanussi	RO;BG;OSM;MK	4055275061
943004446	ZCM54001WA	Zanussi	HR;BG;OSM;MK	4055275061
943004461	ZCK54001WA	Zanussi	CZ;SK;EST;LV;LT;	4055275061
943004463	ZCK55201WA	Zanussi	PL	4055275061
943004470	ZCK55211WA	Zanussi	CZ;SK;LV;LT;	4055275061
943004487	ZCK54001WA	Zanussi	AU	4055275061
943004492	ZCK955201W	Zanussi	RU;UA;KZ	4055275061
943004493	ZCK954001W	Zanussi	RU;UA;KZ	4055275061
943004503	ZCK955301W	Zanussi	RU	4055275061
943004505	ZCK955311W	Zanussi	RU	4055275061
943004518	ZCE955001W	Zanussi	RU;UA;	4055275061
943004529	EKK951300W	Electrolux	RU;UA;KZ	4055275061
943004531	EKK952500W	Electrolux	RU;UA;KZ	4055275061
943004533	EKK954500W	Electrolux	RU;UA;KZ	4055275061
943004536	EKK954503W	Electrolux	RU;UA;KZ	4055275061
943004543	ZCK55301WA	Zanussi	HU	4055275061
943004554	FCM5400CWA	Faure	FR	4055275061
943004592	EKK951301W	Electrolux	RU;UA;KZ	4055275061
943004594	EKK952501W	Electrolux	RU;UA;KZ	4055275061
943004596	EKK954504W	Electrolux	RU;UA;KZ	4055275061
943004599	EKK954507W	Electrolux	RU;UA;KZ	4055275061
943004605	ZCK955221W	Zanussi	RU	4055275061
943004653	20095FA-wn	AEG	DE	4055275061
943004655	40095FA-wn	AEG	DE	4055275061
943004695	EKK51350OW	Electrolux	CZ;SK;EST;LV;LT;	4055275061
943004696	EKK51350OW	Electrolux	HU	4055275061
943004699	EKK52550OW	Electrolux	CZ;SK;RO;EST;LV;LT;GR	4055275061
943004700	EKK52550OW	Electrolux	HU	4055275061
943004703	EKK54550OW	Electrolux	CZ;SK;EST;LV;LT;	4055275061
943004712	EKK54553OW	Electrolux	CZ;SK;LV;LT;	4055275061

PNC	MODEL	BRAND	COUNTRIES	Kit number
943004713	EKK54553OW	Electrolux	HU	4055275061
943004714	EKK54553OW	Electrolux	PL	4055275061
943004719	EKS51350OW	Electrolux	GR	4055275061
943003119	ZCG55KGWB	Zanussi	ES, POR	4055275053
943003016	ZCG565GW	Zanussi	RO;GR;CY	4055275061
943003156	EKG61100OW	Electrolux	FR	4055275061
943003200	EKG61102OW	Electrolux	RO	4055275061
943003202	EKG61102OW	Electrolux	FR	4055275061
943003205	EKG60100OW	Electrolux	LV;LT	4055275061
943003218	EKG61102OW	Electrolux	DZ	4055275061
943003249	ZCG51001WA	Zanussi	PL	4055275061
943003279	EKG960100W	Electrolux	RU;UA;KZ	4055275061
943003280	EKG961100W	Electrolux	RU;UA;KZ	4055275061
943003284	EKG961102W	Electrolux	RU;UA;KZ	4055275061
943003288	ZCG210D1WA	Zanussi	LUX, BEL	4055275053
943003297	EKG61103OW	Electrolux	MA	4055275061
943004462	ZCK54001WA	Zanussi	PL	4055275061
943004494	ZCK955211W	Zanussi	RU;UA;	4055275061

REVISION:

Revision	Date	Description	Author	Approved by - on
00	02/2014	Document Creation	Marcin Kobiałka	Stefan Tripon 2014-02-25