## Ergorapido HUV disassembling process




Push the knobs on both sides of the dust compartment and pull it out:


Remove 5 screws from the bottom of the hand unit:




To pull of the pcb remove 2 screws:

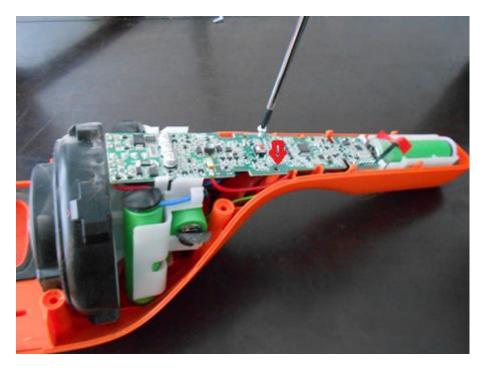

The wires must be connected this way:

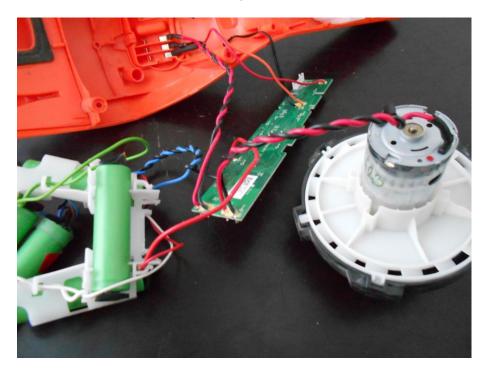


 




Remove the screws from the back of the base and separate the base part and the top part of the body:



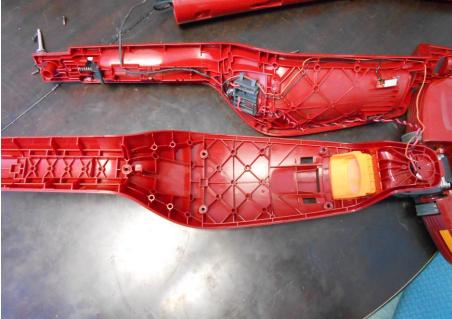

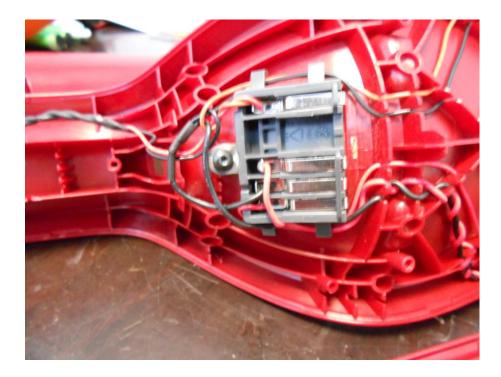

To disconnect the wires push the locking ring and pull of the wires:



To separate the handle remove the screws:

