

CASTOR DISASSEMBLING PROCESS



2012-09-07

GACSAL LÁSZLÓ


First of all pull up the handle and throw up cyclone.



Remove the side panels



Remove the screws

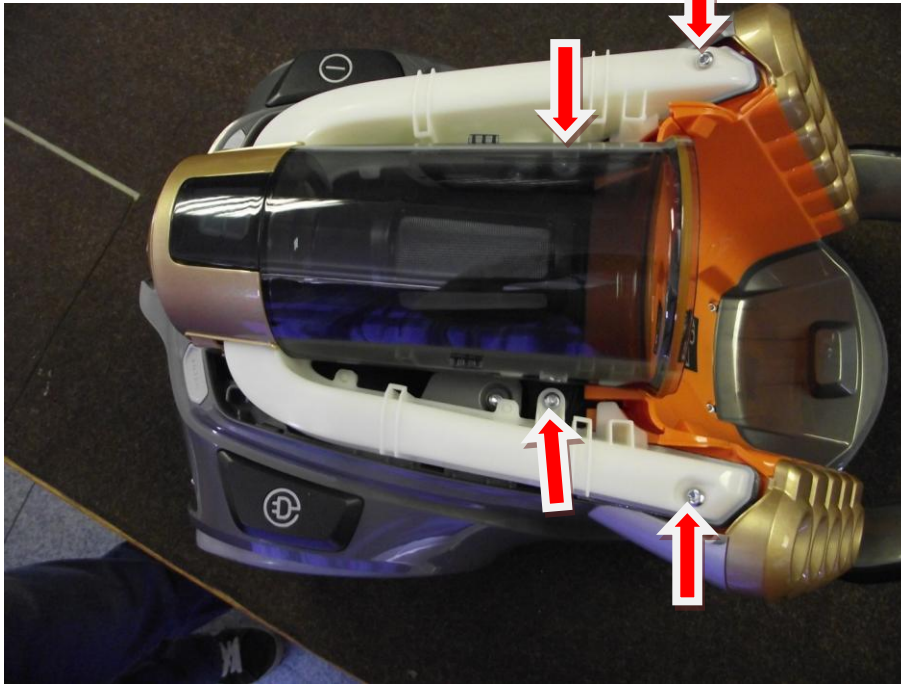


Remove screws left and ride side




Remove screw and use the screw driver to remove the display support




Disconnect the wires from the panel

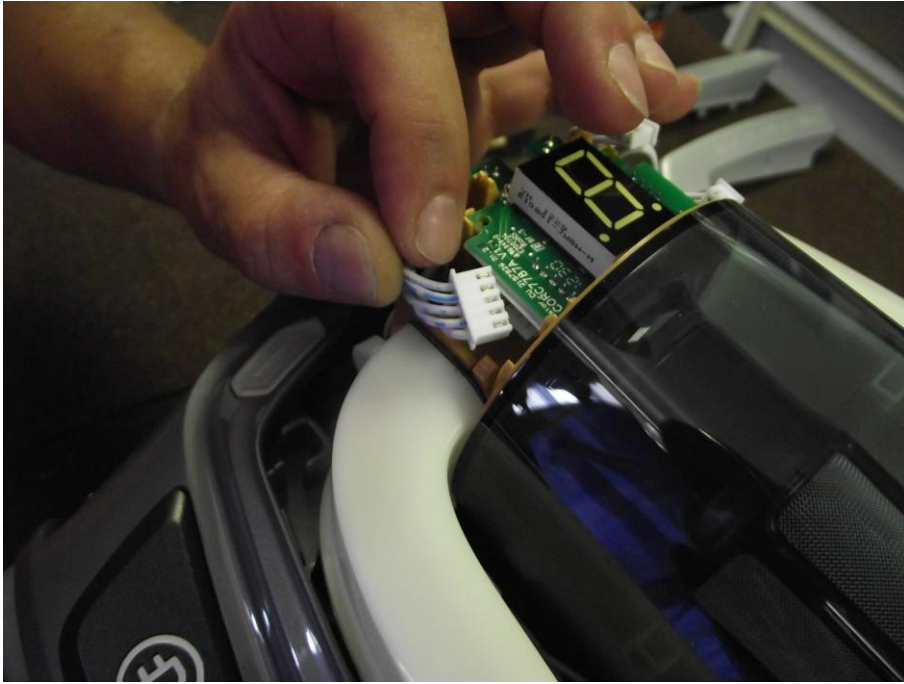


After you can lift the main cyclone by hand

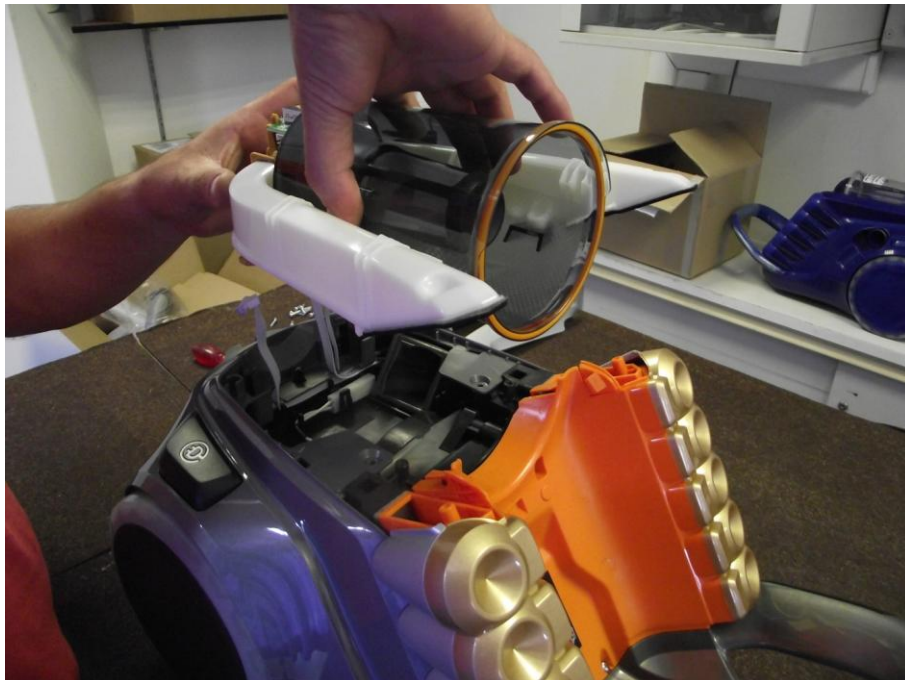

Pry open the side panels with screw driver

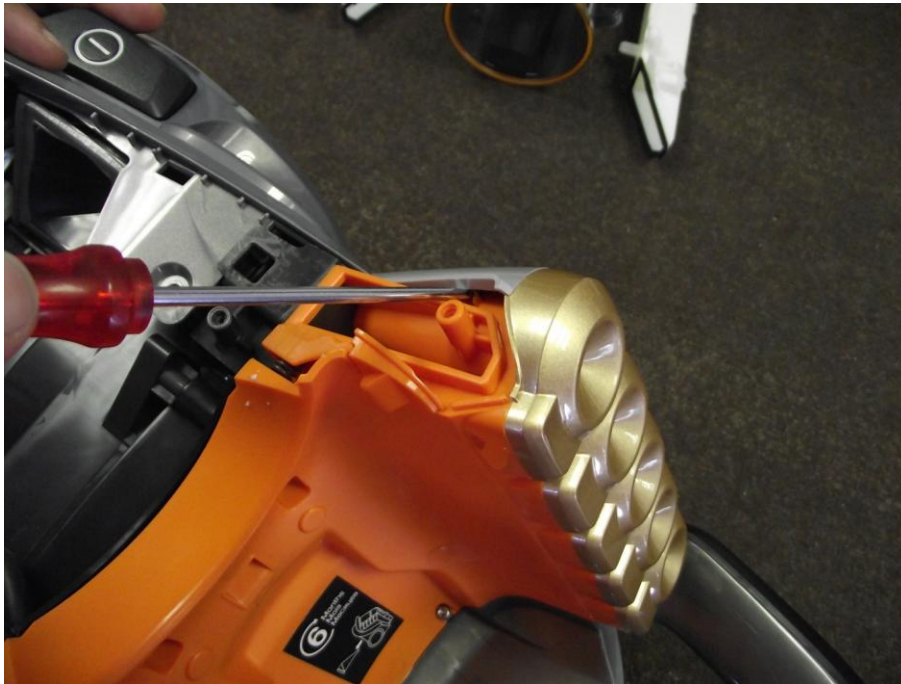

Remove the screws

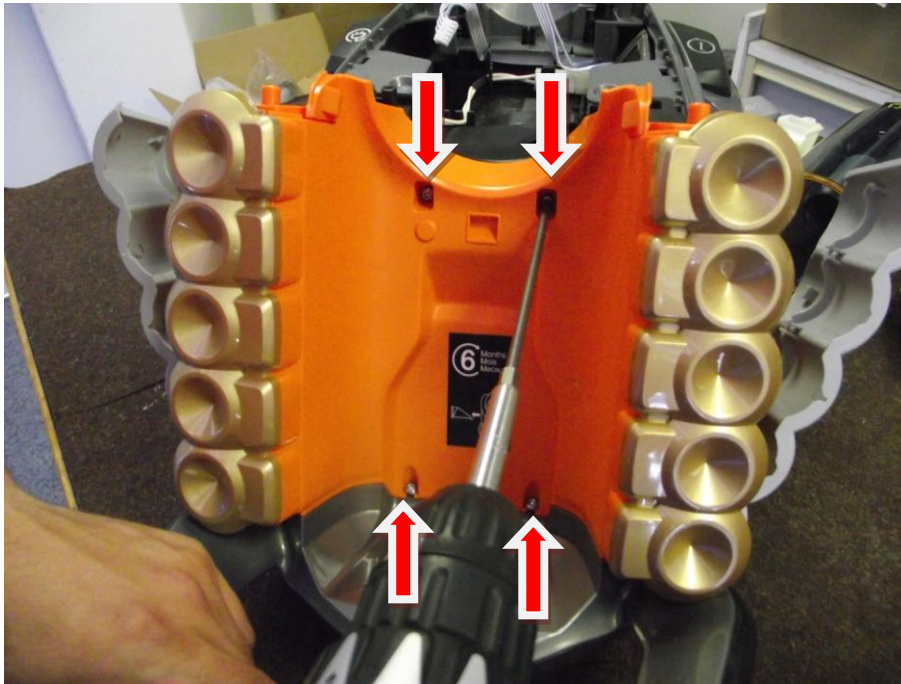


Pull up the cyclone body




Press the two buttons



Take out the dust bin

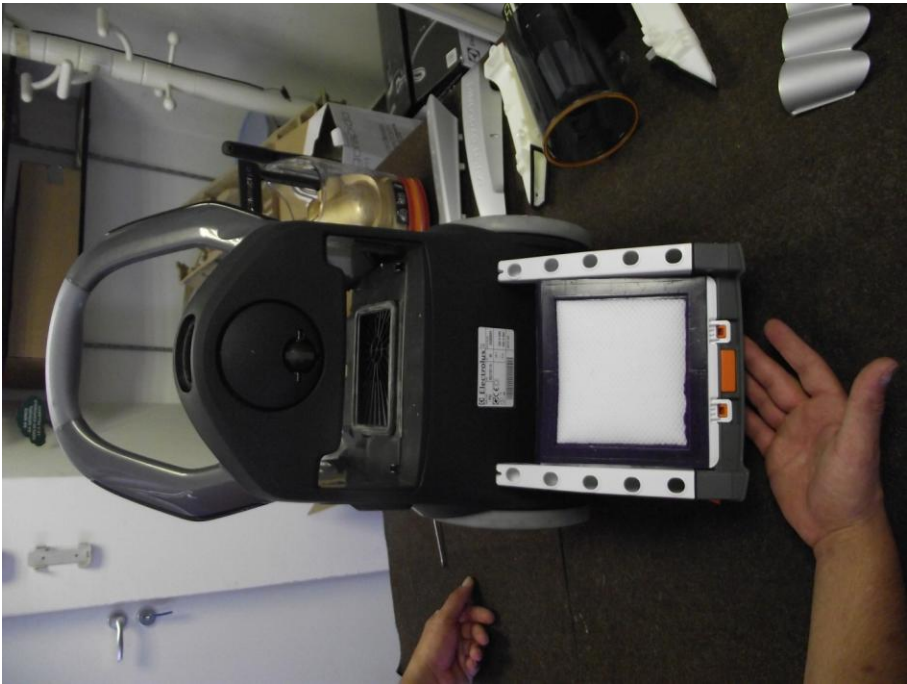

Push the buttons and take out the grill filter

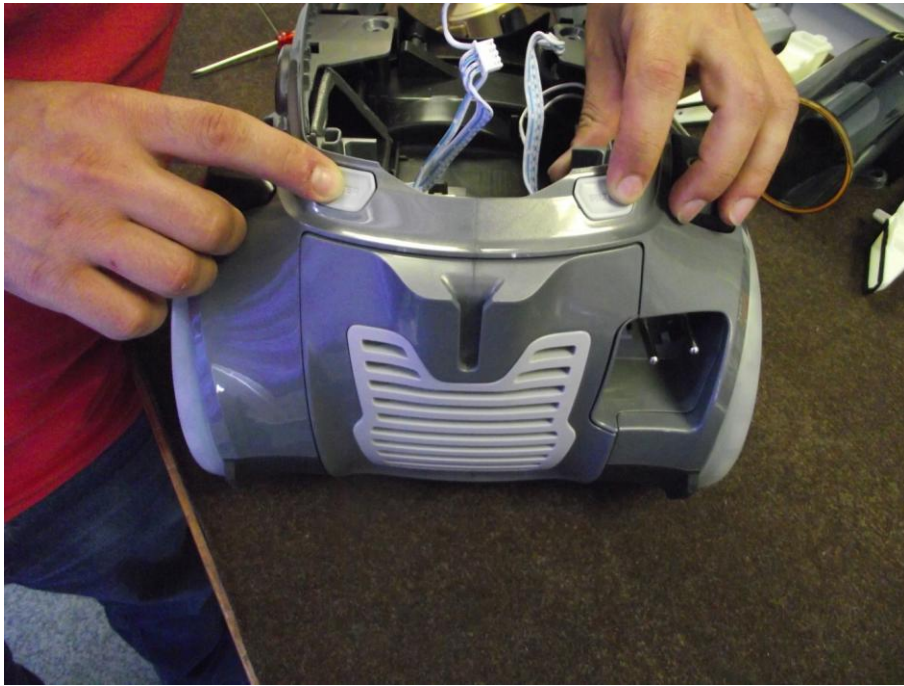

Pry open the top cover with screw driver




and pick up it.



Remove the screws

1.

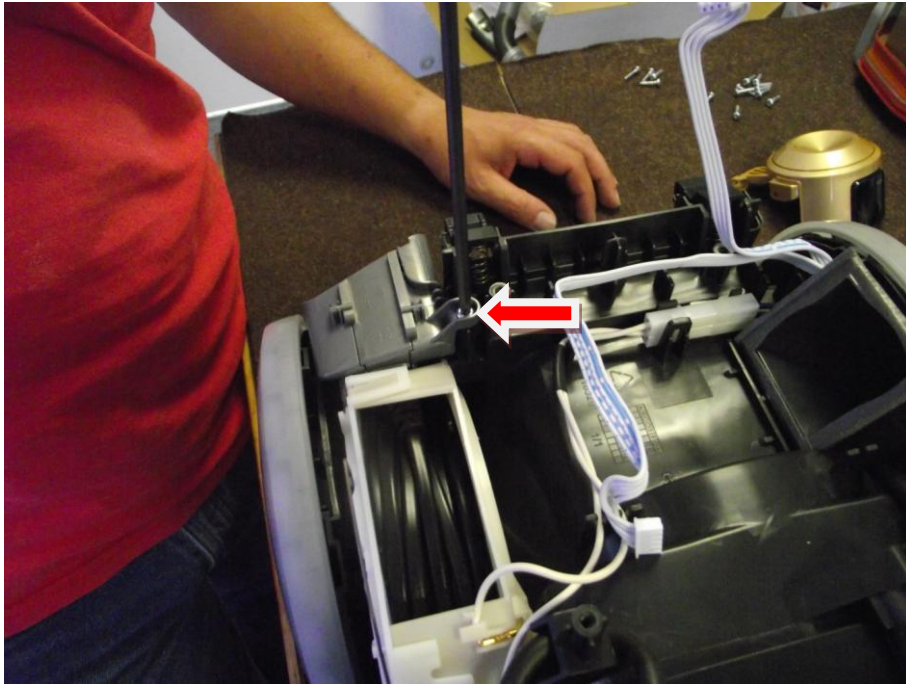

2.




3.




4.




5.

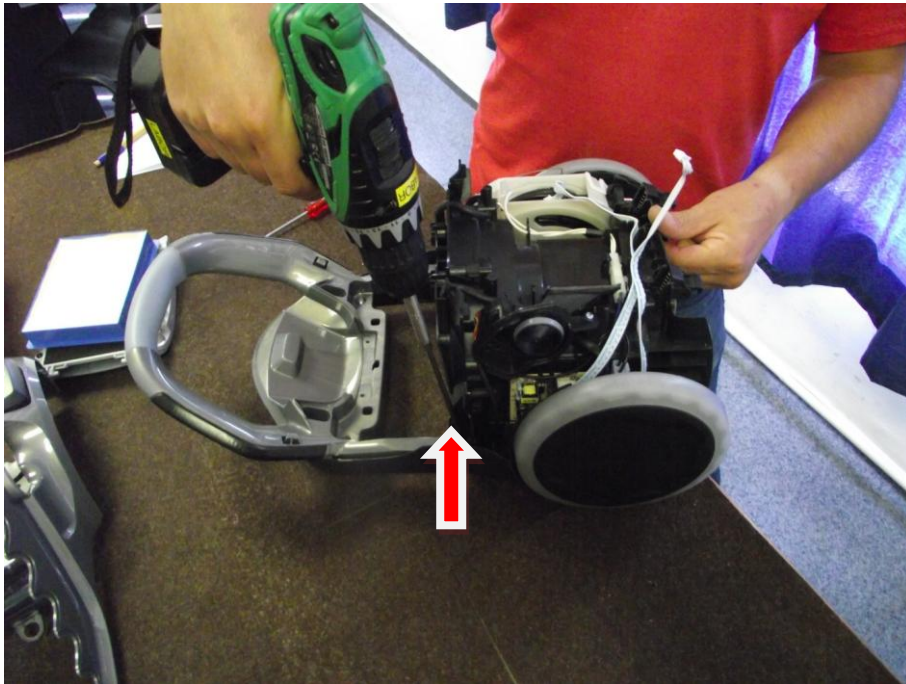

After it, pick up the motor housing

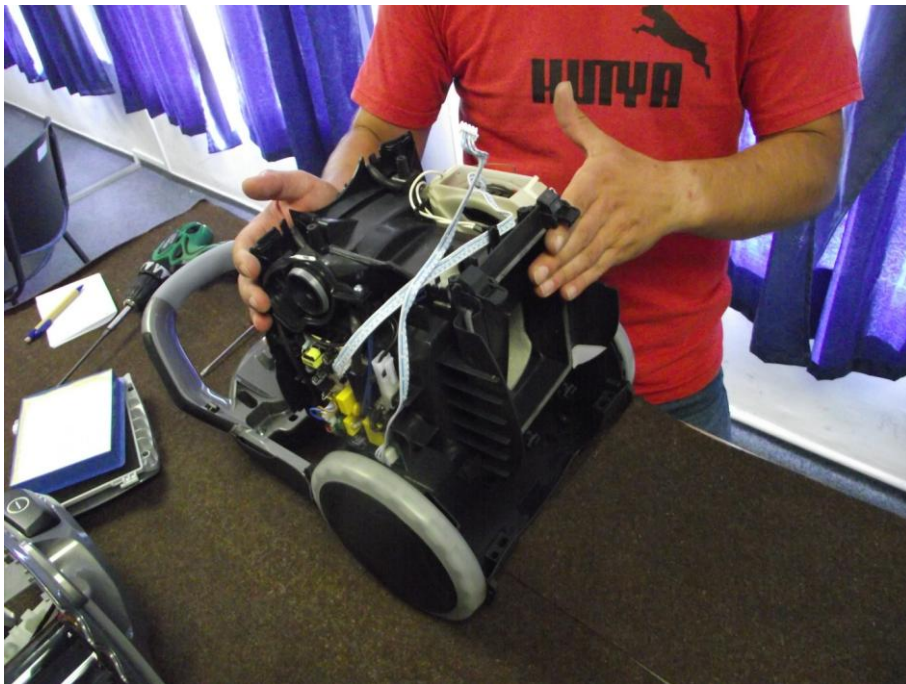

Remove the screws

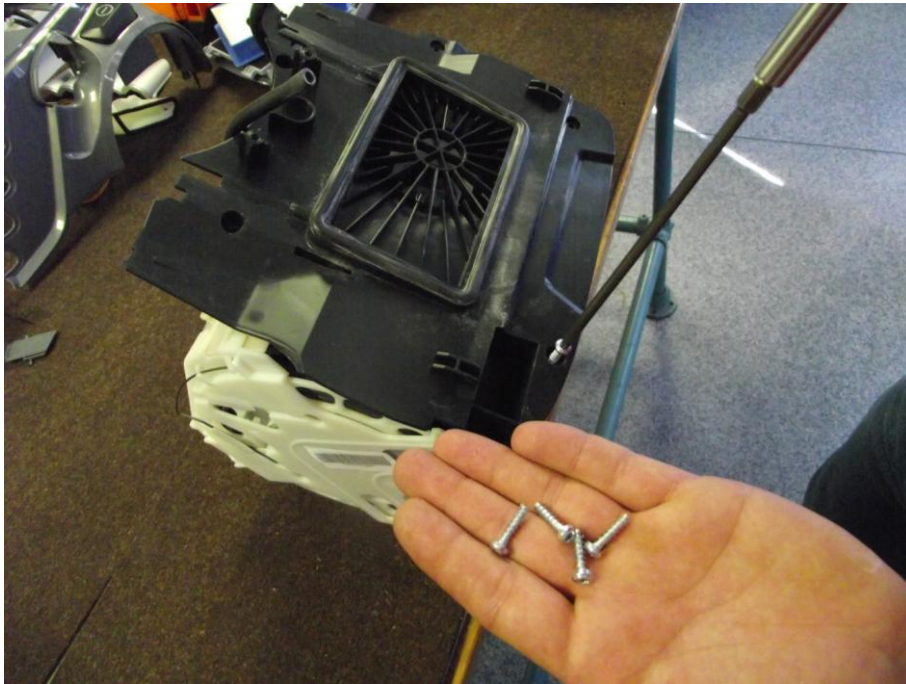

Lift the cover

