 
 


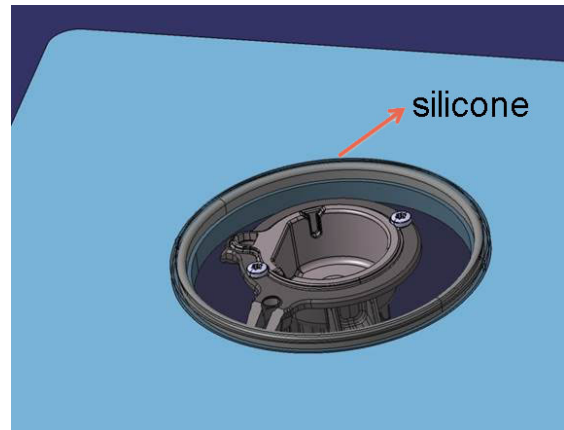

Exchange of covers glued on hob with silicone by the new ones

DESCRIPTION:

In new 'Gas-on-glass' hobs, burner covers are glued with silicone to hob glass. In order to mount new ones, it is required to additionally order gaskets according to spare part list to replace silicone.

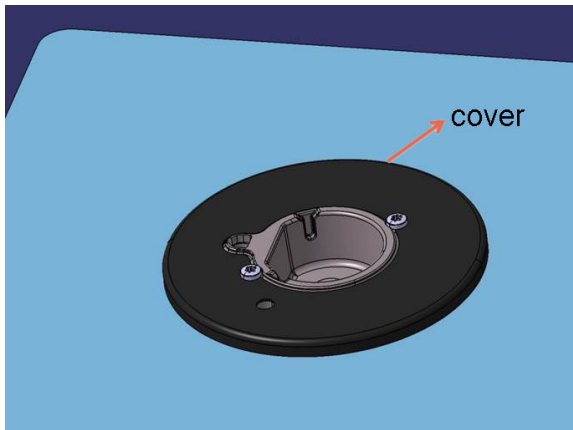

SOLUTION:

To mount new covers follow instructions below.



1. Unscrew screws holding old cover to hob



2. Remove the old cover using a tool with rounded edge not to scratch the glass surface



3. Remove remaining silicone from glass surface



4. Clean glass surface from silicone residue

 


5. Replace the old cover by the new one using gasket according to spare part list for proper type of burner



6. Mount cover using the same screws and fix it tightly

The whole process is presented below.

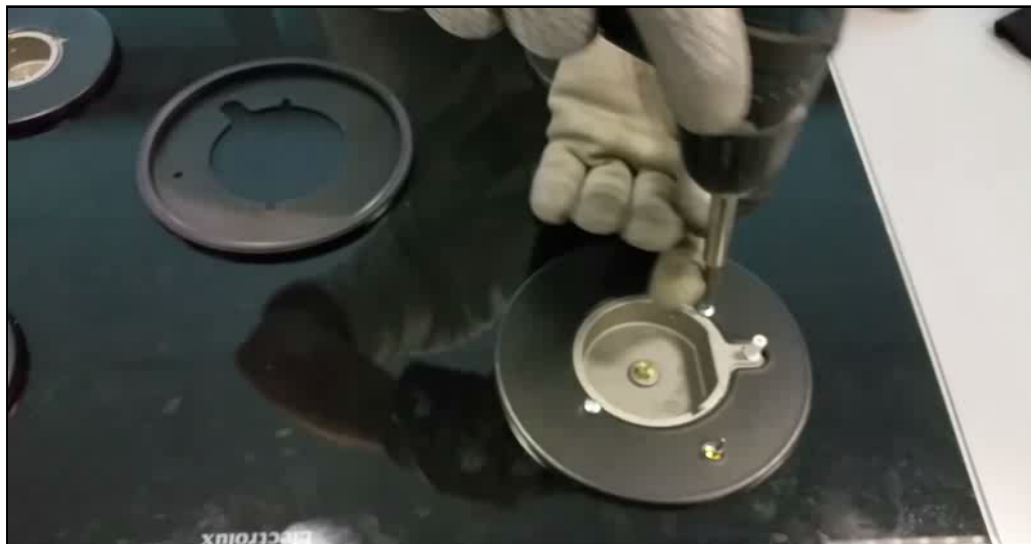

MODELS INVOLVED:

The way of exchanging mentioned covers regard the following PNCs:

PNC	MODEL	BRAND
94962071906	HG694340XB	AEG
94962072106	HG694340XB	AEG
94962073206	HG694340XB	AEG
94962075106	HG694340XB	AEG
94962075206	HG694340XB	AEG
94962075306	HG694340XB	AEG
94962075406	HG694340XB	AEG
94962081706	HG694340NB	AEG
94962084504	ZGO63414BA	Zanussi
94962084604	ZGO63414BA	Zanussi
94962088704	ZGO63414BA	Zanussi
94962088805	ZGO65414BA	Zanussi
94962088905	ZGO65414BA	Zanussi
94962089706	EGT6142NOK	Electrolux
94962090005	EGT6342NOK	Electrolux
94962090305	EGT6342NOX	Electrolux
94962090405	EGT6242NOK	Electrolux
94962092507	EGT6242NOK	Electrolux
94962093404	EGT6142NOX	Electrolux
94962097106	HG694340NB	AEG
94962097805	HG694340NB	AEG
94963034805	HG795440XB	AEG
94963036205	HG795540XB	AEG
94963036305	HG795540XB	AEG
94963036505	HG795440XB	AEG
94963036605	HG795440XB	AEG
94963036705	HG795540XB	AEG
94963036805	HG795540XB	AEG
94963037405	HG795540XB	AEG
94963041506	HG795440NB	AEG
94963043706	ZGO76534BA	Zanussi
94963043806	ZGO76534BA	Zanussi
94963044406	ZGO76534BA	Zanussi
94963047009	EGT7353YOK	Electrolux
94963047107	EGT7353YOK	Electrolux
94963047706	HG795440NB	AEG
94963047805	HG795440XB	AEG
94963047905	HG795440XB	AEG
94963048405	HG795440NB	AEG

PNC	MODEL	BRAND
94964016802	EGT6345YOK	Electrolux
94964017002	EGT96345YK	Electrolux
94964017202	EGT6343LOK	Electrolux
94964017302	EGT6343LOK	Electrolux
94964017402	EGT6343LOK	Electrolux
94964017602	EGT6343LOK	Electrolux
94964017702	EGT6343LOK	Electrolux
94964017802	EGT96343LK	Electrolux
94964018201	EGT6247NOK	Electrolux
94964018302	EGW6343NOK	Electrolux
94964018400	EGT6342YOX	Electrolux
94964018500	EGT96342YX	Electrolux
94964018601	GK58DKG4O	Electrolux
94964019801	EGT96343LW	Electrolux
94964021300	EGT6342YOK	Electrolux
94964021400	EGT6342YOK	Electrolux
94964021500	EGT96342YK	Electrolux
94964021600	EGT6342YOW	Electrolux
94964021700	EGT96342YW	Electrolux
94964021800	EGT6342YOW	Electrolux
94964022001	EGT46142NK	Electrolux
94964022101	EGT6247NOW	Electrolux
94964022201	ZGO568434B	Zanussi
94964024001	EGT6242LOK	Electrolux
94964024101	EGT6242LOW	Electrolux
94964026701	PVN641OV	Electrolux
94964026801	PVB641OV	Electrolux
94964026901	PVNS641OV	Electrolux
94964027001	PVN645UOV	Electrolux
94964027101	PVB645UOV	Electrolux
94964027201	PVNS645UOV	Electrolux
94964028201	EGT6242LOM	Electrolux
94964032200	EGW96343NW	Electrolux
94964032300	EGT96342NW	Electrolux
94964034900	EGT6342NOW	Electrolux
94973819504	EGC3322NOK	Electrolux
94973819604	EGC3322NOK	Electrolux
94973819704	EGC3322NOK	Electrolux
94973819802	EGC3313NOK	Electrolux

PNC	MODEL	BRAND
94963050206	EGT7353YOK	Electrolux
94963054004	EGT97353YK	Electrolux
94963054402	ZGO75524BA	Zanussi
94963054602	FGO75524BA	Faure
94963055902	JLBIGGH756	John Lewis
94963056502	EGT7355NOK	Electrolux
94963056602	EGT7355NOK	Electrolux
94963056802	EGT7355NOK	Electrolux
94963056902	EGT7355NOK	Electrolux
94963057002	EGT97355NK	Electrolux
94963057302	EGW7353NOK	Electrolux
94963057402	EGW7353NOK	Electrolux
94963057502	EGT7353NOK	Electrolux
94963057602	EGT7353NOK	Electrolux
94963057801	EGT7353NOK	Electrolux
94963057901	EGT7353YOX	Electrolux
94963059501	EGT97353YW	Electrolux
94963059701	HG579554XB	AEG
94963061101	EGT7353NOW	Electrolux
94963061801	EGT7252NOK	Electrolux
94963061901	EGT7252NOW	Electrolux
94963062001	EGT7252NOM	Electrolux
94963063801	PVN755UOV	Electrolux
94963063901	PVN750UOV	Electrolux
94963064001	PVB750UOV	Electrolux
94963064101	PVNS750UOV	Electrolux
94964000903	ZGO63414SA	Zanussi
94964001003	ZGO63414BA	Zanussi
94964003503	EGT56342NK	Electrolux
94964003603	EGT56142NK	Electrolux
94964004004	EGT56242NK	Electrolux
94964007803	ZGO63414BA	Zanussi
94964008703	EGT46142NK	Electrolux
94964008803	EGT46242NK	Electrolux
94964008902	EGT46342NK	Electrolux
94964009002	EGT46342NX	Electrolux
94964009103	EGT16142NK	Electrolux
94964009202	EGT16342NX	Electrolux
94964012302	HG694340NB	AEG
94964014002	ZGX65414BA	Zanussi
94964014402	FGX65414BA	Faure
94964015302	ZGX65414BA	Zanussi
94964015502	JLBIGGH606	John Lewis

PNC	MODEL	BRAND
94973820002	EGC3313NOK	Electrolux
94973820904	MHGA1K 102-371-39	IKEA
94973821004	MHGA1K 102-371-44	IKEA
94973821104	MHGA1K 502-371-42	IKEA
94973821204	MHGA1K 702-371-41	IKEA
94973821305	MHGA2K 002-371-49	IKEA
94973821405	MHGA2K 202-371-48	IKEA
94973821605	MHGA2K 402-371-52	IKEA
94973821705	MHGA2K 602-371-51	IKEA
94973821805	MHGA2K 802-371-50	IKEA
94973821902	EGC93313NK	Electrolux
94973822003	EGC93322NK	Electrolux
94973822202	GK36DKG2O	Electrolux
94973822601	EGC3322NOK	Electrolux
94973822701	EGC3313NOK	Electrolux
94974061903	EGE6182NOK	Electrolux
94974062004	EGL6082NOK	Electrolux
94975080604	HG995440XB	AEG
94975080704	HG995440XB	AEG
94975080804	HG995440XB	AEG
94975081505	HG995520NB	AEG
94975083305	HG995440NB	AEG
94975083608	ZGO96524BA	Zanussi
94975083706	ZGO96524BA	Zanussi
94975083906	ZGO96524BA	Zanussi
94975085105	HG995440NB	AEG
94975085308	ZGO96524BA	Zanussi
94975085505	ZGO96524BA	Zanussi
94975086202	EGWP9353NK	Electrolux
94975086302	EGWP9353NK	Electrolux
94975086402	EGWP9353NK	Electrolux
94975086702	EGW9353NOK	Electrolux
94976006307	HD634170NB	AEG
94976006805	EGD6576NOK	Electrolux
94976007003	EGE6172NOK	Electrolux
94976007103	EGD6576NOK	Electrolux
94976007202	EGD6576NOK	Electrolux
94976007302	HD634170NB	AEG
94962088404	FGO62414BA	Faure
94962088504	ZGO62414BA	Zanussi
94962088604	FGO62414WA	Faure
94962089304	EGT6042NOK	Electrolux
94962099104	ZGO62414BA	Zanussi

PNC	MODEL	BRAND
94964016201	HG5694340B	AEG
94964016602	EGT6345YOK	Electrolux
94964016702	EGT6345YOK	Electrolux

PNC	MODEL	BRAND
94964000704	ZGO62414BA	Zanussi
94964000804	ZGO62414WA	Zanussi
94964026401	ZGO62414WA	Zanussi

REVISION:

Revision	Date	Description	Author	Approved by - on
00	03/2015	Document Creation	Ewelina Fidor	Valerio Bartolini 2015-05-07