



CHEST FREEZER ABNORMAL ICE BUILDING – LOCK

DESCRIPTION:

Warmer air can get into the appliance. The form of the ice build-up can show what the way of the air flow is. The ice can be concentrated around LOCK hole on the frame or formed inside of cabinet.



SOLUTION:

Repairing solution is to replace the “handle with lock” to a “handle without lock” version.

Please be sure that the consumer accepts this solution when the lock is eliminated!



1. Screw out the lock




2. Pull out the lock




3. Remove the decor plate (only in AEG)



4. Loose the screws

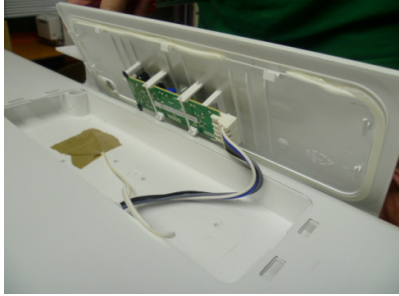

5. Remove handle from lid. In case of electronic version disconnect the electronic board

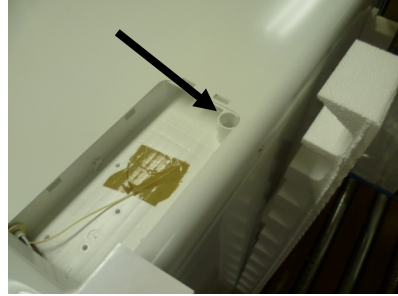

6. Insulate the lock hole with syloplast or gum putty



7. Replace the overlay



8. In case of handle with electronic PCB, attach old electronic to new handle and connect it



9. Assembly the electronic to the lid



10. Fix the handle with 2 screws




11. In case of AEG brand – attach the decor plate

If above solution has no effect then please follow below steps:

1. Check if all the foods are stored in closed boxes and bags – if any package is open it can cause ice build-up
2. Check the proper alignment of the lid. If it seems it can help, raise the lid a little higher with the adjustment of hinges
3. It is suspected that the lid does not shut properly in any way lid has to be exchanged,

SPARE PARTS:

Spare part at this moment is available for Electrolux appliances with handles in similar shape.

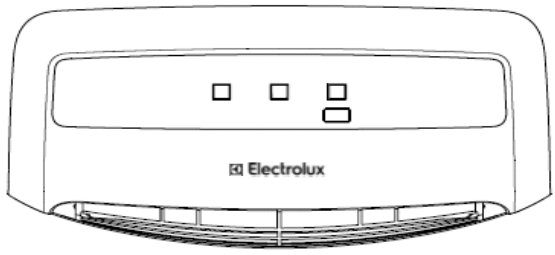Spare part number	Description	Photo
2915029009	Grip,complete,ENV06	

Other variants will be available soon (under investigation by Quality department).

MODELS INVOLVED:

PNC	Model	Brand
920711356	ECM3000WD	Electrolux
920478996	ECM4000WD	Electrolux
920489296	ECM4950WD	Electrolux
920672664	EC2231AOW	Electrolux
920524591	EC2831AOW	Electrolux
920711353	EC3231AOW	Electrolux
920478992	EC4231AOW	Electrolux
920603143	A83100HNW0	AEG
920603142	A83400HLW0	AEG
920711323	BNF3000S	Electrolux
920489272	BNF4950S	Electrolux
920711310	BNLF3000S	Electrolux
920478952	BNLF4000S	Electrolux
920489267	BNLF4950S	Electrolux
920595159	CH230FFS	Electrolux
920436227	EC1501AOW	Electrolux
920436237	EC1501AOW	Electrolux
920672629	EC2102AOW	Electrolux
920672605	EC2201AOW	Electrolux

PNC	Model	Brand
920672627	EC2201AOW	Electrolux
920672606	EC2231AOW	Electrolux
920672628	EC2231AOW	Electrolux
920664157	EC2331AOW	Electrolux
920595155	EC2640AOW	Electrolux
920524542	EC2801AOW	Electrolux
920524559	EC2801AOW	Electrolux
920524545	EC2831AOW	Electrolux
920524560	EC2831AOW	Electrolux
920594143	EC3131AOW	Electrolux
920594148	EC3132AOW	Electrolux
920711305	EC3201AOW	Electrolux
920711322	EC3201AOW	Electrolux
920711306	EC3231AOW	Electrolux
920711324	EC3231AOW	Electrolux
920603146	EC3340AOW	Electrolux
920602121	EC3931AOW	Electrolux
920478949	EC4201AOW	Electrolux
920478966	EC4201AOW	Electrolux

PNC	Model	Brand
920478950	EC4231AOW	Electrolux
920489265	EC5201AOW	Electrolux
920489264	EC5231AOW	Electrolux
920436231	13155DBA106	Electrolux
920436232	13155DBA206	Electrolux
920672611	13215DBA106	Electrolux
920672612	13215DBA206	Electrolux
920664163	A32210HSW0	AEG
920672596	A52100HLW0	AEG
920711298	A53100HLW0	AEG
920478988	A54100HLW0	AEG
920681081	A61900HLW0	AEG
920664154	A62300HLW0	AEG
920720162	A62700HLW0	AEG
920664153	A82300HLW0	AEG
920595150	A82300HNW0	AEG
920720159	A82700HLW0	AEG
920594144	GT29211	Electrolux
920602122	GT36813	Electrolux
920594117	K3309SI	Far
920682082	KFC16J	Zanker
920602127	ÖKO3680-IB	Novamatic
920436228	RC1501AOW	Electrolux-Rex

PNC	Model	Brand
920672608	RC2201AOW	Electrolux-Rex
920672607	RC2231AOW	Electrolux-Rex
920664158	RC2331AOW	Electrolux-Rex
920524543	RC2831AOW	Electrolux-Rex
920594146	RC3131AOW	Electrolux-Rex
920711307	RC3231AOW	Electrolux-Rex
920478951	RC4231AOW	Electrolux-Rex
920489274	RC5231AOW	Electrolux-Rex
920681075	SÖ1840-IB	Novamatic
920720155	SÖ2550-IB	Novamatic
920594131	SÖ2920-IB	Novamatic
920672661	A52105HLW0	AEG
920478990	A54105HLW0	AEG
920721152	GT223	Electrolux
920436252	RC1501AOW	Electrolux
920594167	GT292	Electrolux
920602137	GT368	Electrolux
920603150	GT327	Electrolux
920672662	RC2211AOW	Electrolux
920602138	A63700HLD0	AEG
920489294	EC5231AOW	Electrolux
920603152	EC3330AOW1	Electrolux

Revision	Date	Description	Author	Approved by - on
00	06/2015	Document Creation	Lukasz Goraczko	