



CHEST FREEZER ABNORMAL ICE BUILDING – LOW FROST HOLE

DESCRIPTION:

Warmer air can get into the appliance. The form of the ice build-up can show what the way of the air flow is. The ice can be concentrated around Low frost hole on the frame or formed inside of cabinet.



SOLUTION:

To avoid abnormal ice building the low frost tube must be inserted properly to the bag. For the better fixing please follow the next instruction.



1. Unscrew the low frost cover.




2. Remove the cover



3. Check bag and plastic tube if they are damaged.



4. Check proper fixing of tube

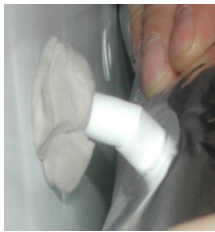

5. If there is some loose, push the bag as far as it is possible. Be careful to not damage the bag



6. Screw back the low frost cover

If above solution has no effect then please follow below steps:

1. Check if all the foods are stored in closed boxes and bags – if any package is open it can cause ice build-up
2. Check the proper alignment of the lid. If it seems it can help, raise the lid a little higher with the adjustment of hinges
3. It is suspected that the lid does not shut properly in any way lid has to be exchanged,

MODELS INVOLVED:

| PNC ELC | Model | Brand |
|-------------|-----------|------------|
| 92047891300 | ECP40108W | Electrolux |
| 92047891301 | ECP40108W | Electrolux |
| 92047891302 | ECP40108W | Electrolux |
| 92047891303 | ECP40108W | Electrolux |
| 92047891304 | ECP40108W | Electrolux |
| 92047891305 | ECP40108W | Electrolux |
| 92047891307 | ECP40108W | Electrolux |
| 92047891500 | ECP40109W | Electrolux |
| 92047891500 | ECP40109W | Electrolux |
| 92047891501 | ECP40109W | Electrolux |
| 92047891503 | ECP40109W | Electrolux |
| 92047891504 | ECP40109W | Electrolux |
| 92047891505 | ECP40109W | Electrolux |
| 92047891507 | ECP40109W | Electrolux |
| 92047893200 | ECP40110W | Electrolux |

| PNC ELC | Model | Brand |
|-------------|-----------|----------------|
| 92047893201 | ECP40110W | Electrolux |
| 92047893202 | ECP40110W | Electrolux |
| 92047893203 | ECP40110W | Electrolux |
| 92047893204 | ECP40110W | Electrolux |
| 92047893300 | JLCH400 | John Lewis |
| 92047893302 | JLCH400 | John Lewis |
| 92047893303 | JLCH400 | John Lewis |
| 92047893304 | JLCH400 | John Lewis |
| 92047893306 | JLCH400 | John Lewis |
| 92047893307 | JLCH400 | John Lewis |
| 92047893308 | JLCH400 | John Lewis |
| 92047893500 | BNLF4000 | Electrolux |
| 92047893501 | BNLF4000 | Electrolux |
| 92047894100 | RCP40108W | Electrolux-Rex |
| 92047894101 | RCP40108W | Electrolux-Rex |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92047894102 | RCP40108W | Electrolux-Rex |
| 92047894103 | RCP40108W | Electrolux-Rex |
| 92047894104 | RCP40108W | Electrolux-Rex |
| 92047894800 | EC4230AOW | Electrolux |
| 92047894801 | EC4230AOW | Electrolux |
| 92047895000 | EC4231AOW | Electrolux |
| 92047895001 | EC4231AOW | Electrolux |
| 92047895002 | EC4231AOW | Electrolux |
| 92047895003 | EC4231AOW | Electrolux |
| 92047895004 | EC4231AOW | Electrolux |
| 92047895100 | RC4231AOW | Electrolux-Rex |
| 92047895101 | RC4231AOW | Electrolux-Rex |
| 92047895102 | RC4231AOW | Electrolux-Rex |
| 92047895200 | BNLF4000S | Electrolux |
| 92047895500 | EC4231AEW | Electrolux |
| 92047895501 | EC4231AEW | Electrolux |
| 92047897200 | EC4230AOW1 | Electrolux |
| 92047898200 | A34010HLW1 | AEG |
| 92047898202 | A34010HLW1 | AEG |
| 92047898203 | A34010HLW1 | AEG |
| 92047898700 | EC4230AOW2 | Electrolux |
| 92047898701 | EC4230AOW2 | Electrolux |
| 92047898702 | EC4230AOW2 | Electrolux |
| 92047898800 | A54100HLW0 | AEG |
| 92047898801 | A54100HLW0 | AEG |
| 92047898802 | A54100HLW0 | AEG |
| 92047899000 | A54105HLW0 | AEG |
| 92047899001 | A54105HLW0 | AEG |
| 92047899002 | A54105HLW0 | AEG |
| 92047899200 | EC4231AOW | Electrolux |
| 92047899201 | EC4231AOW | Electrolux |
| 92048925600 | BNLF4950 | Electrolux |
| 92048925601 | BNLF4950 | Electrolux |
| 92048926300 | ECP50108W | Electrolux |
| 92048926400 | EC5231AOW | Electrolux |
| 92048926401 | EC5231AOW | Electrolux |
| 92048926402 | EC5231AOW | Electrolux |
| 92048926403 | EC5231AOW | Electrolux |
| 92048926700 | BNLF4950S | Electrolux |
| 92048926701 | BNLF4950S | Electrolux |
| 92048927400 | RC5231AOW | Electrolux-Rex |
| 92052451100 | ECP26109W | Electrolux |
| 92052451102 | ECP26109W | Electrolux |
| 92052451103 | ECP26109W | Electrolux |
| 92052451104 | ECP26109W | Electrolux |
| 92052451106 | ECP26109W | Electrolux |
| 92052451300 | ECP26108W | Electrolux |
| 92052451301 | ECP26108W | Electrolux |
| 92052451302 | ECP26108W | Electrolux |
| 92052451303 | ECP26108W | Electrolux |
| 92052451304 | ECP26108W | Electrolux |
| 92052451305 | ECP26108W | Electrolux |
| 92052451306 | ECP26108W | Electrolux |
| 92052453500 | RCP26108W | Electrolux-Rex |
| 92052453501 | RCP26108W | Electrolux-Rex |
| 92052453502 | RCP26108W | Electrolux-Rex |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92052453503 | RCP26108W | Electrolux-Rex |
| 92052453504 | RCP26108W | Electrolux-Rex |
| 92052453604 | A52600HLW0 | AEG-Electrolux |
| 92052453900 | ZFC627WAL | Zanussi |
| 92052454300 | RC2831AOW | Electrolux-Rex |
| 92052454301 | RC2831AOW | Electrolux-Rex |
| 92052454302 | RC2831AOW | Electrolux-Rex |
| 92052454303 | RC2831AOW | Electrolux-Rex |
| 92052454400 | EC2830AOW | Electrolux |
| 92052454401 | EC2830AOW | Electrolux |
| 92052454500 | EC2831AOW | Electrolux |
| 92052454501 | EC2831AOW | Electrolux |
| 92052454502 | EC2831AOW | Electrolux |
| 92052454503 | EC2831AOW | Electrolux |
| 92052454505 | EC2831AOW | Electrolux |
| 92052456000 | EC2831AOW | Electrolux |
| 92052456700 | EC2830AOW1 | Electrolux |
| 92052456701 | EC2830AOW1 | Electrolux |
| 92052457900 | A32610HSW0 | AEG |
| 92052458100 | A32610HLW1 | AEG |
| 92052458600 | EC2830AOW2 | Electrolux |
| 92052458603 | EC2830AOW2 | Electrolux |
| 92052459100 | EC2831AOW | Electrolux |
| 92052459102 | EC2831AOW | Electrolux |
| 92059413000 | GT29210 | Electrolux |
| 92059413001 | GT29210 | Electrolux |
| 92059413003 | GT29210 | Electrolux |
| 92059413004 | GT29210 | Electrolux |
| 92059413005 | GT29210 | Electrolux |
| 92059413200 | ECO29912W | Electrolux |
| 92059413203 | ECO29912W | Electrolux |
| 92059413204 | ECO29912W | Electrolux |
| 92059413205 | ECO29912W | Electrolux |
| 92059414200 | ECO29918W | Electrolux |
| 92059414300 | EC3131AOW | Electrolux |
| 92059414301 | EC3131AOW | Electrolux |
| 92059414302 | EC3131AOW | Electrolux |
| 92059414303 | EC3131AOW | Electrolux |
| 92059414304 | EC3131AOW | Electrolux |
| 92059414400 | GT29211 | Electrolux |
| 92059414401 | GT29211 | Electrolux |
| 92059414402 | GT29211 | Electrolux |
| 92059414403 | GT29211 | Electrolux |
| 92059414500 | EC3132AEW | Electrolux |
| 92059414502 | EC3132AEW | Electrolux |
| 92059414600 | RC3131AOW | Electrolux-Rex |
| 92059414602 | RC3131AOW | Electrolux-Rex |
| 92059414603 | RC3131AOW | Electrolux-Rex |
| 92059414800 | EC3132AOW | Electrolux |
| 92059414801 | EC3132AOW | Electrolux |
| 92059414802 | EC3132AOW | Electrolux |
| 92059414803 | EC3132AOW | Electrolux |
| 92059414805 | EC3132AOW | Electrolux |
| 92059416700 | GT292 | Electrolux |
| 92059516000 | A92500HLW0 | AEG |
| 92059516001 | A92500HLW0 | AEG |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92060212100 | EC3931AOW | Electrolux |
| 92060212101 | EC3931AOW | Electrolux |
| 92060212102 | EC3931AOW | Electrolux |
| 92060212104 | EC3931AOW | Electrolux |
| 92060212200 | GT36813 | Electrolux |
| 92060212201 | GT36813 | Electrolux |
| 92060212202 | GT36813 | Electrolux |
| 92060212500 | EC3931EOW | Electrolux |
| 92060213700 | GT368 | Electrolux |
| 92060213800 | A63700HLD0 | AEG |
| 92060313400 | A80340GT | AEG-Electrolux |
| 92060313401 | A80340GT | AEG-Electrolux |
| 92060313900 | OP3270GTA | Satrap |
| 92060313901 | OP3270GTA | Satrap |
| 92060313902 | OP3270GTA | Satrap |
| 92060313904 | 3270GTA++ | Satrap |
| 92060314200 | A83400HLW0 | AEG-Electrolux |
| 92060314203 | A83400HLW0 | AEG-Electrolux |
| 92060314204 | A83400HLW0 | AEG |
| 92060314900 | A93200HLW0 | AEG |
| 92060314901 | A93200HLW0 | AEG |
| 92060315000 | GT327 | Electrolux |
| 92060315001 | GT327 | Electrolux |
| 92066414800 | ECO22212W | Electrolux |
| 92066414803 | ECO22212W | Electrolux |
| 92066414804 | ECO22212W | Electrolux |
| 92066414805 | ECO22212W | Electrolux |
| 92066414806 | ECO22212W | Electrolux |
| 92066415300 | A82300HLW0 | AEG-Electrolux |
| 92066415302 | A82300HLW0 | AEG-Electrolux |
| 92066415303 | A82300HLW0 | AEG-Electrolux |
| 92066415304 | A82300HLW0 | AEG-Electrolux |
| 92066415305 | A82300HLW0 | AEG-Electrolux |
| 92066415306 | A82300HLW0 | AEG |
| 92066415309 | A82300HLW0 | AEG |
| 92066415400 | A62300HLW0 | AEG-Electrolux |
| 92066415402 | A62300HLW0 | AEG-Electrolux |
| 92066415403 | A62300HLW0 | AEG-Electrolux |
| 92066415404 | A62300HLW0 | AEG-Electrolux |
| 92066415405 | A62300HLW0 | AEG |
| 92066415406 | A62300HLW0 | AEG |
| 92066415407 | A62300HLW0 | AEG |
| 92066415408 | A62300HLW0 | AEG |
| 92066415409 | A62300HLW0 | AEG |
| 92066415500 | A83230GT | AEG-Electrolux |
| 92066415501 | A83230GT | AEG-Electrolux |
| 92066415502 | A83230GT | AEG-Electrolux |
| 92066415503 | A83230GT | AEG-Electrolux |
| 92066415504 | A83230GT | AEG-Electrolux |
| 92066415700 | EC2331AOW | Electrolux |
| 92066415701 | EC2331AOW | Electrolux |
| 92066415702 | EC2331AOW | Electrolux |
| 92066415704 | EC2331AOW | Electrolux |
| 92066415705 | EC2331AOW | Electrolux |
| 92066415800 | RC2331AOW | Electrolux-Rex |
| 92066415802 | RC2331AOW | Electrolux-Rex |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92066416300 | A32210HSW0 | AEG |
| 92066416303 | A32210HSW0 | AEG |
| 92067256300 | ECP21108W | Electrolux |
| 92067256301 | ECP21108W | Electrolux |
| 92067256302 | ECP21108W | Electrolux |
| 92067256303 | ECP21108W | Electrolux |
| 92067256304 | ECP21108W | Electrolux |
| 92067256305 | ECP21108W | Electrolux |
| 92067256306 | ECP21108W | Electrolux |
| 92067256400 | ECP21109W | Electrolux |
| 92067256401 | ECP21109W | Electrolux |
| 92067256402 | ECP21109W | Electrolux |
| 92067256403 | ECP21109W | Electrolux |
| 92067256404 | ECP21109W | Electrolux |
| 92067256407 | ECP21109W | Electrolux |
| 92067256700 | A43210GT | AEG-Electrolux |
| 92067256701 | A43210GT | AEG-Electrolux |
| 92067256702 | A43210GT | AEG-Electrolux |
| 92067256703 | A43210GT | AEG-Electrolux |
| 92067256900 | ECP21110W | Electrolux |
| 92067256901 | ECP21110W | Electrolux |
| 92067256902 | ECP21110W | Electrolux |
| 92067256903 | ECP21110W | Electrolux |
| 92067256904 | ECP21110W | Electrolux |
| 92067256905 | ECP21110W | Electrolux |
| 92067258900 | JLCH200 | John Lewis |
| 92067258901 | JLCH200 | John Lewis |
| 92067258902 | JLCH200 | John Lewis |
| 92067258903 | JLCH200 | John Lewis |
| 92067258904 | JLCH200 | John Lewis |
| 92067258905 | JLCH200 | John Lewis |
| 92067258906 | JLCH200 | John Lewis |
| 92067258907 | JLCH200 | John Lewis |
| 92067258908 | JLCH200 | John Lewis |
| 92067258910 | JLCH200 | John Lewis |
| 92067259500 | RCP21108W | Electrolux-Rex |
| 92067259500 | RCP21108W | Electrolux-Rex |
| 92067259502 | RCP21108W | Electrolux-Rex |
| 92067259503 | RCP21108W | Electrolux-Rex |
| 92067259504 | RCP21108W | Electrolux-Rex |
| 92067259600 | A52100HLW0 | AEG-Electrolux |
| 92067259602 | A52100HLW0 | AEG-Electrolux |
| 92067259603 | A52100HLW0 | AEG-Electrolux |
| 92067259604 | A52100HLW0 | AEG-Electrolux |
| 92067259605 | A52100HLW0 | AEG |
| 92067259606 | A52100HLW0 | AEG |
| 92067259607 | A52100HLW0 | AEG |
| 92067259608 | A52100HLW0 | AEG |
| 92067259700 | ZFC623WAL | Zanussi |
| 92067259701 | ZFC623WAL | Zanussi |
| 92067259702 | ZFC623WAL | Zanussi |
| 92067260200 | ECP21115W | Electrolux |
| 92067260400 | EC2230AOW | Electrolux |
| 92067260401 | EC2230AOW | Electrolux |
| 92067260600 | EC2231AOW | Electrolux |
| 92067260601 | EC2231AOW | Electrolux |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92067260603 | EC2231AOW | Electrolux |
| 92067260604 | EC2231AOW | Electrolux |
| 92067260700 | RC2231AOW | Electrolux-Rex |
| 92067260701 | RC2231AOW | Electrolux-Rex |
| 92067261300 | EC2232AEW | Electrolux |
| 92067261301 | EC2232AEW | Electrolux |
| 92067262801 | EC2231AOW | Electrolux |
| 92067262802 | EC2231AOW | Electrolux |
| 92067263400 | EC2230AOW1 | Electrolux |
| 92067263402 | EC2230AOW1 | Electrolux |
| 92067263403 | EC2230AOW1 | Electrolux |
| 92067264800 | A32110HSW0 | AEG |
| 92067265200 | A32110HLW1 | AEG |
| 92067265201 | A32110HLW1 | AEG-Electrolux |
| 92067265203 | A32110HLW1 | AEG |
| 92067266100 | A52105HLW0 | AEG |
| 92067266101 | A52105HLW0 | AEG |
| 92067266400 | EC2231AOW | Electrolux |
| 92067266600 | ZFC21410WE | Zanussi |
| 92068108100 | A61900HLW0 | AEG-Electrolux |
| 92068108102 | A61900HLW0 | AEG-Electrolux |
| 92068108103 | A61900HLW0 | AEG-Electrolux |
| 92068108104 | A61900HLW0 | AEG-Electrolux |
| 92068108105 | A61900HLW0 | AEG-Electrolux |
| 92068108106 | A61900HLW0 | AEG |
| 92068108107 | A61900HLW0 | AEG |
| 92068108110 | A61900HLW0 | AEG |
| 92068108300 | ECO18912W | Electrolux |
| 92068108301 | ECO18912W | Electrolux |
| 92068108302 | ECO18912W | Electrolux |
| 92068108303 | ECO18912W | Electrolux |
| 92068108304 | ECO18912W | Electrolux |
| 92068108305 | ECO18912W | Electrolux |
| 92068108307 | ECO18912W | Electrolux |
| 92068108308 | ECO18912W | Electrolux |
| 92068207300 | OP1590GTA | Satrap |
| 92068207301 | 1590GTA++ | Satrap |
| 92068207302 | 1590GTA++ | Satrap |
| 92068207303 | 1590GTA++ | Satrap |
| 92068207304 | 1590GTA++ | Satrap |
| 92068207305 | 1590GTA++ | Satrap |
| 92068207900 | A83160GT | AEG-Electrolux |
| 92068208000 | ECO16312W | Electrolux |
| 92068208002 | ECO16312W | Electrolux |
| 92068208100 | A81600HLW0 | AEG-Electrolux |
| 92068208101 | A81600HLW0 | AEG-Electrolux |
| 92068208102 | A81600HLW0 | AEG-Electrolux |
| 92068208103 | A81600HLW0 | AEG |
| 92068208300 | ECO16312W1 | Electrolux |
| 92071126400 | ECP30109W | Electrolux |
| 92071126402 | ECP30109W | Electrolux |
| 92071126403 | ECP30109W | Electrolux |
| 92071126404 | ECP30109W | Electrolux |
| 92071126406 | ECP30109W | Electrolux |
| 92071126700 | ECP30108W | Electrolux |
| 92071126701 | ECP30108W | Electrolux |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92071126702 | ECP30108W | Electrolux |
| 92071126703 | ECP30108W | Electrolux |
| 92071126704 | ECP30108W | Electrolux |
| 92071126705 | ECP30108W | Electrolux |
| 92071126706 | ECP30108W | Electrolux |
| 92071127000 | JLCH300 | John Lewis |
| 92071127001 | JLCH300 | John Lewis |
| 92071127003 | JLCH300 | John Lewis |
| 92071127004 | JLCH300 | John Lewis |
| 92071127005 | JLCH300 | John Lewis |
| 92071127006 | JLCH300 | John Lewis |
| 92071127007 | JLCH300 | John Lewis |
| 92071127100 | ECP30110W | Electrolux |
| 92071127101 | ECP30110W | Electrolux |
| 92071127102 | ECP30110W | Electrolux |
| 92071127103 | ECP30110W | Electrolux |
| 92071127104 | ECP30110W | Electrolux |
| 92071127105 | ECP30110W | Electrolux |
| 92071129100 | A43310GT | AEG-Electrolux |
| 92071129101 | A43310GT | AEG-Electrolux |
| 92071129102 | A43310GT | AEG-Electrolux |
| 92071129103 | A43310GT | AEG-Electrolux |
| 92071129104 | A43310GT | AEG-Electrolux |
| 92071129400 | BNLF3000 | Electrolux |
| 92071129401 | BNLF3000 | Electrolux |
| 92071129401 | BNLF3000 | Electrolux |
| 92071129700 | RCP30108W | Electrolux-Rex |
| 92071129701 | RCP30108W | Electrolux-Rex |
| 92071129702 | RCP30108W | Electrolux-Rex |
| 92071129703 | RCP30108W | Electrolux-Rex |
| 92071129704 | RCP30108W | Electrolux-Rex |
| 92071129800 | A53100HLW0 | AEG-Electrolux |
| 92071129801 | A53100HLW0 | AEG-Electrolux |
| 92071129802 | A53100HLW0 | AEG-Electrolux |
| 92071129803 | A53100HLW0 | AEG-Electrolux |
| 92071129804 | A53100HLW0 | AEG-Electrolux |
| 92071129805 | A53100HLW0 | AEG |
| 92071129808 | A53100HLW0 | AEG |
| 92071130100 | ZFC631WAL | Zanussi |
| 92071130400 | EC3230AOW | Electrolux |
| 92071130401 | EC3230AOW | Electrolux |
| 92071130600 | EC3231AOW | Electrolux |
| 92071130601 | EC3231AOW | Electrolux |
| 92071130604 | EC3231AOW | Electrolux |
| 92071130700 | RC3231AOW | Electrolux-Rex |
| 92071130701 | RC3231AOW | Electrolux-Rex |
| 92071131000 | BNLF3000S | Electrolux |
| 92071131100 | EC3232AEW | Electrolux |
| 92071131102 | EC3232AEW | Electrolux |
| 92071132400 | EC3231AOW | Electrolux |
| 92071133100 | EC3230AOW1 | Electrolux |
| 92071133102 | EC3230AOW1 | Electrolux |
| 92071133900 | A33010HSW0 | AEG |
| 92071134000 | A33010HLW1 | AEG |
| 92071134001 | A33010HLW1 | AEG |
| 92071134003 | A33010HLW1 | AEG |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92071134800 | EC3230AOW2 | Electrolux |
| 92071134801 | EC3230AOW2 | Electrolux |
| 92071134804 | EC3230AOW2 | Electrolux |
| 92071135300 | EC3231AOW | Electrolux |
| 92071135302 | EC3231AOW | Electrolux |
| 92072014900 | A83270GT | AEG-Electrolux |
| 92072014901 | A83270GT | AEG-Electrolux |
| 92072014902 | A83270GT | AEG-Electrolux |
| 92072014903 | A83270GT | AEG-Electrolux |
| 92072014904 | A83270GT | AEG-Electrolux |
| 92072015900 | A82700HLW0 | AEG-Electrolux |
| 92072015901 | A82700HLW0 | AEG-Electrolux |
| 92072015902 | A82700HLW0 | AEG-Electrolux |
| 92072015903 | A82700HLW0 | AEG-Electrolux |
| 92072015904 | A82700HLW0 | AEG-Electrolux |
| 92072015905 | A82700HLW0 | AEG-Electrolux |
| 92072015906 | A82700HLW0 | AEG |
| 92072015907 | A82700HLW0 | AEG |
| 92072015910 | A82700HLW0 | AEG |
| 92072016000 | A82708HLW0 | AEG-Electrolux |
| 92072016002 | A82708HLW0 | AEG-Electrolux |
| 92072016003 | A82708HLW0 | AEG-Electrolux |
| 92072016004 | A82708HLW0 | AEG-Electrolux |
| 92072016005 | A82708HLW0 | AEG-Electrolux |
| 92072016006 | A82708HLW0 | AEG |
| 92072016100 | A82709HLW0 | AEG-Electrolux |
| 92072016101 | A82709HLW0 | AEG |
| 92072016102 | A82709HLW0 | AEG-Electrolux |
| 92072016103 | A82709HLW0 | AEG-Electrolux |
| 92072016104 | A82709HLW0 | AEG-Electrolux |
| 92072016105 | A82709HLW0 | AEG-Electrolux |
| 92072016106 | A82709HLW0 | AEG |

| PNC ELC | Model | Brand |
|-------------|------------|----------------|
| 92072016108 | A82709HLW0 | AEG |
| 92072016200 | A62700HLW0 | AEG-Electrolux |
| 92072016201 | A62700HLW0 | AEG-Electrolux |
| 92072016202 | A62700HLW0 | AEG-Electrolux |
| 92072016203 | A62700HLW0 | AEG-Electrolux |
| 92072016204 | A62700HLW0 | AEG-Electrolux |
| 92072016205 | A62700HLW0 | AEG-Electrolux |
| 92072016206 | A62700HLW0 | AEG |
| 92072016207 | A62700HLW0 | AEG |
| 92072016208 | A62700HLW0 | AEG |
| 92072113000 | ECO22912W | Electrolux |
| 92072113001 | ECO22912W | Electrolux |
| 92072113002 | ECO22912W | Electrolux |
| 92072113400 | A92300HLW0 | AEG-Electrolux |
| 92072113600 | GT22311 | Electrolux |
| 92072113800 | EC2233AOW | Electrolux |
| 92072114000 | A92309HLW0 | AEG |
| 92072114100 | SÖ+2230-IB | Novamatic |
| 92072114300 | A92300HLW0 | AEG |
| 92072114301 | A92300HLW0 | AEG |
| 92072114400 | A92309HLW0 | AEG |
| 92072114401 | A92309HLW0 | AEG |
| 92072114500 | EC2233AOW1 | Electrolux |
| 92072114501 | EC2233AOW1 | Electrolux |
| 92072114600 | GT22311 | Electrolux |
| 92072114700 | A92308HLW0 | AEG |
| 92072114701 | A92308HLW0 | AEG |
| 92072114900 | ECO22912W1 | Electrolux |
| 92072115000 | 223GTA+++ | Satrap |
| 92072115100 | SÖ+2230.1 | Novamatic |
| 92072115200 | GT223 | Electrolux |

| Revision | Date | Description | Author | Approved by - on |
|----------|---------|-------------------|-----------------|------------------|
| 00 | 06/2015 | Document Creation | Lukasz Goraczko | |