




CHEST FREEZER ABNORMAL ICE BUILDING – VACUUM BREAKER HOLE

DESCRIPTION:

Warmer air can get into the appliance. The form of the ice build-up can show what the way of the air flow is. The ice can be concentrated around VACUUM BREAKER hole on the frame or formed inside of cabinet.

In Vacuum breaker hole is located small plastic ball. Ball is lift up and down during normal operation. It can be stuck and cannot fall down by itself. This causes ice build up.

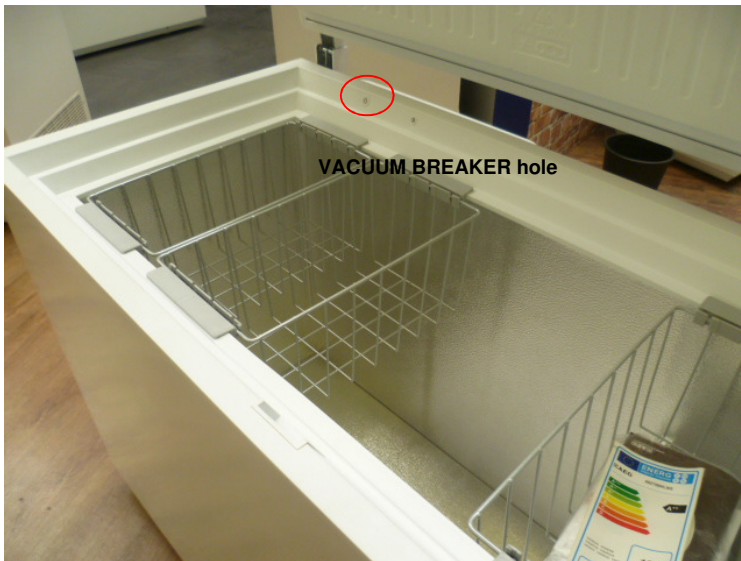

SOLUTION:

To make it work properly, please follow below steps:



1. Locate Vacuum breaker hole



2. Determine if ball have stuck in upper position



3. Use tool(e.g. screwdriver) to push down ball to proper position

If above solution has no effect then please follow below steps:

1. Check if all the foods are stored in closed boxes and bags – if any package is open it can cause ice build-up
2. Check the proper alignment of the lid. If it seems it can help, raise the lid a little higher with the adjustment of hinges
3. It is suspected that the lid does not shut properly in any way lid has to be exchanged,

MODELS INVOLVED

PNC	Model	Brand
920478994	ZFC41400WA	Zanussi
920489293	ZFC51400WA	Zanussi
920672664	EC2231AOW	Electrolux
920524591	EC2831AOW	Electrolux
920711353	EC3231AOW	Electrolux
920478992	EC4231AOW	Electrolux
920489292	EC5200AOW2	Electrolux
920436254	ZFC14500WA	Zanussi
920672665	ZFC21400WA	Zanussi
920672666	ZFC21410WE	Zanussi
920524592	ZFC26500WA	Zanussi
920711354	ZFC31500WA	Zanussi
920478993	ZFC41400WA	Zanussi
920603143	A83100HNW0	AEG
920682079	A83160GT	AEG
920664155	A83230GT	AEG
920720149	A83270GT	AEG
920603142	A83400HLW0	AEG
920603144	A83408HLW0	AEG- Electrolux
920721134	A92300HLW0	AEG
920721143	A92300HLW0	AEG
920721147	A92308HLW0	AEG

PNC	Model	Brand
920721140	A92309HLW0	AEG
920721144	A92309HLW0	AEG
920595151	A92700HLW0	AEG
920594158	AFC1312	IEE
920711245	BNF3000	Electrolux
920711323	BNF3000S	Electrolux
920489225	BNF4950	Electrolux
920489272	BNF4950S	Electrolux
920711294	BNLF3000	Electrolux
920711310	BNLF3000S	Electrolux
920478935	BNLF4000	Electrolux
920478952	BNLF4000S	Electrolux
920489256	BNLF4950	Electrolux
920489267	BNLF4950S	Electrolux
920711262	BS1325	Elektro Helios
920524547	BS2600	Elektro Helios
920524551	BS2601	Elektro Helios
920524578	BS2601	Elektro Helios
920711272	BS3311	Elektro Helios
920711317	BS3312	Elektro Helios
920711325	BS3312	Elektro Helios
920664130	CBN25SI	Domeos
920594116	CBN35SI	Domeos

PNC	Model	Brand
920436230	CC1155PL	IEE
920436251	CC1156PL	IEE
920664156	CC2205SIP2	Curtiss
920664165	CC2205SIP2	IEE
920664166	CC2206SIP2	IEE
920594136	CC3105SI	Curtiss
920594160	CC3105SI	IEE
920594141	CC3105SIP2	Curtiss
920594161	CC3105SIP2	IEE
920594162	CC3106SI	IEE
920594163	CC3106SIP2	IEE
920711299	CC3205PL	Curtiss
920711343	CC3205PL	IEE
920711344	CC3206PL	IEE
920602109	CC4104SI	Curtiss
920602113	CC4105SI	Curtiss
920602133	CC4105SI	IEE
920602124	CC4105SIP2	IEE
920602134	CC4105SIP2	IEE
920602132	CC4106SI	IEE
920602135	CC4106SIP2	IEE
920711342	CECC300AP	IEE
920711345	CECC300AP	IEE
920711316	CECCF300AP	IEE
920595148	CH230FF	Electrolux
920595159	CH230FFS	Electrolux
920524549	EC12800AW	Electrolux
920524564	EC12800AW1	Electrolux
920478956	EC14200AW	Electrolux
920478969	EC14200AW1	Electrolux
920436226	EC1500AOW	Electrolux
920436239	EC1500AOW1	Electrolux
920436227	EC1501AOW	Electrolux
920436237	EC1501AOW	Electrolux
920721137	EC2100AOW	Electrolux
920672629	EC2102AOW	Electrolux
920672624	EC2200AEW	Electrolux
920672632	EC2200AEW	Electrolux
920672603	EC2200AOW	Electrolux
920672633	EC2200AOW1	Electrolux
920672659	EC2200AOW2	Electrolux
920672605	EC2201AOW	Electrolux
920672627	EC2201AOW	Electrolux

PNC	Model	Brand
920672604	EC2230AOW	Electrolux
920672634	EC2230AOW1	Electrolux
920672606	EC2231AOW	Electrolux
920672628	EC2231AOW	Electrolux
920672613	EC2232AEW	Electrolux
920721135	EC2232AOW	Electrolux
920721138	EC2233AOW	Electrolux
920721145	EC2233AOW1	Electrolux
920664157	EC2331AOW	Electrolux
920595154	EC2631AOW	Electrolux
920595155	EC2640AOW	Electrolux
920524550	EC2800ADW	Electrolux
920524565	EC2800ADW1	Electrolux
920524541	EC2800AOW	Electrolux
920524566	EC2800AOW1	Electrolux
920524587	EC2800AOW2	Electrolux
920524542	EC2801AOW	Electrolux
920524559	EC2801AOW	Electrolux
920524544	EC2830AOW	Electrolux
920524567	EC2830AOW1	Electrolux
920524586	EC2830AOW2	Electrolux
920524545	EC2831AOW	Electrolux
920524560	EC2831AOW	Electrolux
920594143	EC3131AOW	Electrolux
920594145	EC3132AEW	Electrolux
920594148	EC3132AOW	Electrolux
920711303	EC3200AOW	Electrolux
920711328	EC3200AOW1	Electrolux
920711347	EC3200AOW2	Electrolux
920711312	EC3200ASW	Electrolux
920711329	EC3200ASW	Electrolux
920711349	EC3200ASW1	Electrolux
920711305	EC3201AOW	Electrolux
920711322	EC3201AOW	Electrolux
920711315	EC3202AOW	Electrolux
920711330	EC3202AOW	Electrolux
920711346	EC3202AOW1	Electrolux
920711304	EC3230AOW	Electrolux
920711331	EC3230AOW1	Electrolux
920711348	EC3230AOW2	Electrolux
920711313	EC3230ASW	Electrolux
920711332	EC3230ASW	Electrolux
920711306	EC3231AOW	Electrolux

PNC	Model	Brand
920711324	EC3231AOW	Electrolux
920711311	EC3232AEW	Electrolux
920603146	EC3340AOW	Electrolux
920603148	EC3340AOW	Electrolux
920602121	EC3931AOW	Electrolux
920478957	EC4200ADW	Electrolux
920478970	EC4200ADW1	Electrolux
920478947	EC4200AOW	Electrolux
920478971	EC4200AOW1	Electrolux
920478949	EC4201AOW	Electrolux
920478966	EC4201AOW	Electrolux
920478948	EC4230AOW	Electrolux
920478972	EC4230AOW1	Electrolux
920478987	EC4230AOW2	Electrolux
920478955	EC4231AEW	Electrolux
920478950	EC4231AOW	Electrolux
920489265	EC5201AOW	Electrolux
920489264	EC5231AOW	Electrolux
920664152	ECC21-2	Essentiel b
920595158	ECF2340FW	Electrolux
920595131	ECF23461W	Electrolux
920603145	ECF31461W	Electrolux
920602119	ECM38112W	Electrolux
920436224	ECN14105W	Electrolux
920436215	ECN14108W	Electrolux
920436213	ECN14109W	Electrolux
920672570	ECN21106W	Electrolux
920672562	ECN21108W	Electrolux
920672588	ECN21109W	Electrolux
920524530	ECN26106W	Electrolux
920524512	ECN26108W	Electrolux
920524516	ECN26109W	Electrolux
920711266	ECN30108W	Electrolux
920711289	ECN30109W	Electrolux
920478938	ECN40103W	Electrolux
920478880	ECN40105W	Electrolux
920478937	ECN40106W	Electrolux
920478912	ECN40108W	Electrolux
920478930	ECN40109W	Electrolux
920489257	ECN50103W	Electrolux
920489220	ECN50105W	Electrolux
920489262	ECN50108W	Electrolux
920681083	ECO18912W	Electrolux

PNC	Model	Brand
920664148	ECO22212W	Electrolux
920594132	ECO29912W	Electrolux
920594142	ECO29918W	Electrolux
920672563	ECP21108W	Electrolux
920672564	ECP21109W	Electrolux
920672569	ECP21110W	Electrolux
920672602	ECP21115W	Electrolux
920524513	ECP26108W	Electrolux
920524511	ECP26109W	Electrolux
920711267	ECP30108W	Electrolux
920711264	ECP30109W	Electrolux
920711271	ECP30110W	Electrolux
920478913	ECP40108W	Electrolux
920478915	ECP40109W	Electrolux
920478932	ECP40110W	Electrolux
920489263	ECP50108W	Electrolux
920664160	EL210IT	IEE
920436231	13155DBA106	Electrolux
920436232	13155DBA206	Electrolux
920672611	13215DBA106	Electrolux
920672612	13215DBA206	Electrolux
920682073	1590GTA++	Satrap
920721150	223GTA+++	Satrap
920603139	3270GTA++	Satrap
920664164	400056	IEE
920594159	400057	IEE
920436246	A31410HSW0	AEG
920436249	A31410HSW1	AEG
920672652	A32110HLW1	AEG
920672648	A32110HSW0	AEG
920664163	A32210HSW0	AEG
920524581	A32610HLW1	AEG
920524579	A32610HSW0	AEG
920711340	A33010HLW1	AEG
920711339	A33010HSW0	AEG
920478982	A34010HLW1	AEG
920478981	A34010HSW0	AEG
920672567	A43210GT	AEG
920711291	A43310GT	AEG
920672596	A52100HLW0	AEG
920524536	A52600HLW0	AEG
920711298	A53100HLW0	AEG
920478988	A54100HLW0	AEG

PNC	Model	Brand
920681081	A61900HLW0	AEG
920664154	A62300HLW0	AEG
920720162	A62700HLW0	AEG
920602077	A75370GT	AEG
920603134	A80340GT	AEG
920682081	A81600HLW0	AEG
920664153	A82300HLW0	AEG
920595150	A82300HNW0	AEG
920720159	A82700HLW0	AEG
920720160	A82708HLW0	AEG
920720161	A82709HLW0	AEG
920524557	FFC26500WA	Faure
920524568	FFC26500WA	Faure
920711321	FFC31500WA	Faure
920711333	FFC31500WA	Faure
920524522	FFC326WA	Faure
920711276	FFC330WA	Faure
920711281	FFC330WBB	Faure
920478959	FFC41400WA	Faure
920478975	FFC4140WA1	Faure
920478946	FFC639WAP	Faure
920721133	GT22310	Electrolux
920721136	GT22311	Electrolux
920721146	GT22311	Electrolux
920595149	GT234N	Electrolux
920595157	GT234N10	Electrolux
920595153	GT25710	Electrolux
920594130	GT29210	Electrolux
920594144	GT29211	Electrolux
920603147	GT300N11	Electrolux
920602122	GT36813	Electrolux
920672589	JLCH200	John Lewis
920711270	JLCH300	John Lewis
920478933	JLCH400	John Lewis
920664131	K3269SI	Far
920594117	K3309SI	Far
920602120	K3410SI	Far
920682082	KFC16J	Zanker
920721131	KFC23JN	Zanker
920672592	Ö2100-IB	Novamatic
920711295	Ö3000-IB	Novamatic
920478936	Ö4000-IB	Novamatic
920602127	ÖKO3680-IB	Novamatic

PNC	Model	Brand
920436229	PCF1401	Philco
920436248	PCF1401E	Philco
920436211	PFC140JG	Zoppas
920436235	PFC14400WA	Zoppas
920436241	PFC14400WA	Zoppas
920436247	PFC14401WA	Zoppas
920672623	PFC21400WA	Zoppas
920672638	PFC21400WA	Zoppas
920672571	PFC221JG	Zoppas
920524519	PFC261JG	Zoppas
920524553	PFC26400WA	Zoppas
920524571	PFC26400WA	Zoppas
920711273	PFC301JG	Zoppas
920711320	PFC31400WA	Zoppas
920711334	PFC31400WA	Zoppas
920478916	PFC381JG	Zoppas
920478962	PFC41400WA	Zoppas
920478976	PFC41400WA	Zoppas
920489260	PFC501JG	Zoppas
920489271	PFC51400WA	Zoppas
920489280	PFC51400WA	Zoppas
920436228	RC1501AOW	Electrolux-Rex
920672608	RC2201AOW	Electrolux-Rex
920672607	RC2231AOW	Electrolux-Rex
920664158	RC2331AOW	Electrolux-Rex
920524543	RC2831AOW	Electrolux-Rex
920594146	RC3131AOW	Electrolux-Rex
920711307	RC3231AOW	Electrolux-Rex
920602123	RC3931AOW	Electrolux-Rex
920478951	RC4231AOW	Electrolux-Rex
920489274	RC5231AOW	Electrolux-Rex
920436219	RCN14107W	Electrolux-Rex
920672598	RCN21108W	Electrolux-Rex
920672595	RCP21108W	Electrolux-Rex
920524535	RCP26108W	Electrolux-Rex
920711297	RCP30108W	Electrolux-

PNC	Model	Brand
		Rex
920478941	RCP40108W	Electrolux- Rex
920721082	RO23ENF	Rex- Electrolux
920681082	RSP190A	Rosenlew
920681094	RSP190A	Rosenlew
920681092	RSP195A	Rosenlew
920681098	RSP201A	Rosenlew
920672572	RSP214A	Rosenlew
920672600	RSP215A	Rosenlew
920672579	RSP215B	Rosenlew
920672614	RSP216A	Rosenlew
920672641	RSP216A	Rosenlew
920672619	RSP220A	Rosenlew
920672640	RSP220A	Rosenlew
920524537	RSP266A	Rosenlew
920524552	RSP270A	Rosenlew
920524572	RSP270A	Rosenlew
920594166	RSP301A	Rosenlew
920711300	RSP306A	Rosenlew
920711318	RSP310A	Rosenlew
920711335	RSP310A	Rosenlew
920478945	RSP405A	Rosenlew
920478953	RSP406A	Rosenlew
920478960	RSP410A	Rosenlew
920478977	RSP410A	Rosenlew
920489290	RSP510A	Rosenlew
920681075	SÖ1840-IB	Novamatic
920720155	SÖ2550-IB	Novamatic
920594131	SÖ2920-IB	Novamatic
920721141	SÖ+2230-IB	Novamatic
920721151	SÖ+2230.1	Novamatic
920720171	VALCC255EH	IEE
920594164	VALCC292EH	IEE
920720166	VALCCSI255	IEE
920594150	VALCCSI292	IEE
920436236	ZFC14400WA	Zanussi
920436245	ZFC14400WA	Zanussi
920681096	ZFC19400WA	Zanussi
920681097	ZFC19402WA	Zanussi
920672621	ZFC21400WA	Zanussi
920672643	ZFC21400WA	Zanussi
920672625	ZFC21402WA	Zanussi

PNC	Model	Brand
920672530	ZFC21JA	Zanussi
920720167	ZFC25401WA	Zanussi
920720169	ZFC25401WA	Zanussi
920524554	ZFC26400WA	Zanussi
920524573	ZFC26400WA	Zanussi
920524558	ZFC26402WA	Zanussi
920524556	ZFC26410WA	Zanussi
920524574	ZFC26410WA	Zanussi
920524583	ZFC26500WA	Zanussi
920711319	ZFC31400WA	Zanussi
920711336	ZFC31400WA	Zanussi
920594149	ZFC31401WA	Zanussi
920594155	ZFC31401WA	Zanussi
920594165	ZFC31401WA	Zanussi
920436225	ZFC314WAA	Zanussi
920711341	ZFC31500WA	Zanussi
920672566	ZFC321WA	Zanussi
920672574	ZFC321WA	Zanussi
920672645	ZFC321WA	Zanussi
920681093	ZFC321WA1	Zanussi
920681095	ZFC321WA1	Zanussi
920672599	ZFC321WAA	Zanussi
920672615	ZFC322WAA	Zanussi
920524540	ZFC326WAA	Zanussi
920711286	ZFC330WA	Zanussi
920594151	ZFC330WA1	Zanussi
920594156	ZFC330WA1	Zanussi
920711302	ZFC330WAA	Zanussi
920711263	ZFC330WBB	Zanussi
920478921	ZFC340WA	Zanussi
920602126	ZFC340WA1	Zanussi
920602131	ZFC340WA1	Zanussi
920478944	ZFC340WAA	Zanussi
920489261	ZFC350WAA	Zanussi
920489243	ZFC350WBB	Zanussi
920602136	ZFC38402WA	Zanussi
920478887	ZFC40JA	Zanussi
920478961	ZFC41400WA	Zanussi
920478978	ZFC41400WA	Zanussi
920478964	ZFC41402WA	Zanussi
920436234	ZFC414WAA	Zanussi
920436243	ZFC414WAA	Zanussi
920672616	ZFC421WAA	Zanussi

PNC	Model	Brand
920672660	ZFC421WAA	Zanussi
920524548	ZFC426WAA	Zanussi
920524588	ZFC426WAA	Zanussi
920711314	ZFC430WAA	Zanussi
920711350	ZFC430WAA	Zanussi
920478954	ZFC440WAA	Zanussi
920478979	ZFC440WAA	Zanussi
920489269	ZFC450WAA	Zanussi
920489281	ZFC450WAA	Zanussi
920489270	ZFC51400WA	Zanussi
920489282	ZFC51400WA	Zanussi
920436216	ZFC620WAP	Zanussi
920436233	ZFC620WAP	Zanussi
920436244	ZFC620WAP	Zanussi
920672597	ZFC623WAL	Zanussi
920672646	ZFC623WAL	Zanussi
920672576	ZFC623WAP	Zanussi
920524539	ZFC627WAL	Zanussi
920524575	ZFC627WAL	Zanussi
920524521	ZFC627WAP	Zanussi
920524531	ZFC627WAP	Zanussi
920524576	ZFC627WAP	Zanussi
920711301	ZFC631WAL	Zanussi
920711282	ZFC631WAP	Zanussi
920711296	ZFC631WAP	Zanussi
920711337	ZFC631WAP	Zanussi
920478943	ZFC639WAL	Zanussi
920478918	ZFC639WAP	Zanussi
920478940	ZFC639WAP	Zanussi
920478980	ZFC639WAP	Zanussi
920489246	ZFC649WAP	Zanussi
920720165	ZFC727WAP	Zanussi
920594147	ZFC731WAP	Zanussi
920436218	ZKC15S	Zanker

PNC	Model	Brand
920672594	ZKC24S	Zanker
920524534	ZKC28S	Zanker
920672661	A52105HLW0	AEG
920478990	A54105HLW0	AEG
920711351	GCF316	IEE
920595160	A92500HLW0	AEG
920603149	A93200HLW0	AEG
920721152	GT223	Electrolux
920436253	RC1500AOW1	Electrolux
920436252	RC1501AOW	Electrolux
920672663	RC2200AOW2	Electrolux
920524590	RC2800AOW2	Electrolux
920711352	RC3200AOW2	Electrolux
920478991	RC4200AOW1	Electrolux
920489291	RC5200AOW2	Electrolux
920594167	GT292	Electrolux
920602137	GT368	Electrolux
920603150	GT327	Electrolux
920672662	RC2211AOW	Electrolux
920595161	SÖ	Novamatic
920603151	SÖÖ	Novamatic
920602138	A63700HLD0	AEG
920489294	EC5231AOW	Electrolux
920711334	PFC31400WA	Zoppas
920436211	PFC140JG	Zoppas
920489260	PFC501JG	Zoppas
920478916	PFC381JG	Zoppas
920524571	PFC26400WA	Zoppas
920711273	PFC301JG	Zoppas
920524519	PFC261JG	Zoppas
920436241	PFC14400WA	Zoppas
920672571	PFC221JG	Zoppas
920436247	PFC14401WA	Zoppas

Revision	Date	Description	Author	Approved by - on
00	06/2015	Document Creation	Lukasz Goraczko	