

SERVICE INSTRUCTION


OTHER 4690

Multi media device CAM44

EN Troubleshooting:
**Connection of PerfectView
 CAM44 to a multi media device**




Description PerfectView CAM44

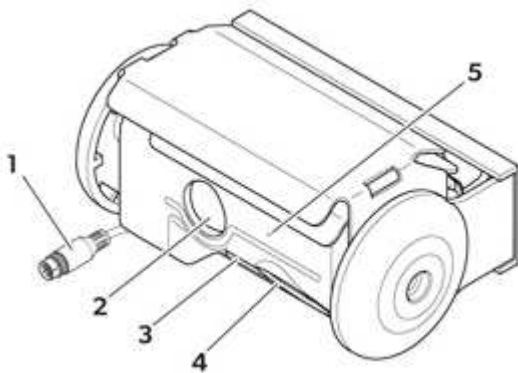

Pos. no.	Description
1	6 pin connection cable
2	Far-view lens
3	Infrared light
4	Close view lens (Rear view camera)
5	Microphone

Wiring with mult media device

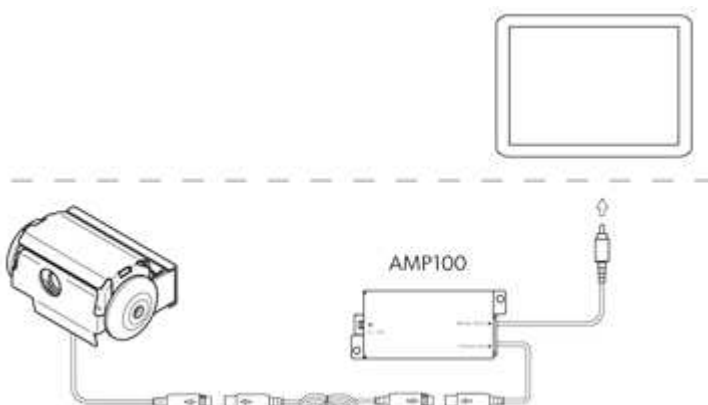


Operation check

- Switch ON the ignition.
- Engage the rear gear.
- ✓ The monitor starts operation.
- ✓ The protection cap of the camera opens.
- ✓ The picture of the camera appears.

Deviations possible

- The protection cap opens but no picture appears or the picture disappears after some seconds.

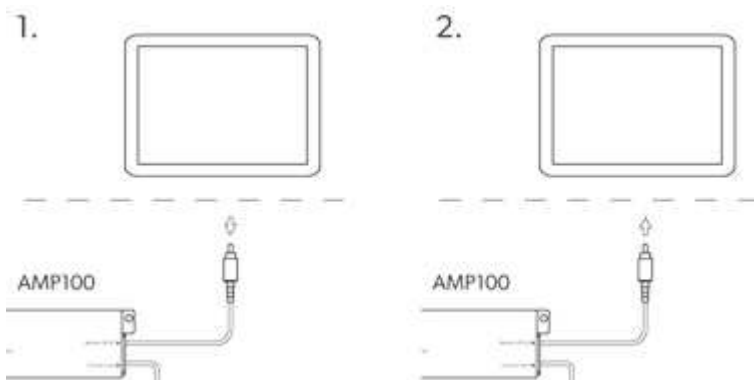

- Disconnect the video cable of AMP100 and monitor.
- Reconnect the video cable of AMP100 and monitor.
- Does the picture appear again if the camera isn't defective. Most probably the root cause is the matching between camera and monitor.
- The failure symptom can't be solved by replacing the camera.
- The monitor starts operation but the protection cap of the camera doesn't open.
- Check whether there is audible click noise in the camera.
- In case there is no click noise audible, most probably the power supply to the camera isn't working.
- Please check:
 - Connectors/connection at AMP100 box.
 - Correct connection of the green trigger wire to the rear gear trigger signal terminal.
 - Is a click noise audible, the power supply is properly working and the camera is defective.
- Please replace the camera.