

Instruction manual for the :

118197001-06, 118197010,118197023,118197030,118197036

Erase the previous calibration value and store a new one:

1. Make sure that the cleaner is unplugged from mains then disconnect the wire of the potentiometer and short circuit the on/off tact switch (or keep the switch pressed).
2. While the on/off button is shorted (or kept pressed), connect the mains. If the erase process was successful, the motor will start to oscillate.
3. Unplug the unit from mains first, and then remove the short circuit (or release) the on/off tact switch and connect the wire of the potentiometer.
4. Set the potentiometer in the desired minimum setting (cleaner still must be unplugged!) then plug in the mains. This time the cleaner will store this value and switch into normal standby mode.
5. Cleaner is ready to use.