



### HOOD- BLINKING OF THE DISPLAY LIGHTS IN RED COLOR


#### DESCRIPTION:

Cooker Hood is blinking of the display lights in red color

#### PRODUCTS AFFECTED:

PNC	MODEL	BRAND
942150517	DIK7190HG	AEG
942150579	DIK7190HG	AEG
942150518	DBK7990HG	AEG
942150580	DBK7990HG	AEG
942150519	DIK6980SG	AEG
942150581	DIK6980SG	AEG
942150520	DBK6980SG	AEG
942150582	DBK6980SG	AEG
942150521	DIE5960HG	AEG
942150526	DBB5960HM	AEG
942150531	DKB5960HM	AEG
942150533	DKB5660HM	AEG
942150526	DBB5960HM	AEG
942150527	DBK5960DHM	AEG
942150529	DBB5660HM	AEG
942150629	DBB5760HM	AEG
942150523	DIB5160HM	AEG
942150541	DTB5960HM	AEG
942150542	DTB5660HM	AEG
942150595	QFC90400X	HUSQVARNA
942150596	QFC60400X	HUSQVARNA
942150585	DKB5960HM	AEG
942150587	DKB5660HM	AEG
942150573	GD5960B	AEG
942150574	GD5660B	AEG
942150583	DBB5960HM	AEG
942150584	DBB5660HM	AEG
942150572	GD5160I	AEG
942150522	DBE5960HG	AEG
942150525	DBB6960HM	AEG
942150568	DBE5960HM	AEG
942150535	DVE5960HB	AEG
942150536	DVE5960HW	AEG

SOLUTION:

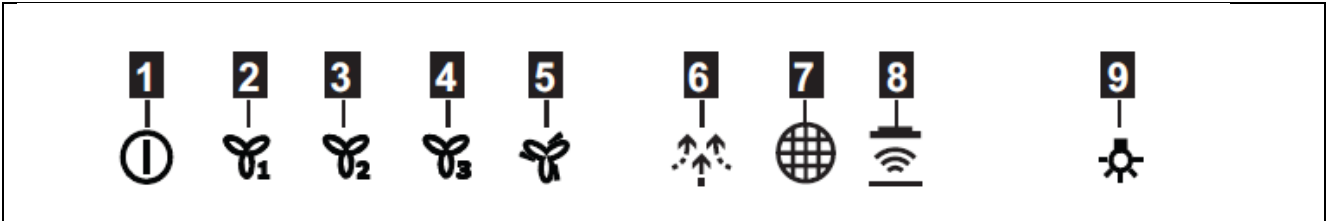

When the hood is in stand-by, hold down key **1** for five seconds, all leds will start to flash in red: the control panel is deactivated/blocked.

Hold down key **1** again for five seconds all leds will turn off: the control panel is active.

REVISION:

Revision	Date	Description	Author	Approved by - on
00	10-2018	Document Creation	BSP	