

# **SERVICE MANUAL** Food preservation

COLD APPLIANCES WITH ELECTRONIC CONTROL SYSTEM

**ERF2010** 



ΕN

Publication number 599 83 48 87 Edition: 01/2020 - Rev. 00

FOR INTERNAL AND PARTNERS USE ONLY

© ELECTROLUX HOME PRODUCTS Consumer Service - EMEA Quality & Continuous Improvement - Technical Support

## **PURPOSE OF THIS MANUAL**

The purpose of this Service Manual is to provide Service Engineers who are already familiar with repair procedures with information regarding the PCB.

#### **Document Revisions**


Rev.	Date	Description	Author
00	01/2020	Document creation	Anna Grimlund

### **SAFETY**




- All the work to be performed inside the appliance requires specific skills and knowledge and may only be carried out by qualified and authorised Service Engineers
- Before you access internal components, take the plug out of the socket to disconnect the power supply.
- Some of the components in the mechanical part could cause injuries, so wear suitable protection and proceed with caution.

# **ERF2010 CONNECTORS**

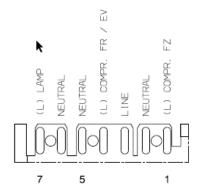

2 1

\( \text{2} \text{2}

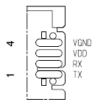

POWER CONNECTOR EDGE CONNECTOR

MFMP 7262/007/006/960

Detail J1

DOOR SWITCH EDGE CONNECTOR

MOLEX 91491-9103, AMP 1-135518-2, or equivalent

Detail J2

NTC EDGE CONNECTOR

STOCKO MFPM 7242-008-560-450. MOLEX 91491-9006. AMP 1-135518-6, or equivalent

Detail J3

RS 232 EDGE CONNECTOR

LUMBERG 3521 04-xx, STOCKO MFMP 7238-004-xx

Detail J4

# REPLACE THE PCB

1. Remove the screws from the corners of the cover.



## 2. Open the door and open the cover by the corners






#### 3. Remove the connectors



4. Remove the black PCB box, it is fixed by two clips on the cover.

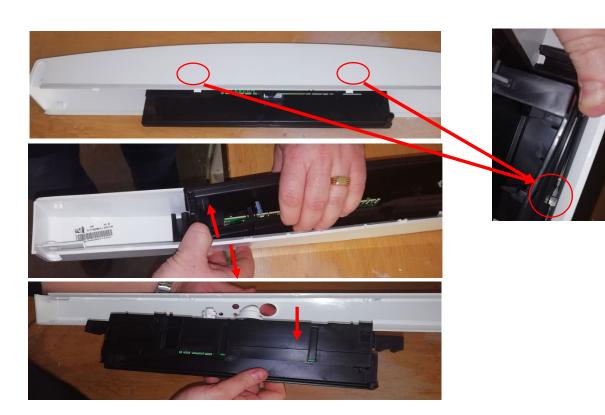

5. Remove the PCB, it is fixed in the corners.





#### 6. Remove the knobs



7. Replace the PCB, make sure that all is in position



- 8. Put the knobs back, make sure that they are in the correct position.
- 9. Replace the PCB in the PCB box and put back the cover.