 


SERVICE INFORMATION WELLBEING & SDA

Disassembly Instruction for E7K1-XXX & K7-1-XXX & E7EK1-XXXX









3. Remove the 4 screws of Lower Handle cover



4. Remove the 3 screws of the Body Bottom Cover



EN [TDS] – [NJ] 1/5 599 83 72-58 Rev.00

5. Pull down the Thermostatic connector



6. Remove the 3 screws of the Thermostat




7. Disassembling the Spout cover

 


8. Take out the Seal ring from the Spout cover



9. Take the Water gauge seal

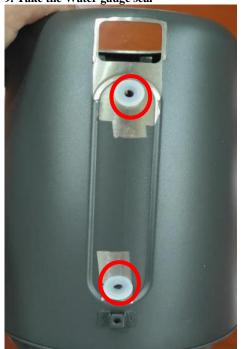





11. Remove 5 screws of the Base Cover







13. Pull down the Lead wire Terminal



14. Remove 2 screws on the PCB



15. Disassemble the Inner Lamp cove



16. Disassemble the Press Key (WHITE)



MODELS INVOLVED:

E7K1-XXX K7-1-XXX E7EK1-XXXX

REVISION:

F	Revision	Date	Description	Author	Approved by - on
	00	06/2020	Disassembly Instruction	Nicole Jiang	Nicole Jiang