



WARMING DRAWER – Problems

This Service Manual covers three issues on Warming Drawer

Problem	Problem Title	QES - During the intervention please use:	
		Component	Defect
1	Door lock mechanism	D10	208
	Switches		618
2	Aesthetic frontal panel damaged		114
3	Warming system damaged - Air fan motor		301

Problem 1:

Warming Drawer “Push to open” system is not working – Door lock mechanism

MODELS INVOLVED:

All Electrolux/AEG models

PNC						
947727410	947727413	947727417	947727400	947727406	947727434	947727430
947727411	947727414	947727419	947727401	947727407	947727435	947727431
947727412	947727415	947727421	947727402	947727408	947727426	
947727425	947727416	947727422	947727404	947727409	947727427	
947727429	947727420	947727423	947727405	947727433	947727432	

SOLUTION:


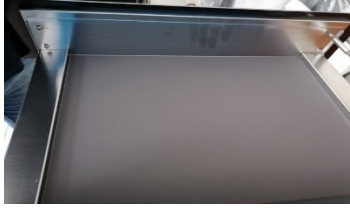

			
Remove the drawer from the furniture niche, if installed	Unscrew the drawer’s base and remove it.		

		
Remove the damaged “Push to open” system from the central part of the drawer’s bottom, pulling right		Fix the new “Push to open” system, pushing left.

Problem 2:
Aesthetic frontal panel damaged

MODELS INVOLVED:
All Electrolux/AEG models



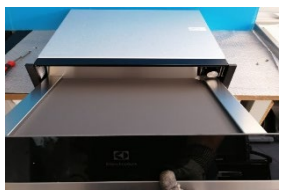

SOLUTION:




		
Open the drawer	Unscrew the 4 screws located behind the frontal panel, inside the drawer to replace with new spare	

Problem 3:
Warming system damaged – Air fan motor

MODELS INVOLVED:
All Electrolux/AEG models

SOLUTION:

			
Remove the drawer from the furniture niche, if installed	Unscrew the drawer's base and remove it.		

		
Unscrew the warming system	Remove the damaged warming system and replace new spare	

REVISION:

Revision	Date	Description	Author	Approved by - on
00	05/2020	Document Creation	BSP	Nazario Morettin
01	10/2020	Converted from SB to SM	BSP	Nazario Morettin