

INDUCTION HOB – Replacement KingLeopard 3-zone Induction board

DESCRIPTION:

How to handle the KingLeopard 3-Zone Induction board while it must be exchanged for service

SOLUTION:

On appliances where the front generator* is not used the board is only populated with the components for the 3 generators.

In the service case this board will be replaced by the full populated induction board. The dummy NTCs must be moved from the exchanged board to the service part. There are no additional parts needed.


Note:

- Fix all screws for the coils, even when not used.
- Do not use additional parts like Jumper or Dummy NTC.
- Take all parts from original board and move to spare part.
- No difference in Software between 3 and 4 generator version.

*Generator : Heating Coil

**Original Part : The part in the hob which must be exchanged

***Service Part: New Spare part

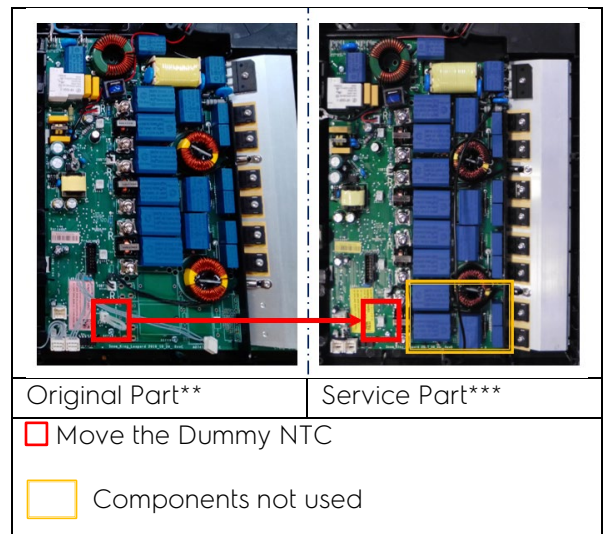

QES CODE:

During the intervention please use:

Component	
Defect	

MODELS INVOLVED:

98214011 12 19-13/1: KingLeopard 3 – Zone induction board spare part

REVISION:

Revision	Date	Description	Author	Approved by - on
00	03/2020	Document Creation	Harald Hoffmann	Ulrich Häutle