



ECO 40-60 PROGRAM

Temperature selection on program "Eco 40° - 60°"

DESCRIPTION:

On "Eco 40° - 60°" program temperature is fix and it cannot be change. Temperature selection on display will be showed as 40°C. "Eco 40° - 60°" is indicating only the name of the program (according with EU regulation). It does not mean that customer is able to select a temperature between 40°C or 60°C.

MODELS INVOLVED:

All Washing Machine FL&TL and all Washer Dryer

REVISION:

Revision	Date	Description	Author	Approved by - on
00	04/2021	Document Creation	Marcin Pluta	Fabio Scodeller 28-04-2021