



Electrolux

SPARE PARTS LIST

Fabric Care

3485


Item	PNC	ELC	Brand	Model	Market
A	900272965	00	Electrolux	EGS2003	THE
A	900272969	00	Electrolux	EGS2003	MYH

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove ANY detachable parts while the machine is powered. The reason is internal faults may cause shorts to components that are normally at low voltage presenting a shock hazard.

		Fabric Care	
Electrolux Thailand Co.,Ltd. 1910 Electrolux Building New Petchburi Rd. Bangkok Huaykwang Bangkok , 10310 Tel : +662 725 9000		Publication-No. 140303	

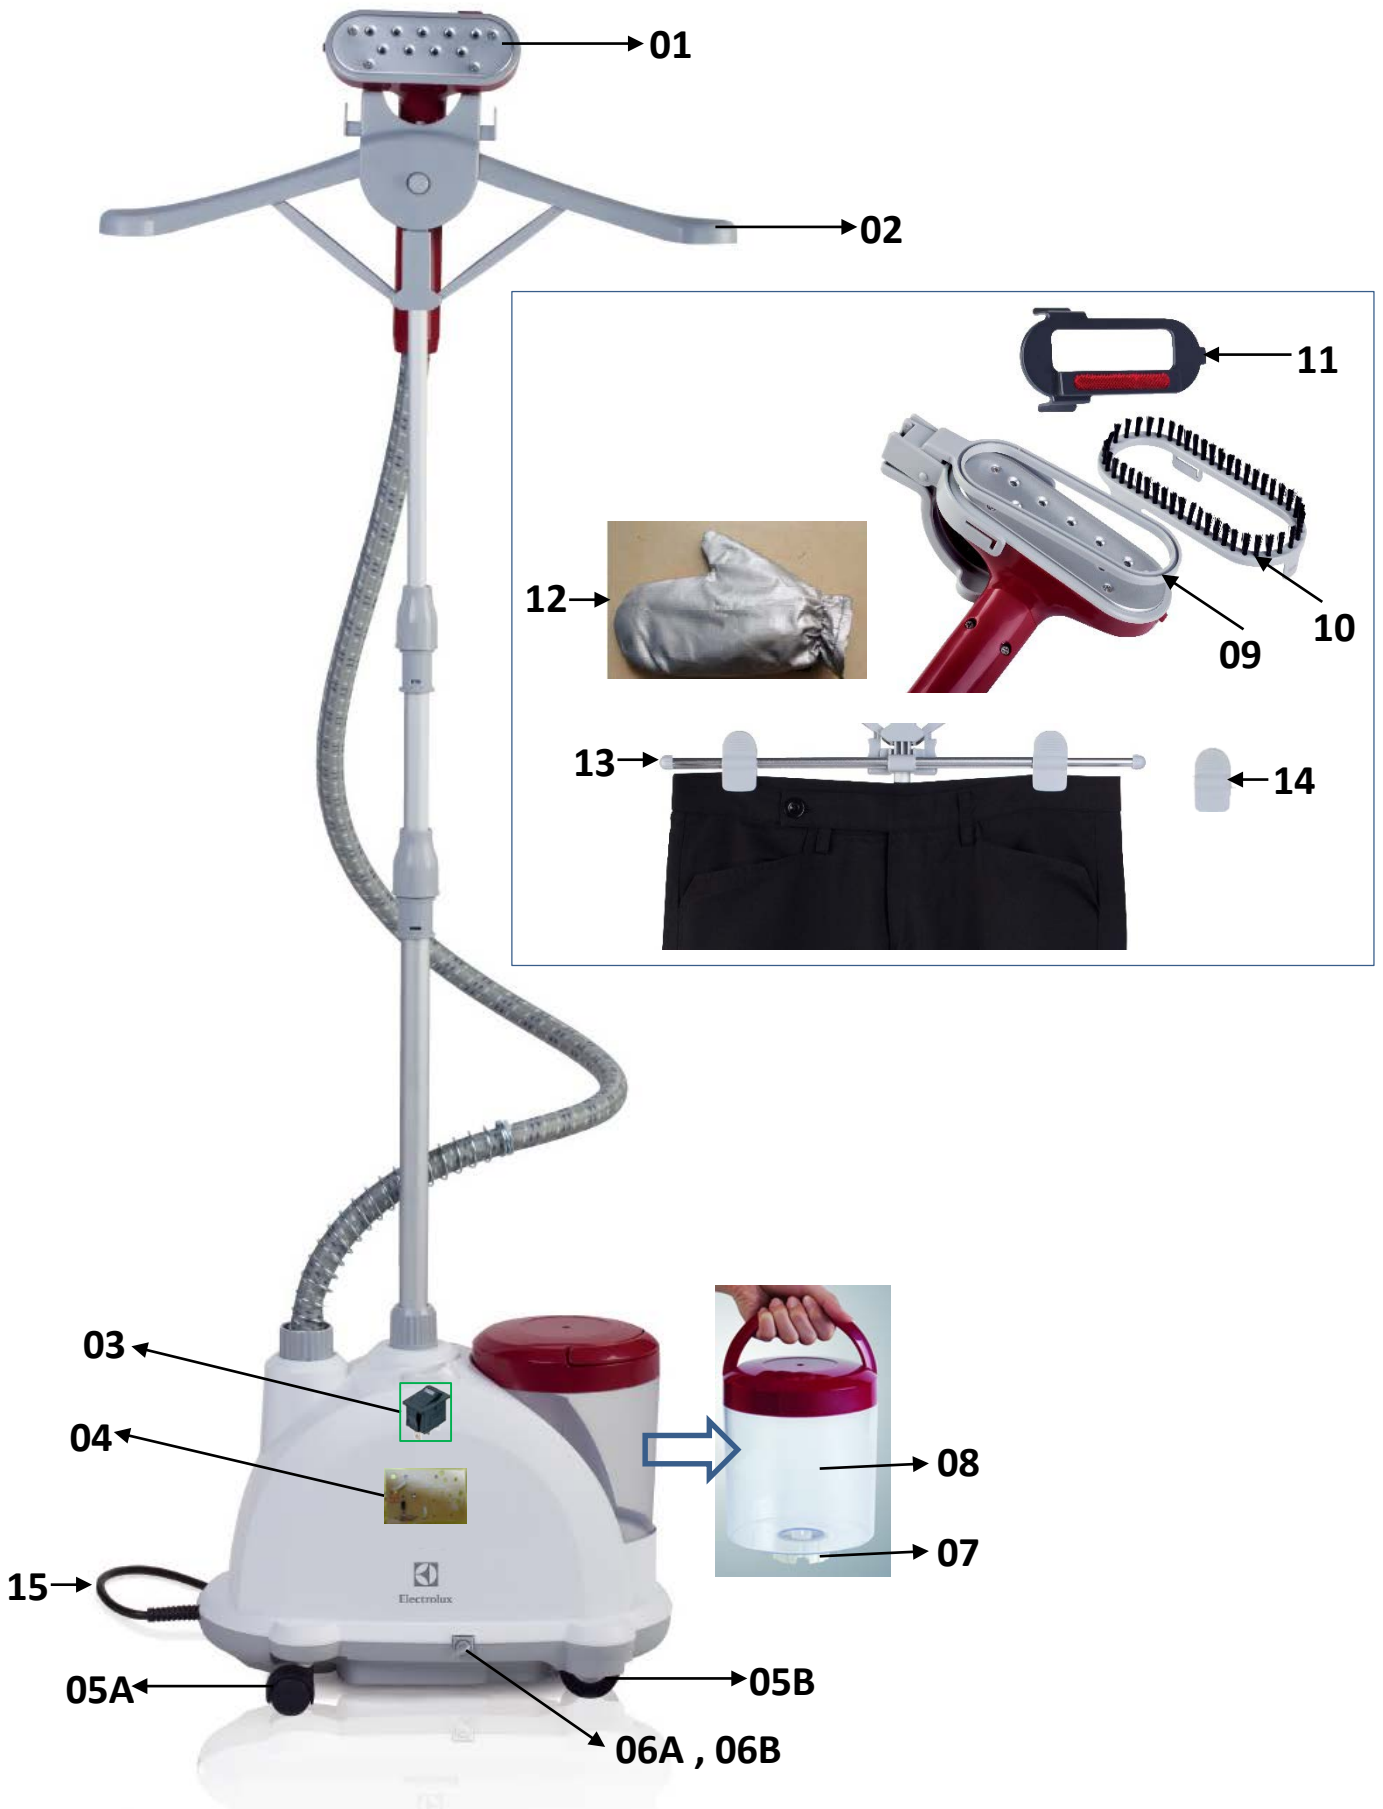

Item	PNC	ELC	Brand	Model	Market
A	900272965	00	Electrolux	EGS2003	THE
A	900272969	00	Electrolux	EGS2003	MYH

Pos.	Part No.	Description
01	F43G0500027R	steam head assy
02	F37G2400002R	cloth rack assy
03	D3089000002R	switch
04	A9541000002R	PCB
05A	F38G0300001R	universal wheels
05B	A4303150005R	directional wheels
06A	Q951467PE46	drain valve
06B	X9514010001R	sealing for drain valve
07	A9506260003R	non-returning valve knob assy.
08	B9542960601R	water tank
09	F42G0900003R	Line clamp
10	F99G1000003	hair brush
11	F47G1300002	Static brush
12	Z1620000006	scald proof glove
13	F45G1100003R	trousers rack
14	F46G1200003R	Fixing clamp
15	D1AF10Z3001R	cord (TH Plug) For PNC 900272965
16	D1AH20Z3001R	cord (UK Plug) For PNC 900272969

