

Electrolux

SPARE PARTS LIST

Cooker

3484

Item	PNC	ELC	Brand	Model	Market
A	900273007	00	Electrolux	ERC7603W	THE
A	900273009	00	Electrolux	ERC7603W	MYH
A	900273011	00	Electrolux	ERC7603W	IDH
A	900273081	00	Electrolux	ERC7603W	VNE

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

Small Appliance
Cooker

Electrolux SEA Pte.,Ltd.
11 Lorong 3 Toa Payoh
Blk B #01-13/14/15
Jackson Square
Singapore 319579
Tel : +65 65078931


Publication-No.
140616









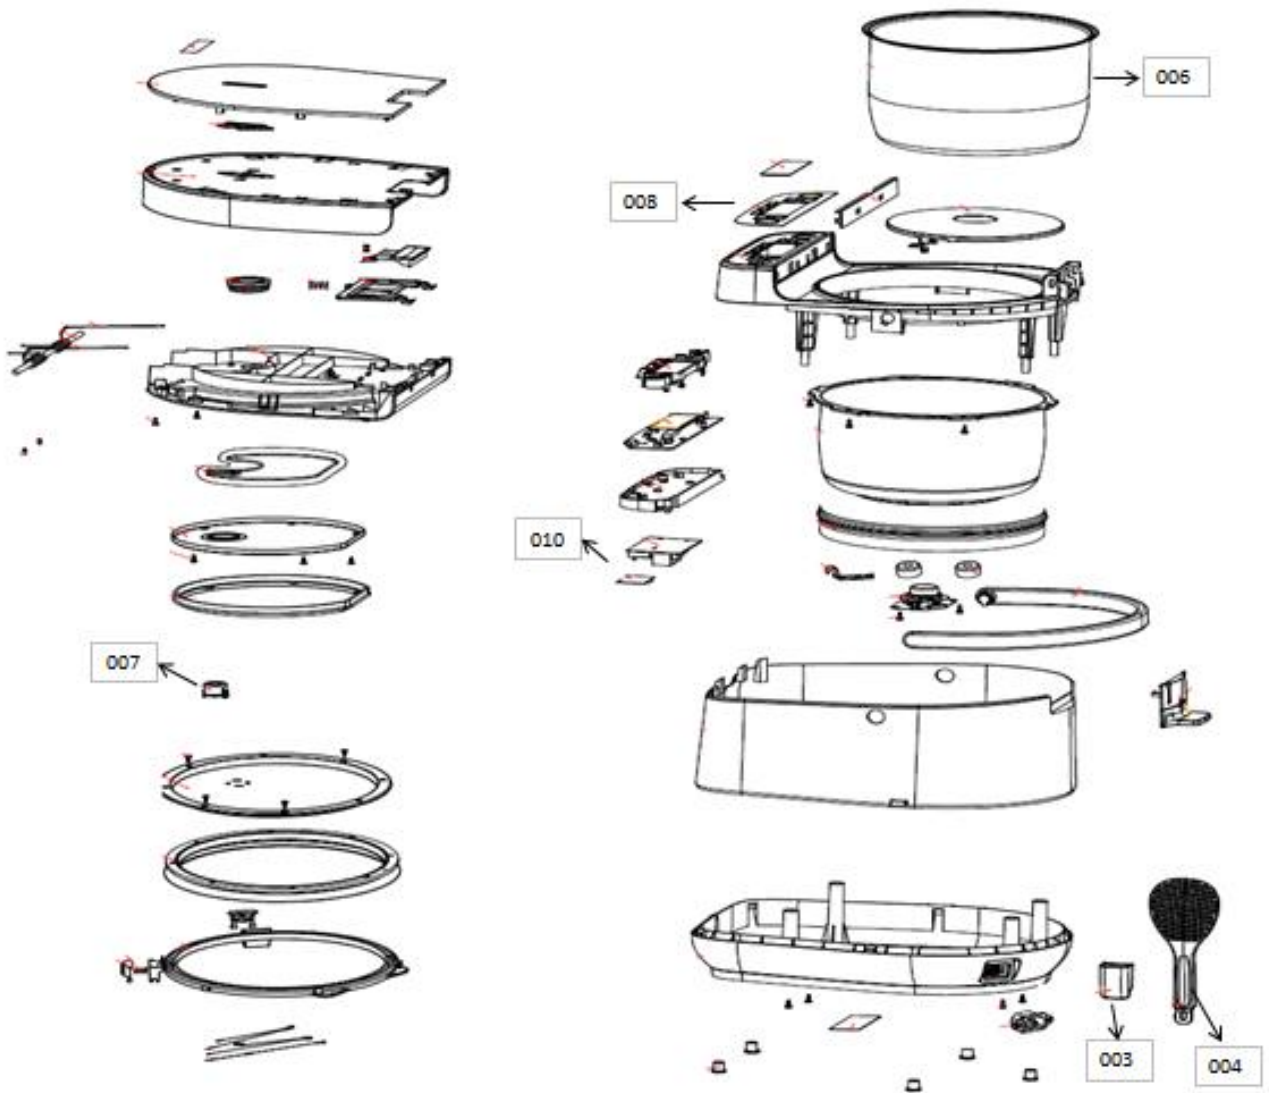



Model

PNC

ERC7603W	900273007
ERC7603W	900273009
ERC7603W	900273011
ERC7603W	900273081

Ex. View Drawing Internal Parts



	PNC	ELC	Brand	Model	Market
	900273007	00	Electrolux	ERC7603W	THE
	900273009	00	Electrolux	ERC7603W	MYH
	900273011	00	Electrolux	ERC7603W	IDH
	900273081	00	Electrolux	ERC7603W	VNE
Nr.	Part code	ANC	Description	Picture	
001	JS1R0609-089-2013	4055279113	steamer tray/蒸层		
002	JS1R0609-088-2027	4055279121	measuring cup/量杯		
003	JS1R0609-088-2026	4055279139	spoon holder/饭勺架		
004	JS1R0609-088-2024	4055279147	rice spoon/饭勺		
005	JS1R0609-088-2025	4055279154	soup spoon/汤勺		
006	JS1R0609-503-3001	4055279162	inner pot/内锅		
007	JS1R0609-802-2059	4055279170	阀帽 valve cap		
008	JS1R0609-802-4031	4055279188	Stick panel/面膜		
009	256159000348	4055279196 (THE)	power line/电源线		
	256159000247	4055279204 (IND/VN)	power line/电源线	 <small>CEE 7/7 plug</small>	
	256159000288	4055279212 (MS/SG)	power line/电源线		
	256159000315	4055279238 (PH)	power line/电源线	 <small>Unipolarized NEMA 1-15 plug</small>	
010	JS1R0609-802-4178	4055279220	电池板组件 battery asm	