

# Electrolux

## SPARE PARTS LIST

Cooker hoods  
3396

Item	PNC	ELC	Brand	Model	Market
A	942150468	01	Electrolux	EFP60460OX	THE

### **SAFETY WARNING**


**Always turn off and unplug the machine before detaching any parts.**

When servicing machines, do not remove ANY detachable parts while the machine is powered. The reason is internal faults may cause shorts to components that are normally at low voltage presenting a shock hazard.

Cooker hoods

Electrolux Thailand Co.,Ltd.  
1910 Electrolux Building  
New Petchburi Rd. Bangkok  
Huaykwang  
Bangkok , 10310  
Tel : +662 725 9000

Publication-No.  
161206

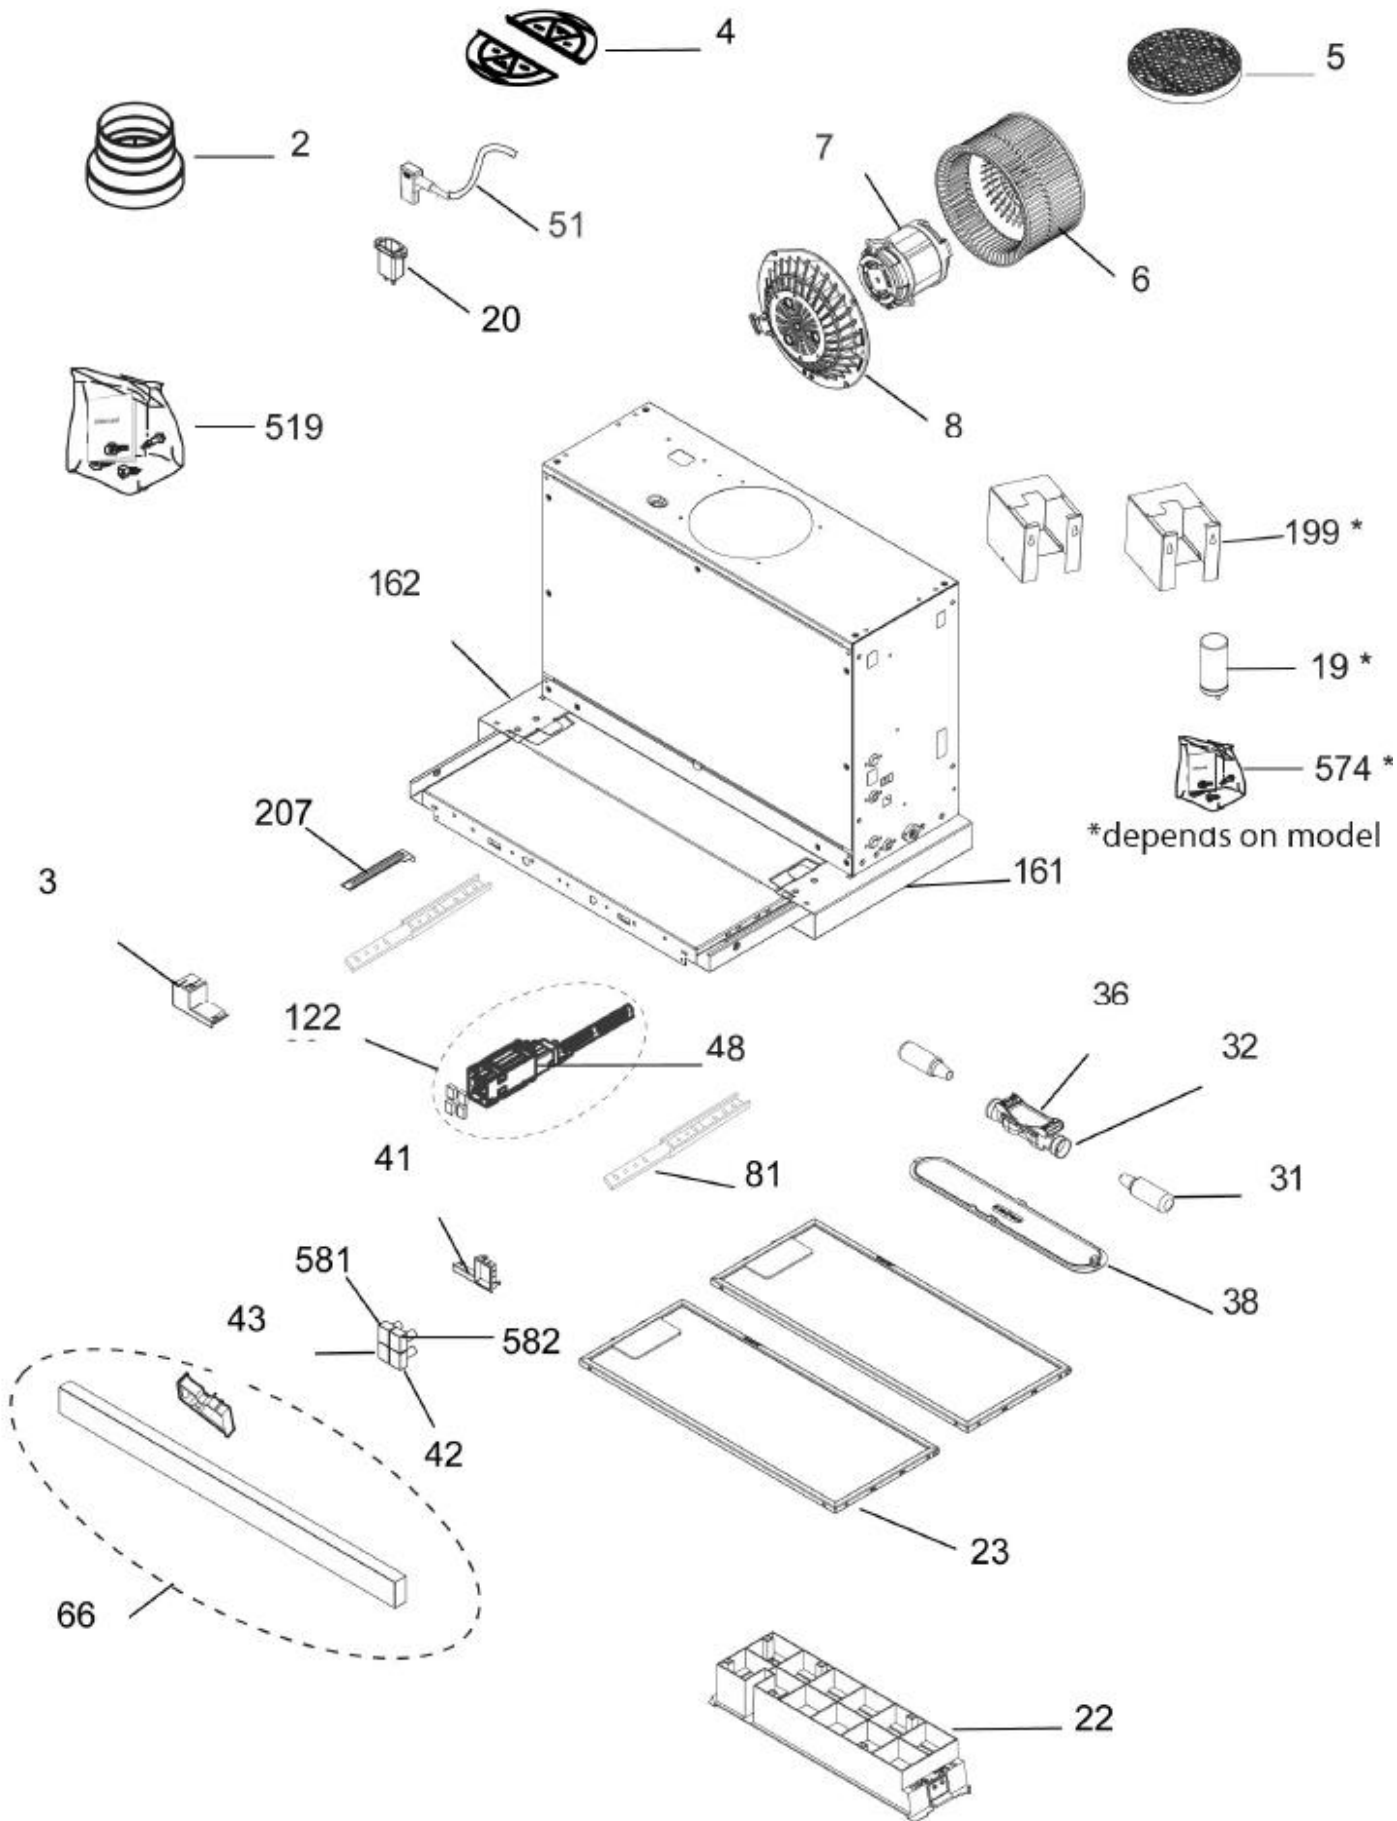

Item	PNC	ELC	Brand	Model	Market
A	942150468	01	Electrolux	EFP60460OX	THE

Pos.	Part No.	Description
2	50253561000	Pipe union,output,air,D.150-125-120
3	4055355970	Connector,grey
4	4055310587	Valve,150
5	50268698003	Baffle,filtering
6	4055355988	Fan wheel,anticlockwise movement,100mm
7	4055356143	Motor,anticlockwise movement
8	4055355996	Support,motor
19	4055306304	Capacitor,4uF o35MM P2 MET.F6.
20	4055354791	Filter,2-ways,noise
22	4055356002	Carbon filter,MOD60
23	4055241147	Fat filter,GFA 2+1+1 185X456,5
31	4055356010	Lamp,led,3W, E14, 230V
32	50266767008	Lampholder,black
36	4055368601	Support,Lamp,neon,3W
38	4055368593	Lamp cover,3W
41	4055356150	Control panel,grey
42	4055356168	Button,light,grey
43	4055356176	Button,motor,grey
48	4055356184	Control,electronic board
51	4055354817	Power cable,SCHUKO 1,5m 2x0,75
66	4055358602	Panel,front,IX 60
81	50280961009	Rail
122	4055378352	Slider,complete,P4T3V+TASTI TT35
161	4055356077	Mould,right
162	4055356085	Mould,left
207	50245854000	Screening bracket
519	4055378436	Documentation bag,with,fixing
574	4055378394	Mounting kit
581	4055356200	Button,speed,vel2
582	4055356218	Button,speed,vel3

