A11829701
CIRCUIT DIAGRAM A118298.XX

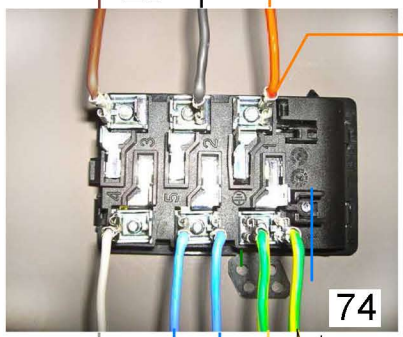

14 POLES CONNECTOR 9

71 LIMIT THERMOSTAT

TOP-GRILL 52

RING 53

OVEN LAMP 20

FAN MOTOR 32

EARTH STRUCTURE

COOLING FAN 34

BOTTOM 57

THERMOSTAT SIGNAL LAMP 67

EL. THERMOSTAT 72

OVEN SWITCH 807180501

SWITCHING DIAGRAM

SET PROGRAMMER LR 41

OVEN SWITCH 7

MAIN SIGNAL LAMP 64

ENERGY REGULATOR WITH DOUBLE CIRCUIT 1 44
LEFT FRONT PLATE

ENERGY REGULATOR WITH SINGLE CIRCUIT 2 45
LEFT REAR PLATE

ENERGY REGULATOR WITH DOUBLE CIRCUIT 3 44
RIGHT REAR PLATE

ENERGY REGULATOR WITH SINGLE CIRCUIT 4 45
RIGHT FRONT PLATE