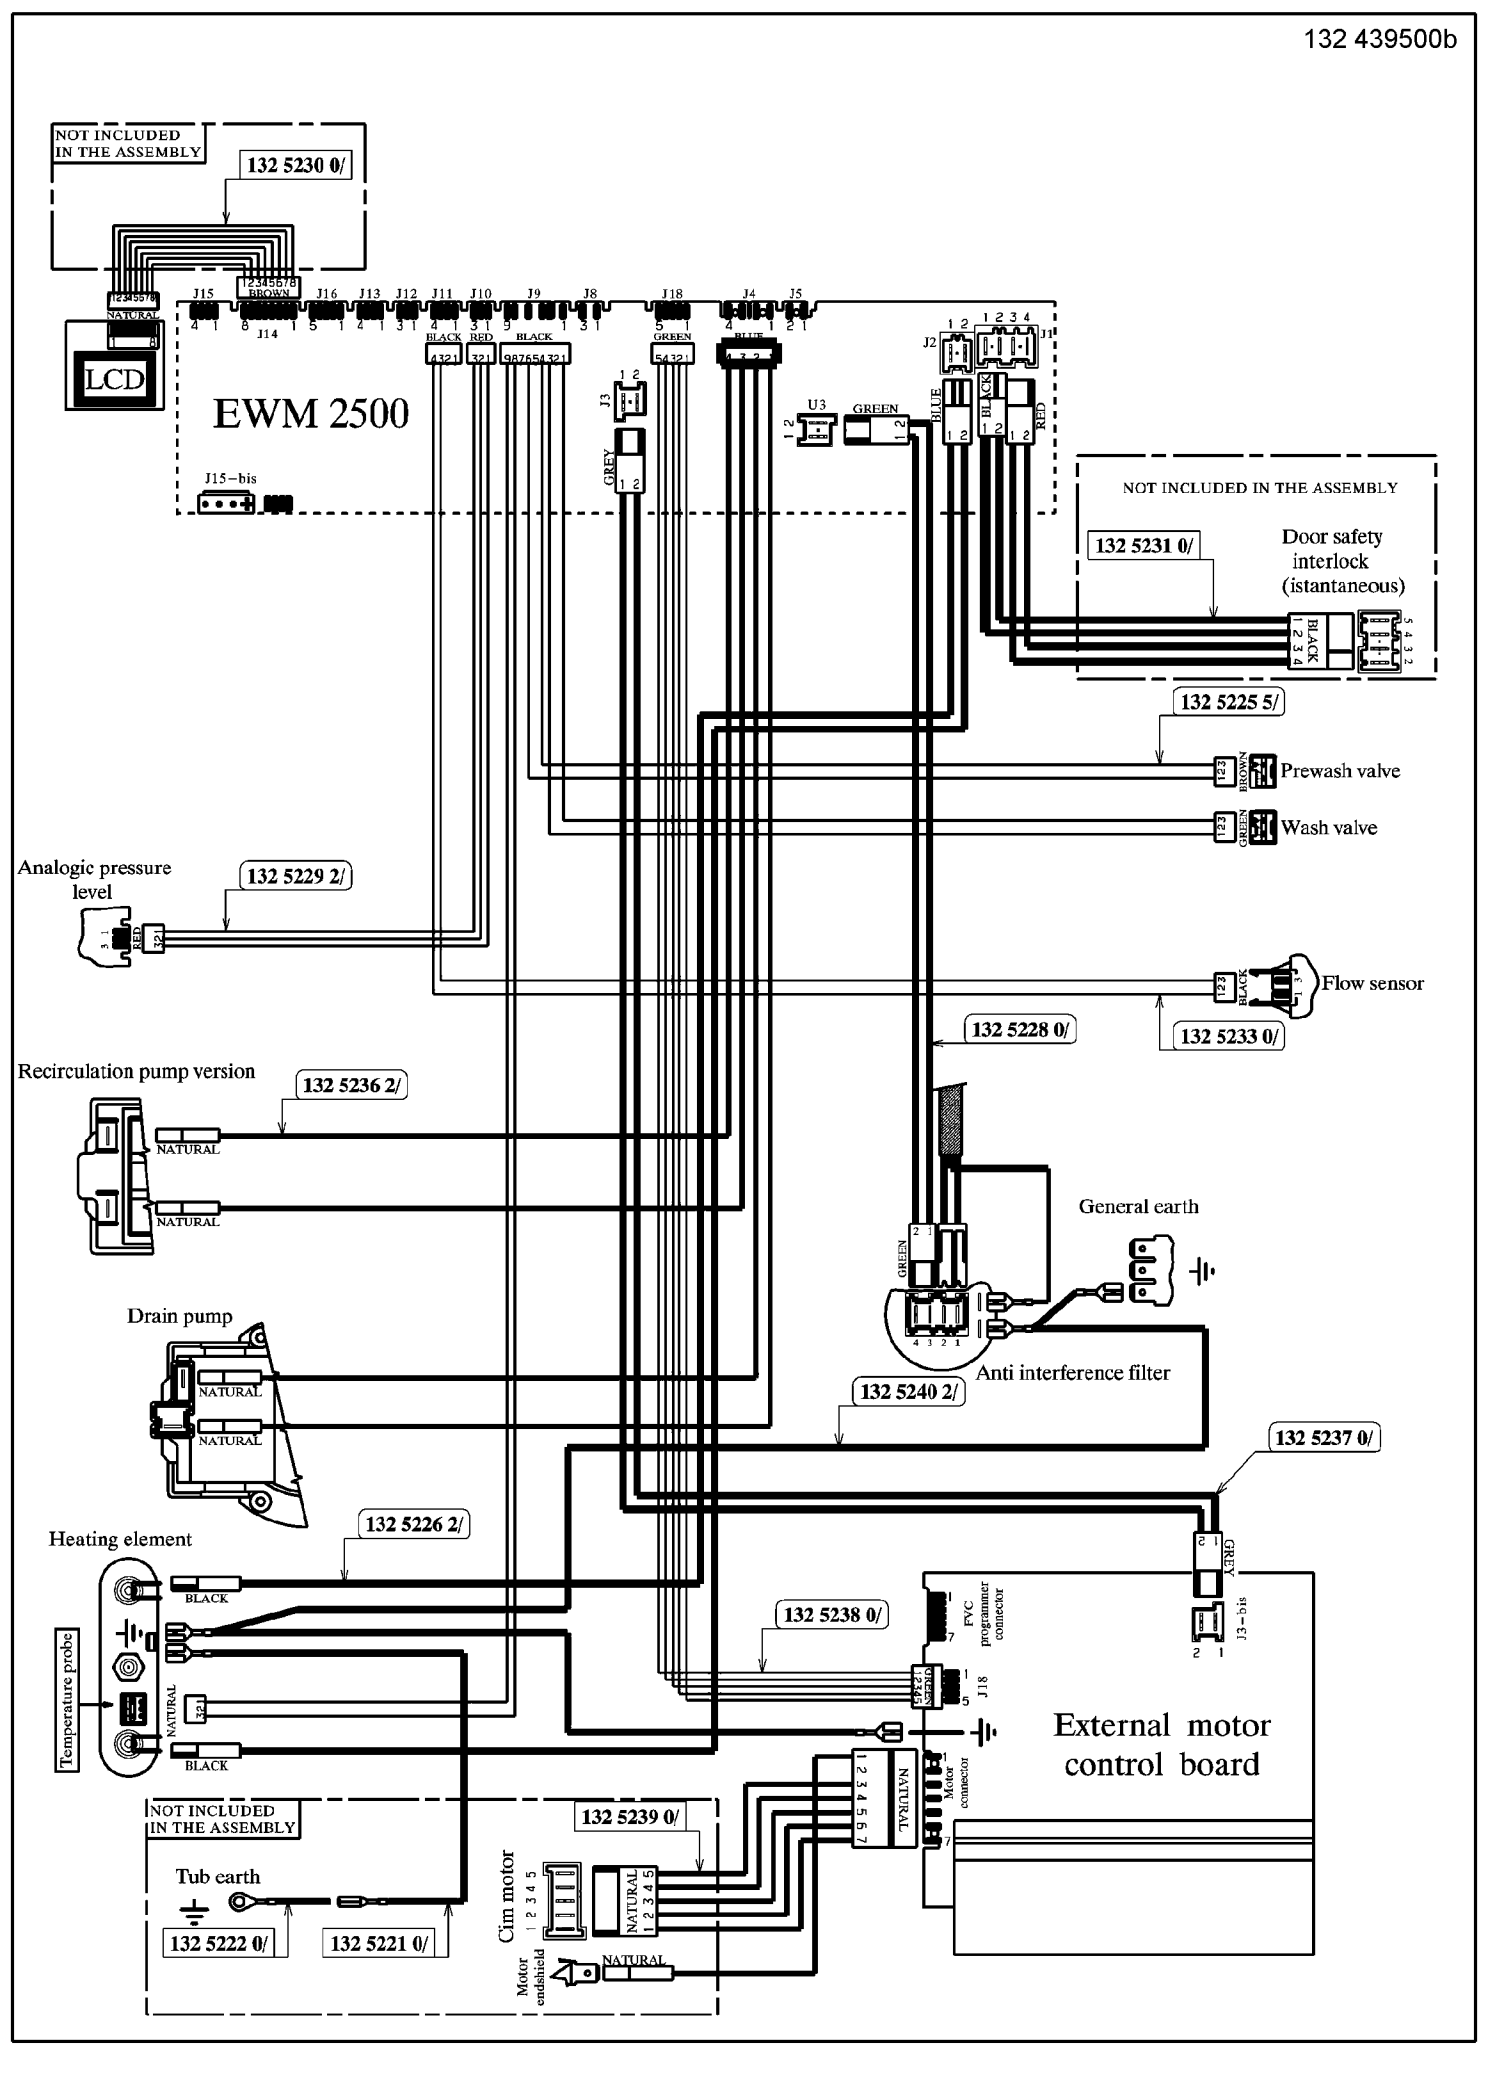
NOT INCLUDED IN THE ASSEMBLY
132 5230 0/
LCD
EWM 2500
J15
J16
J13
J12
J11
J10
J9
J8
J18
J4
J5
J14
J15-bis
J3
J2
J1
U3
NOT INCLUDED IN THE ASSEMBLY
132 5231 0/
Door safety interlock (istantaneous)
132 5225 5/
Prewash valve
Wash valve
Analogic pressure level
132 5229 2/
Flow sensor
132 5233 0/
132 5228 0/
Recirculation pump version
132 5236 2/
General earth
Anti interference filter
Drain pump
132 5240 2/
132 5237 0/
Heating element
132 5226 2/
Temperature probe
132 5238 0/
FVC programmer connector
J18
J3-bis
External motor control board
Motor connector
NOT INCLUDED IN THE ASSEMBLY
132 5239 0/
Tub earth
132 5222 0/
132 5221 0/
Cim motor
Motor endshield