


This drawing contains confidential information and it may not be copied, shown or handed to a third party or otherwise used and it is to be returned promptly to the design owner, who is responsible for the drawing.

Items shown in this drawing must not contain substances that are restricted according to the RoHS Directive Lead, Cadmium, Mercury, Hexavalent Chromium, PBB and PBDE, or substances classified as "banned" or "restricted" according to the Electrolux Restricted Substance List.

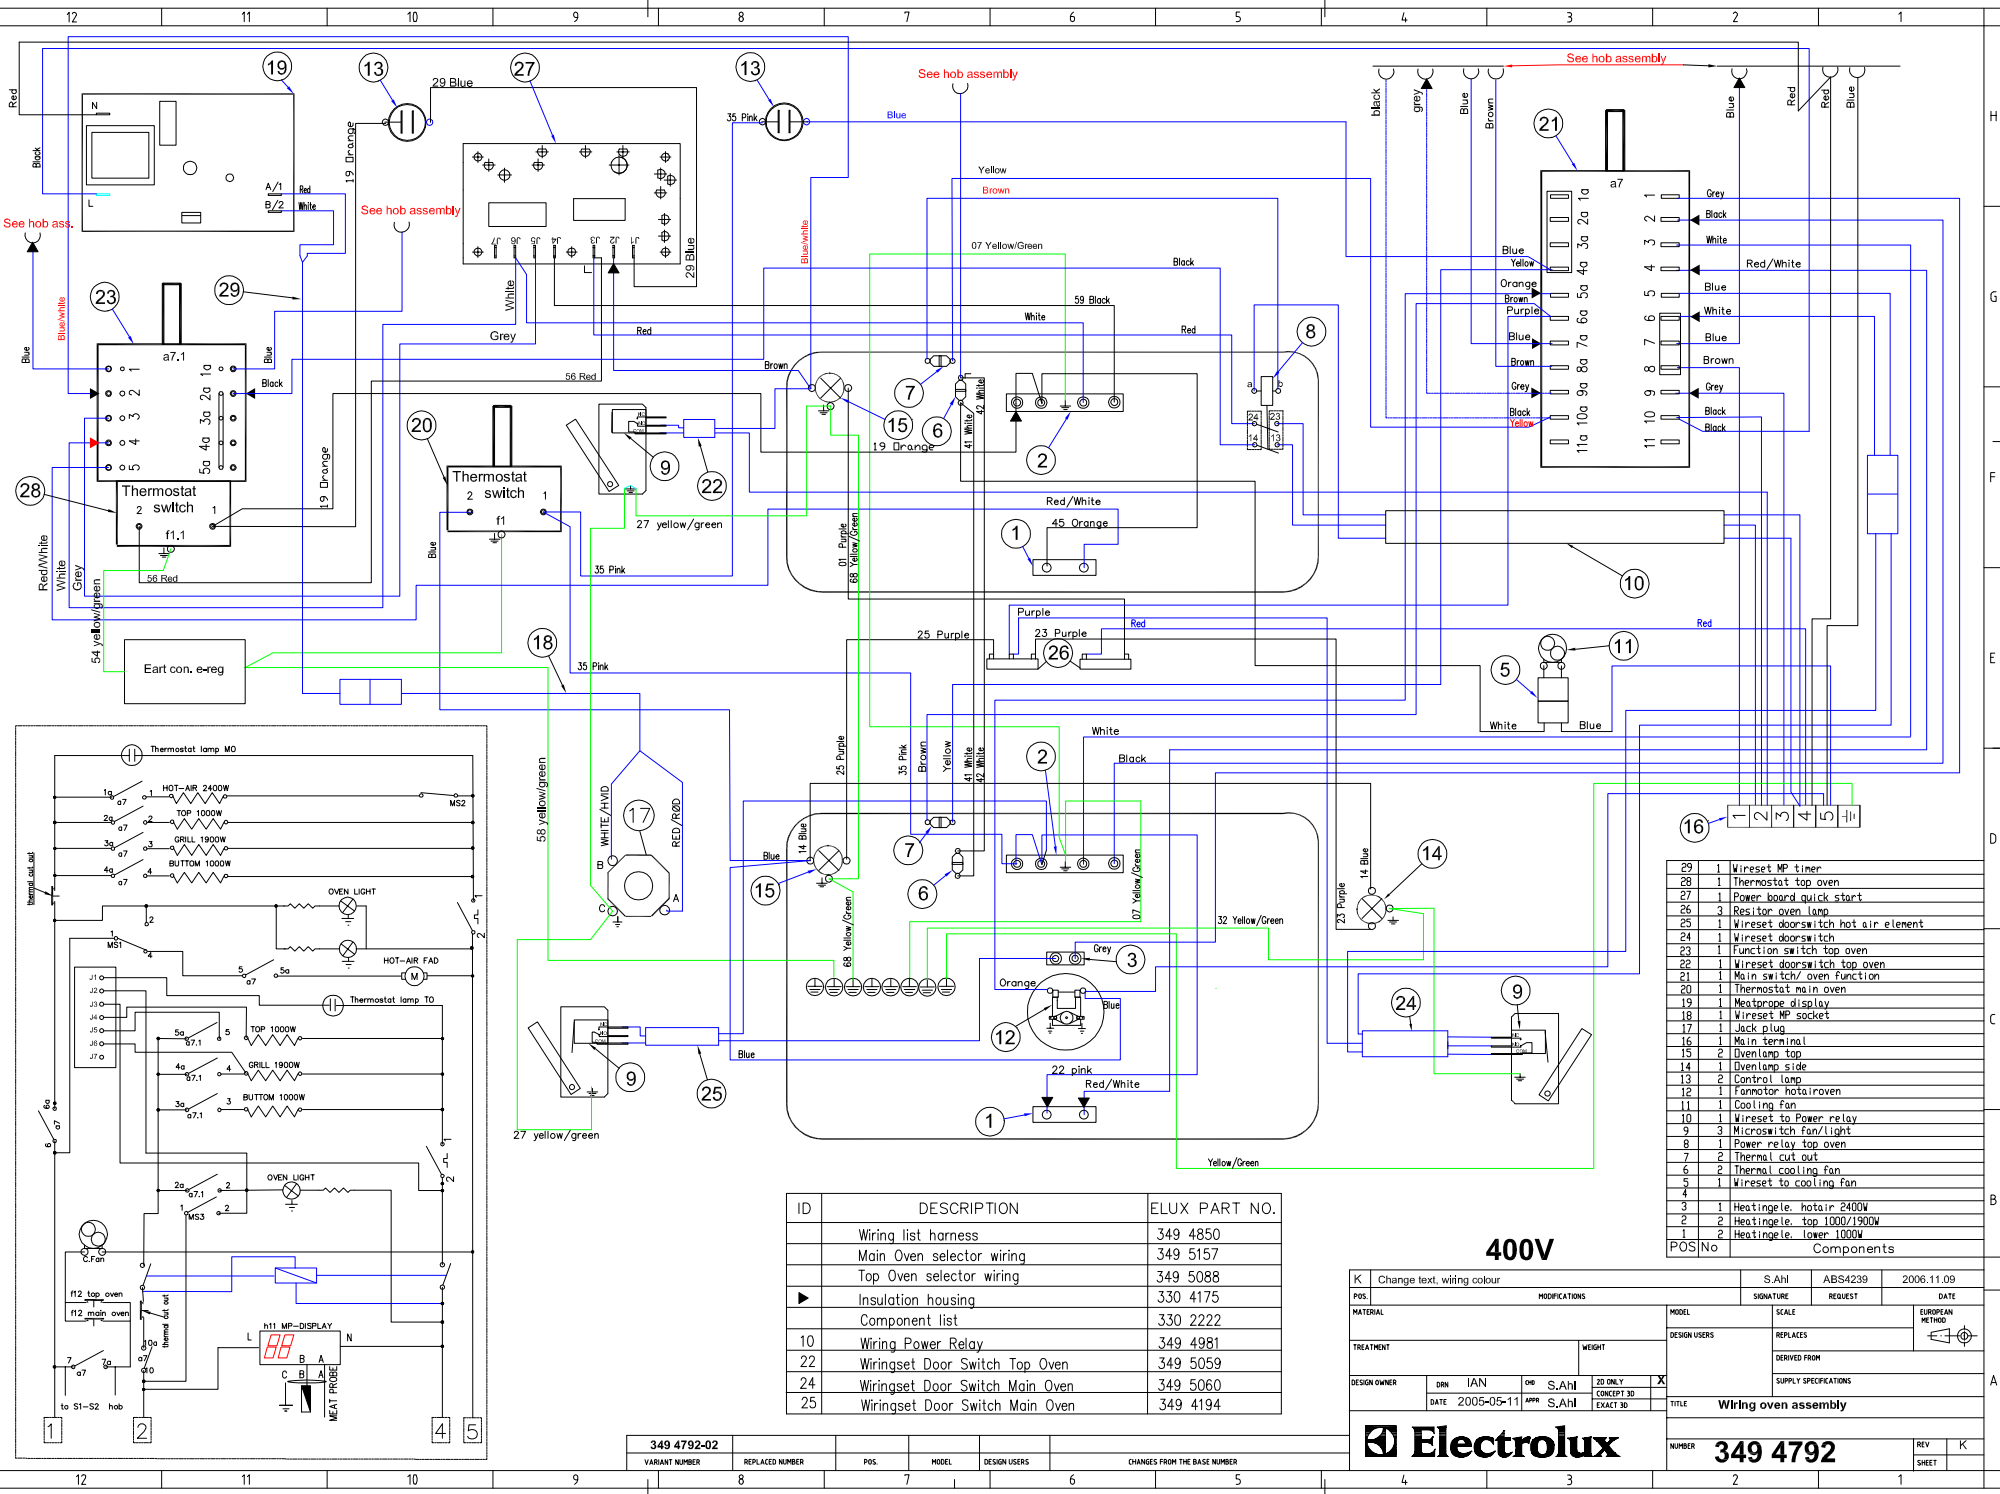

POS/No	Components
29	1 Wireset MP timer
28	1 Thermostat top oven
27	1 Power board quick start
26	3 Resistor oven lamp
25	1 Wireset doorswitch hot air element
24	1 Wireset doorswitch
23	1 Function switch top oven
22	1 Wireset doorswitch top oven
21	1 Main switch/ oven function
20	1 Thermostat main oven
19	1 Heatscope display
18	1 Wireset MP socket
17	1 Jack plug
16	1 Main terminal
15	2 OvenLamp top
14	1 OvenLamp side
13	2 Control lamp
12	1 Formator hotairoven
11	1 Cooling fan
10	1 Wireset to Power relay
9	3 Microswitch fan/Light
8	1 Power relay top oven
7	2 Thermal cut out
6	2 Thermal cooling fan
5	1 Wireset to cooling fan
4	
3	1 Heatingele. hotair 2400W
2	2 Heatingele. top 1000/1900W
1	2 Heatingele. lower 1000W

400V

K Change text, wiring colour		S.Ahl	ABS4239	2006.11.09
POS	MODIFICATIONS	SIGNATURE	REQUEST	DATE
MATERIAL		SCALE	EUROPEAN METHOD	
TREATMENT		DESIGN USERS	REPLACES	
DESIGN OWNER		DERIVED FROM		SUPPLY SPECIFICATIONS
DRN	IAN	OP	S.Ahl	3D ONLY
DATE	2005-05-11	APP	S.Ahl	CONCEPT 3D
				EXACT 3D
TITLE		Wiring oven assembly		
Electrolux		NUMBER	349 4792	
		REV	K	
		SHEET		

349 4792-02	REPLACED NUMBER	POS	MODEL	DESIGN USERS	CHANGES FROM THE BASE NUMBER
VARIANT NUMBER					

GENERAL TOLERANCES  
ANGLES  
LENGTHS AND DIAMETERS