
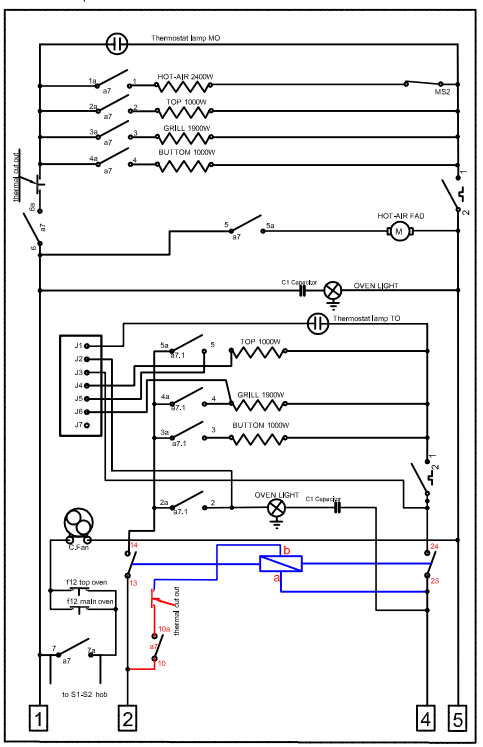


This drawing contains confidential information and is the property of Electrolux. Without whose permission it may not be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written request to the design owner, who is responsible for the drawing.

Items shown in this drawing must not contain substances that are banned according to Directive 2002/95/EC, the RoHS Directive (Lead, Cadmium, Mercury, Hexavalent Chromium, Polychlorinated Biphenyls, Polybrominated Biphenyls) or "Restricted" according to the Electrolux Restricted Materials List.

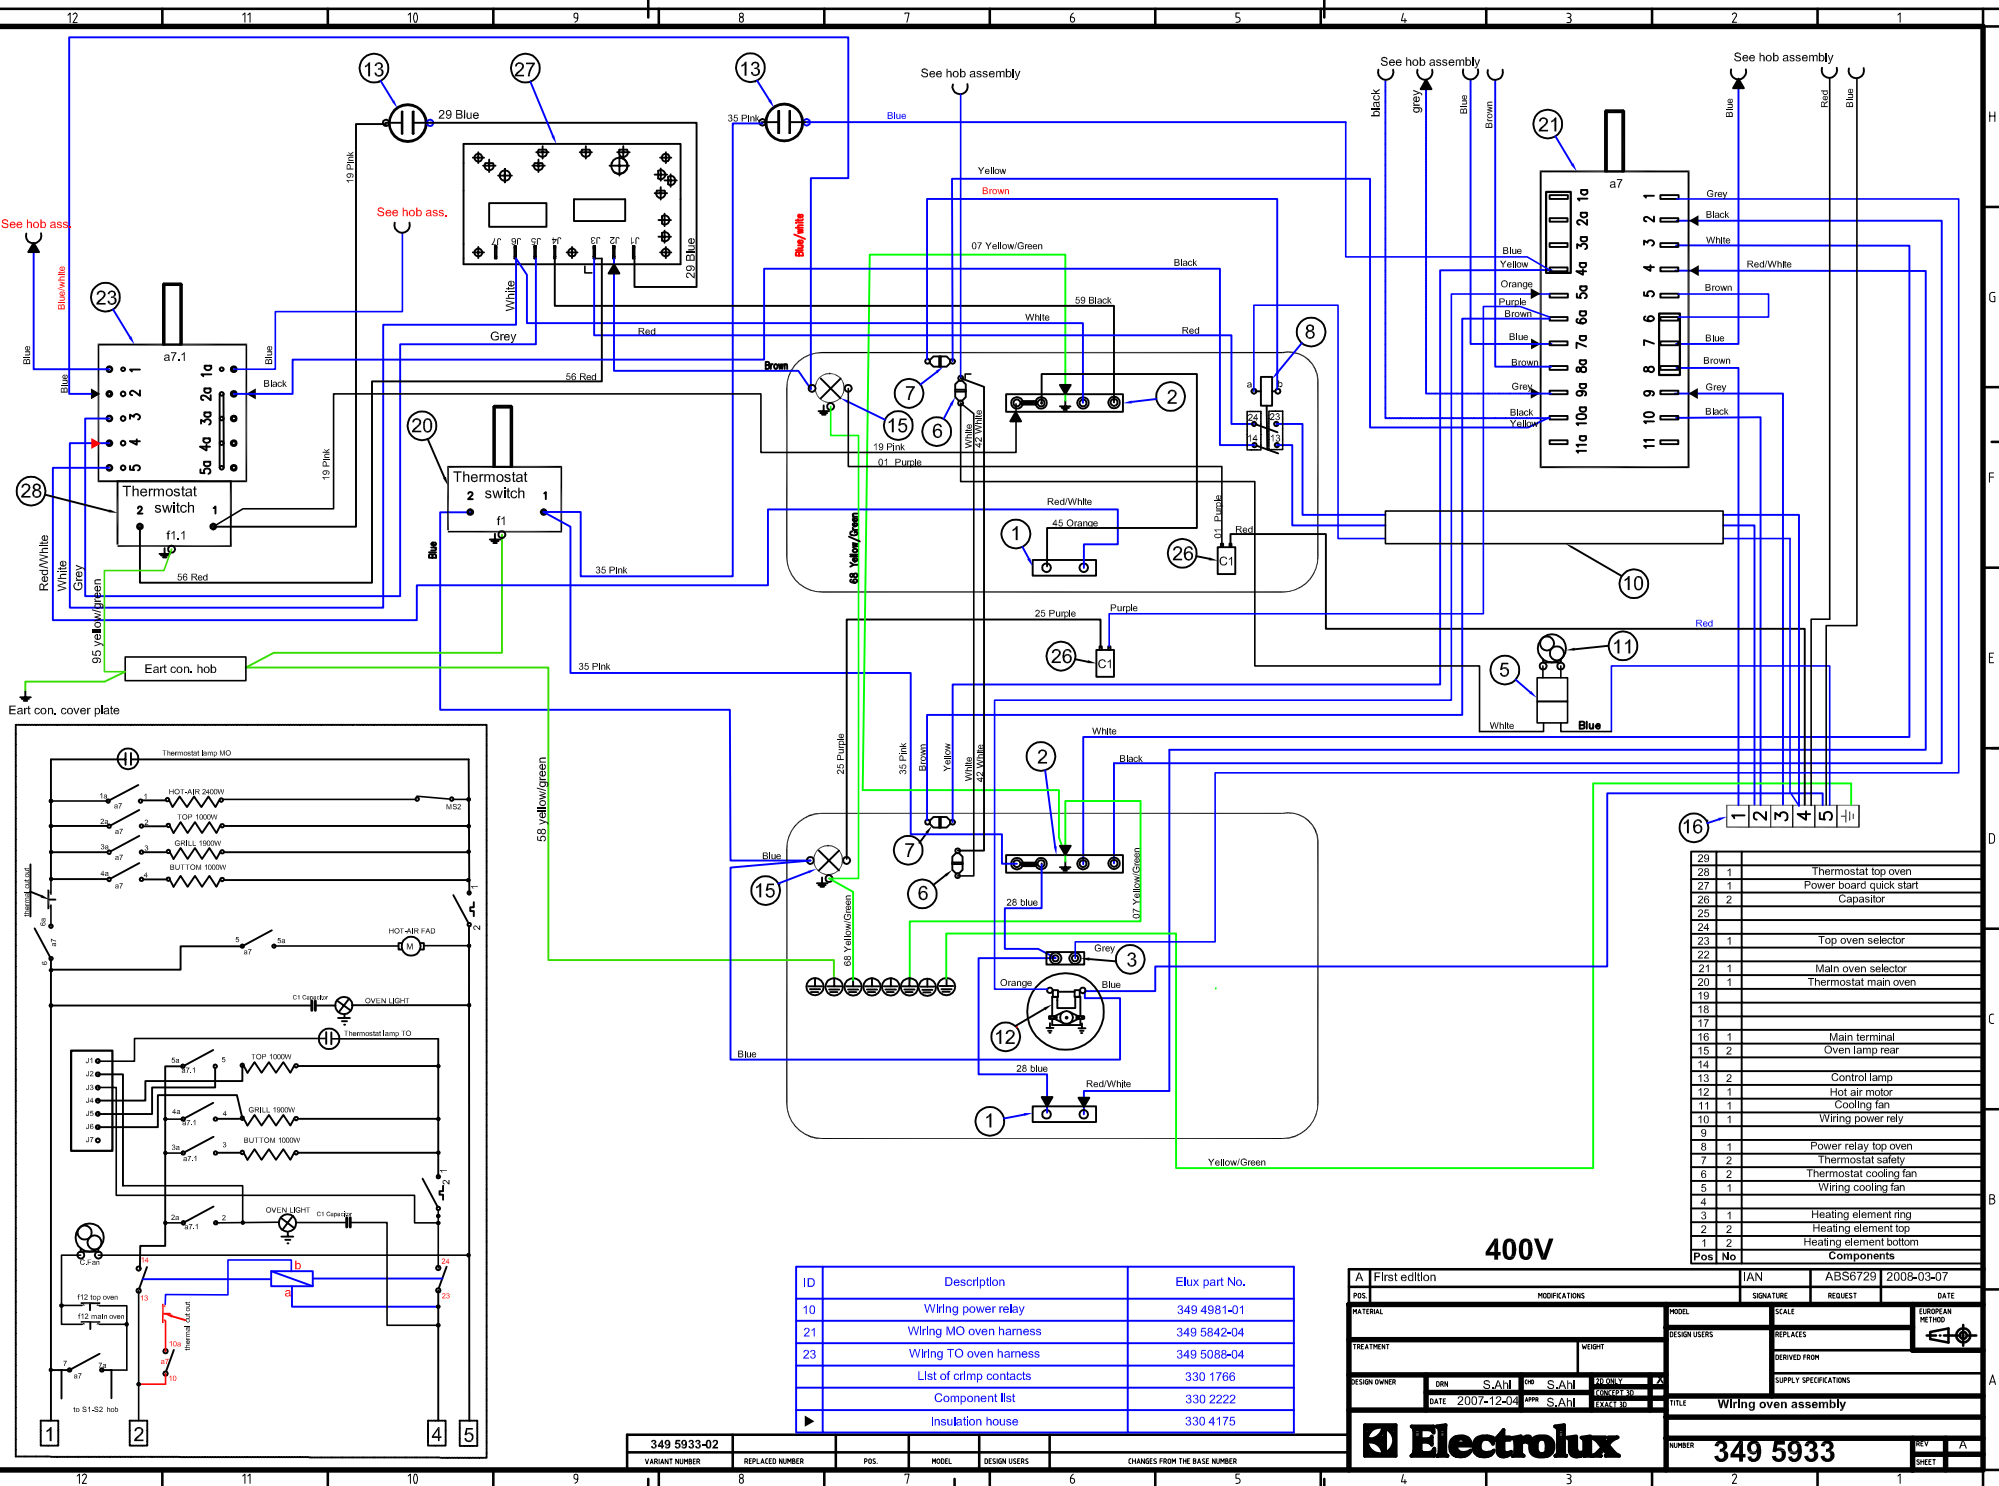

ID	Description	Elux part No.
10	Wiring power relay	349 4981-01
21	Wiring MO oven harness	349 5842-04
23	Wiring TO oven harness	349 5088-04
	List of crimp contacts	330 1766
	Component list	330 2222
	Insulation house	330 4175

Pos	No	Components
29	1	Thermostat top oven
27	1	Power board quick start
26	2	Capacitor
25		
24		
23	1	Top oven selector
22		
21	1	Main oven selector
20	1	Thermostat main oven
19		
18		
17		
16	1	Main terminal
15	2	Oven lamp rear
14		
13	2	Control lamp
12	1	Hot air motor
11	1	Cooling fan
10	1	Wiring power relay
9		
8	1	Power relay top oven
7	2	Thermostat safety
6	2	Thermostat cooling fan
5	1	Wiring cooling fan
4		
3	1	Heating element ring
2	2	Heating element top
1	2	Heating element bottom

400V

A First edition		IAN	ABS6729	2008-03-07
POS	MODIFICATIONS	SIGNATURE	REQUEST	DATE
MATERIAL	WEIGHT	DESIGN USERS	REPLACES	EUROPEAN METHOD
TREATMENT	WEIGHT	DESIGN USERS	REPLACES	EUROPEAN METHOD
DESIGN OWNER	DATE	DATE	DATE	DATE
DATE	2007-12-04	DATE	2007-12-04	DATE
TITLE		Wiring oven assembly		
Electrolux		NUMBER 349 5933		
VARIANT NUMBER		REPLACED NUMBER		POS
MODEL		DESIGN USERS		CHANGES FROM THE BASE NUMBER
REV		A		DRAWING SHEET