

**INSTALLATION OF THE NEW ICEMAKER PART NO. 17098023 ON SIDE BY SIDE
REFRIGERATORS - Rev. 01**

DESCRIPTION:

As from serial no. 714xxxxxx (complete no. 4A714xxxxxx), the appliances listed in tab. A, are equipped with an old icemaker part no. 2416965032 or 2416965024 or 2416277024.

The mentioned icemaker has been replaced by the new one part no. 2417098023 and has a number of improvements over the previous one:


- The lifting of the bail arm is controlled in the head of the icemaker rather than from on the end of the ejector arm.
- The extension for the bail arm has been modified to give a wider surface to sit on the ice cubes.

The part no. for the bail arm is 2417206014 and is included in the icemaker.

Moreover, it is necessary to order the shelf part no. 2417409014.

SOLUTION:


To install the icemaker:

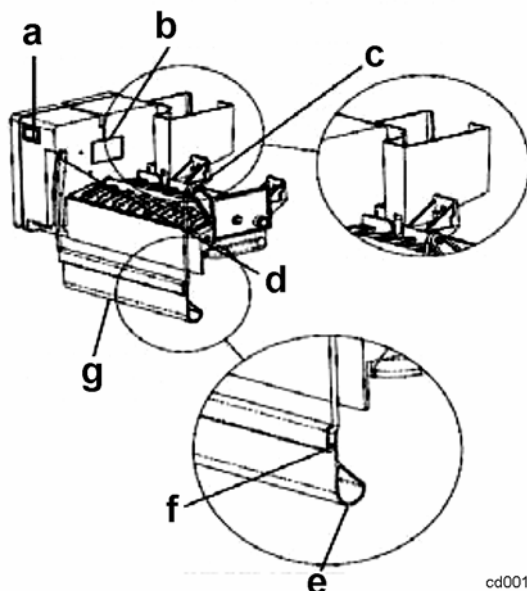

Key:

- a – ON/OFF switch
- b – label location
- c – bail arm right side support
- d – lift for bail arm
- e – wide edge towards the bottom
- f – top edge towards the front
- g – new bail arm extension

1. Install the bail arm extension in the icemaker.
Both edges e) and f) must be placed correctly as shown in the figure above so that the extension can fold to the back when the bucket is installed.
Push the extension on until it clicks against the bail arm.

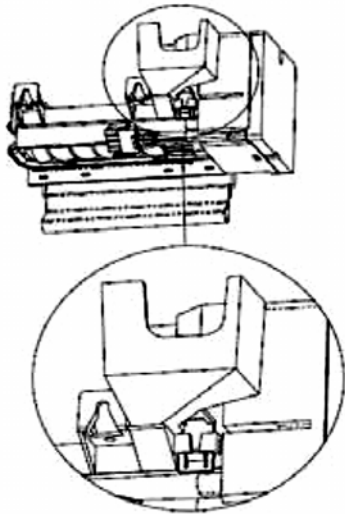

Detail of the fill cup

cd001978

2. Install the fill cup in the icemaker as shown in the figure above.
The fill cup tab pushes into channel on the ice mould next to the head of the icemaker.

3. Remove the ice bucket from the refrigerator.

4. Remove the old icemaker from the refrigerator.

5. Install the new icemaker.

6. Reinstall the ice bucket.

PART NO.:

Tab. B

Description	Previous part no.	New part no.
ICEMAKER	241 69 65-03 / 2 or 241 69 65-02 / 4 or 241 62 77-02 / 4	241 70 98-02 / 3
BAIL ARM	5304 43 66-02 / 8	241 72 06-01 / 4 (included in the kit)
SHELF	241 69 17-01 / 7	241 74 09-01 / 4 (to be ordered)

INTERCHANGEABILITY:

The new icemaker replaces the old one.

MODELS INVOLVEDI:

Tab. A

PNC	MODEL	BRAND	PUBLICAITON NO.	OLD PART NO.
09300009503	FRRC25V6DW3	Frigidaire	599371232	241 62 77-02 / 4
09300009701	GLVC25VBDB1	Frigidaire	599371206	241 62 77-02 / 4
09300009801	GLVC25V7DB1	Frigidaire	599371216	241 62 77-02 / 4
09300010903	FRRC25V6DB3	Frigidaire	599371228	241 62 77-02 / 4
92501009401	ENL6298X1	Electrolux	599702671	241 62 77-02 / 4
92501009403	ENL6298X3	Electrolux	599372799	241 62 77-02 / 4
92501011901	ENL62981X1	Electrolux	599373332	241 62 77-02 / 4
92501011902	ENL62981X2	Electrolux	599373332	241 62 77-02 / 4
92501011903	ENL62981X3	Electrolux	599373332	241 62 77-02 / 4
92501011904	ENL62981X4	Electrolux	599373332	241 69 65-02 / 4
92501012003	S756281KG3	AEG Electrolux	599372439	241 62 77-02 / 4
92501012303	ENL6298K3	Electrolux	599372949	241 62 77-02 / 4
92501012400	ENL6298KX	Electrolux	599371262	241 62 77-02 / 4
92501012402	ENL6298KX2	Electrolux	599375333	241 69 65-02 / 4
92501012405	ENL6298KX5	Electrolux	599373269	241 62 77-02 / 4
92501013003	ENL6098W3	Electrolux	599371226	241 62 77-02 / 4
92501013801	ENL62981KS1	Electrolux	599373957	241 62 77-02 / 4
92501013901	ENL62981KX1	Electrolux	599373981	241 62 77-02 / 4
92501013903	ENL62981KX3	Electrolux	599373981	241 62 77-02 / 4
92501014001	ENL62981XX1	Electrolux	599373982	241 62 77-02 / 4
92501014003	ENL62981XX3	Electrolux	599373982	241 62 77-02 / 4
92501014100	S75628KG	AEG Electrolux	599372326	241 62 77-02 / 4
92501014103	S75628KG3	AEG Electrolux	599375293	241 62 77-02 / 4
92501017600	ERL6298XX0	Electrolux	599383918	241 69 65-03 / 2
92501017700	ERL6298XX10	Electrolux	599383717	241 69 65-03 / 2
92501017800	S75628SK10	AEG Electrolux	599383121	241 69 65-03 / 2
92501017801	S75628SK11	AEG Electrolux	599383196	241 69 65-03 / 2
92501017904	QT5000FX4	Husqvarna Electrolux	599384079	241 69 65-03 / 2
92501018000	ERL6296KK10	Electrolux	599381364	241 69 65-03 / 2
92501018100	ERL6296XK0	Electrolux	599381711	241 69 65-03 / 2
92501018200	ERL6296W0	Electrolux	599381396	241 69 65-03 / 2
92501018300	ERL6296SK10	Electrolux	599381364	241 69 65-03 / 2
92501018401	ERL6296XK11	Electrolux	599700085	241 69 65-03 / 2
92501018600	S75628SK0	AEG Electrolux	599383121	241 69 65-03 / 2
92501018602	S75628SK2	AEG Electrolux	599383196	241 69 65-03 / 2
92501018800	ERL6296KK0	Electrolux	599381569	241 69 65-03 / 2

PNC	MODEL	BRAND	PUBLICAITON NO.	OLD PART NO.
92501018900	ERL6296SK0	Electrolux	599381569	241 69 65-03 / 2
92501018902	ERL6296SK2	Electrolux	599701251	241 69 65-03 / 2
92501019000	ERL6296XX0	Electrolux	599381711	241 69 65-03 / 2
92501019002	ERL6296XX2	Electrolux	599389966	241 69 65-03 / 2
92501019200	S65628SK	AEG Electrolux	599381544	241 69 65-03 / 2
92501019500	JLAFFS2007	John Lewis	599383459	241 69 65-03 / 2
92501019601	ERL6296W10	Electrolux	599701387	241 69 65-03 / 2

REVISIONS:

Revision	Date	Description
00	04/2008	Document edition
01	08/2008	Added old part nos. and updated Tab.A