

**SERVICE BULLETIN**

Dometic GmbH, In der Steinwiese 16, D-57074 Siegen

Dometic CRAMER ovens, COE-FULL 958 0509-55 + COE-FULL DUFU958 0509-60

**Max temperature in the oven is too low**

The max temperature in the oven is in some cases too low.

Therefore the oven must be checked at the ordinary service of the vehicle.

Normal max temperature is 230°C-240°C after 45 minutes.

The temperature is to be measured in the middle of the oven. That position is if the thermometer is placed on the grid on the second lowest position.



If the oven does not reach the required temperature the following has to be checked:

1. Gas pressure has to be 30mbar.
2. Oven door must be tight and the sealing must be ok.
3. Ambient temperature must be above 20°C.
4. Air inlets must be free. (check through the lowest door)


**If everything above checked and ok, the injector has to be replaced.**



1. Remove the two screws (torx 15).



2. Dismount the burner.

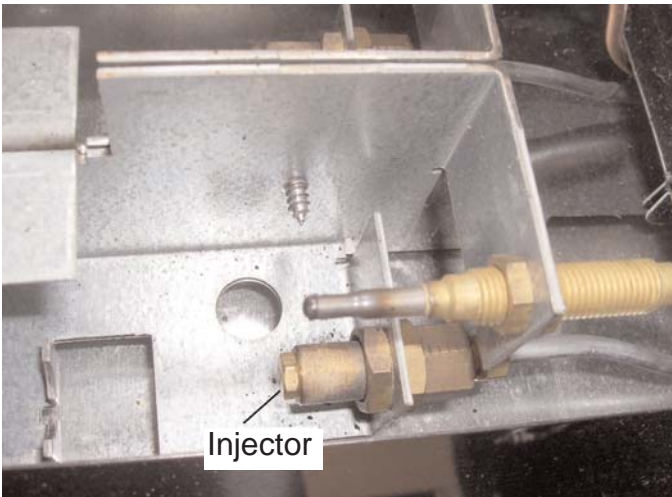

3. Remove the injector (7mm).

4. Mount the new injector and replace the burner.

5. Make sure the ignitor does not have contact with the burner.

Run the oven again.

The injector and the service form must be sent back together with an invoice to your sales company.

The sales company will pay the max. time of 45 minutes for the exchange of the injector.