

### Fan motor noise

**DESCRIPTION:**

During the use of the appliance the Consumer can experiences noise from the fan motor in the freezer's evaporator battery.

**SOLUTION:**

In case of such kind of claims follow the below service instructions. It's needed to replace both fan motor (4055091708) and fan (4055091690). It's requested the usage of an additional seal that can be ordered as 4055145082.

**MODELS INVOLVED:**

Side-by-Side models: ENL60710S, ENL60710S1, ENL60710X, ENL60812X, ENL62610S, S56000XNS0, S56090XNS0, S66090XNS0, S85596SK, S85606SK, S85616SK, S85618SK, S86090XVX0, ZRS9600FA.

**SERVICE INSTRUCTIONS:**

1. Remove the clamp fan



2. Remove the fan



3. Unscrew



4. Remove the fixture motor



5. Attach the seal (4055145082)



6. Insert the new fan motor



7. Fix fixture motor



8. Assembly the clamp to the new fan




9. Assembly the new fan



10. Lock paint



11. Re-assemble harness loosely

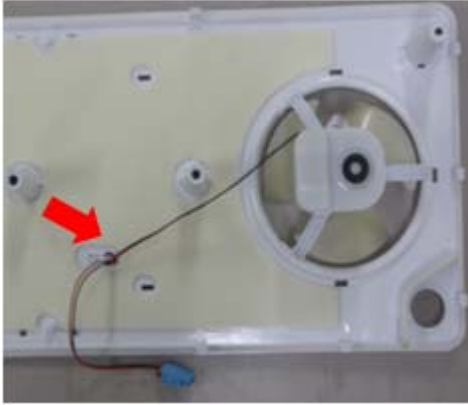

**REVISION:**

Revision	Data	Description	Author	Approved by - on
00	05/2011	Document creation	PR	