

FAULTY TEMPERATURE SENSOR

Electronic appliances can be provided with two different types of temperature sensors:

1. replaceable (part number is available in the spare part list of the appliance)
2. not replaceable (part number is not available in the spare part list of the appliance)

The cables of the temperature sensors that are not replaceable are foamed on the inside of the appliance.

In case of a faulty temperature sensor that is not replaceable (which is displayed through a symbol on the circuit board or after checking it by following the procedure described in the Service Instruction Publ no. 599374205), the appliance can be repaired by ordering the relevant kit as described in Tab. A.

SPARE PARTS NOS:

7 different kits have been created according to the different installations of the temperature sensors:

| KIT | SPARE PART NO. | TYPE OF INSTALLATION | |
|------|----------------|---|-----|
| A1 | 50286481002 | Only for (cooler) Door On Door type refrigerators with ERF2000 circuit board | |
| A2 | 50286482000 | Only for (cooler) Door On Door type refrigerators with FLEC circuit board | |
| A3 | 4055010708 | Only for 4-Star Door On Door type refrigerators with ERF2000 circuit board | (2) |
| A4 | 4055120028 | Only for 340 Cooler Built-In Door On Door type refrigerators with ERF2000 board | (3) |
| A4-1 | 4055120036 | Only for 340 Cooler Built-In Door On Door type refrigerators with ERF2000 board | (3) |
| A4-2 | 4055120044 | Only for 340 Cooler Built-In Door On Door type refrigerators with ERF2000 board | (3) |
| A4-3 | 4055120051 | Only for 340 Cooler Built-In Sliding Door type refrigerators with ERF2000 board | (4) |
| A4-4 | 4055120069 | Only for 340 Cooler Built-In Sliding Door type refrigerators with ERF2000 board | (4) |
| B | 50286483008 | Foamed sensor with foamed cable | |
| C | 50286484006 | Sensor in view with foamed cable | |
| C1 | 50292572000 | Sensor in view with foamed cable (only for ZERO DEGREE and 4-DOOR models) | (2) |
| D | 50286485003 | Accessible sensor with foamed cable | |

Note:

To replace the display board, instead of the sensor itself, is suggested as possible solution in some appliances; the display board needs to be replaced by ordering the related spare part number specified in Tab. A

Note 2

(only applicable to the evaporator temperature sensor):

To repair the evaporator temperature sensor fault, the display circuit board needs to be replaced by ordering the related spare part number specified in Tab. A

Note 3:

For power board 2425237183 and previous replacements.

Note 4:

For power board 2425237134 and previous replacements.

The kits include:

50286481002 - KIT A1

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------------------|----------|
| 2425035454 | ERF 2000 control and display board | 1 |
| 5993741346 | Service Instructions | 1 |

50286482000 - KIT A2

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|--|----------|
| 2425035371 | ERF 2000 control and display board | 1 |
| 50287143007 | Connector + wires for wiring system | 1 |
| 50287144005 | Connector + wires for temperature sensor | 1 |
| 50287145002 | 15 mm heat shrink tubing | 2 |
| 5993741353 | Service Instructions | 1 |

4055010708 - KIT A3

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------------------|----------|
| 2425035611 | ERF 2000 control and display board | 1 |
| 5997123939 | Service Instructions | 1 |

4055120028 - KIT A4

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------|----------|
| 2425237811 | ERF 2000 control board | 1 |
| 2425650369 | ERF 2000 visual board | 1 |
| 5997362453 | Service Instructions | 1 |

4055120036 - KIT A4-1

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------|----------|
| 2425237811 | ERF 2000 control board | 1 |
| 2425650377 | ERF 2000 visual board | 1 |
| 5997362453 | Service Instructions | 1 |

4055120044 - KIT A4-2

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------|----------|
| 2425237811 | ERF 2000 control board | 1 |
| 2425650385 | ERF 2000 visual board | 1 |
| 5997362453 | Service Instructions | 1 |

4055120051 - KIT A4-3

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------|----------|
| 2425237811 | ERF 2000 control board | 1 |
| 2425136609 | ERF 2000 visual board | 1 |
| 5997362453 | Service Instructions | 1 |

4055120069 - KIT A4-4

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------|----------|
| 2425237811 | ERF 2000 control board | 1 |
| 2425136617 | ERF 2000 visual board | 1 |
| 5997362453 | Service Instructions | 1 |

50286483008 - KIT B

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------------------|----------|
| 2425155013 | Temperature sensor for the service | 1 |
| 2425156011 | Temperature sensor housing cover | 1 |
| 2230073013 | White screw cover | 1 |
| 5190900133 | Fixing screw | 1 |
| 50287147008 | 50 mm heat shrink tubing | 1 |
| 50287145002 | 15 mm heat shrink tubing | 2 |
| 5993741361 | Service Instructions | 1 |

50286484006 - KIT C

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------------------|----------|
| 2425155013 | Temperature sensor for the service | 1 |
| 50287147008 | 50 mm heat shrink tubing | 1 |
| 50287145002 | 15 mm heat shrink tubing | 2 |
| 5993741379 | Service Instructions | 1 |

50292572000 - KIT C1

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------------------|----------|
| 2425155021 | Temperature sensor for the service | 1 |
| 50287147008 | 50 mm heat shrink tubing | 1 |
| 50287145002 | 15 mm heat shrink tubing | 2 |
| 5993741379 | Service Instructions | 1 |

50286485003 - KIT D

| SPARE PART NO. | DESCRIPTION | QUANTITY |
|----------------|------------------------------------|----------|
| 2425155013 | Temperature sensor for the service | 1 |
| 50287147008 | 50 mm heat shrink tubing | 1 |
| 50287145002 | 15 mm heat shrink tubing | 2 |
| 5993741395 | Service Instructions | 1 |

The fitting procedure regarding the different kits is described in the relevant appendix of this Service Bulletin and, in any case, in the fitting instructions supplied with the kit.

AFFECTED MODELS:

Tab. A

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|----------|--------------------|------------------|-------------------------------|--|-------------------------|----------------------|--|--------------------------|---|--------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 922 708 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 701 00 | 20050213 | CI330NFA+ | Rex-Electrolux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 744 701 01 | 20050722 | CI330NFA+ | Rex-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 744 701 01 | 20051021 | CI330NFA+ | Rex-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 701 02 | 20060130 | CI330NFA+ | Rex-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 702 00 | 20050415 | ZI9220FF | Zanussi | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 744 702 01 | 20051021 | ZI9220FF | Zanussi | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 744 702 02 | 20060203 | ZI9220FF | Zanussi | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 703 00 | 20041217 | EUF2320 | Electrolux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 744 703 01 | 20050729 | EUF2320 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 744 703 02 | 20060203 | EUF2320 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 704 00 | 20050506 | EUF2320 | Electrolux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 744 704 01 | 20050715 | EUF2320 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 744 704 02 | 20060203 | EUF2320 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 705 00 | 20050304 | AUF2320 | ArthurMartinElux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 744 705 01 | 20050715 | AUF2320 | ArthurMartinElux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 744 705 02 | 20060203 | AUF2320 | ArthurMartinElux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 706 00 | 20050318 | FB2000E | BRANDT | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 744 706 01 | 20050715 | FB2000E | BRANDT | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 744 706 02 | 20060203 | FB2000E | BRANDT | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 707 xx | 20060324 | EUF2320 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 708 xx | 20060317 | ZI9220FF | Zanussi | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 710 xx | 20060317 | EUF2320 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 711 xx | 20060331 | CI330NFA+ | Rex-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 712 xx | 20060505 | AUF2320 | ArthurMartin | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 713 xx | 20060505 | FB2000E | BRANDT | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 713 xx | | FB2000E | BRANDT | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 715 xx | | DFS620JE | De Dietrich | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 716 xx | | DFS620JE | De Dietrich | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|----------|--------------------|----------------------|-------------------------------|--|-------------------------|----------------------|--|--------------------------|---|--------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 922 744 717 xx | | CI331NFA+ | Rex-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 718 xx | | JLBIFIC02 | John Lewis | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 720 xx | | EUF23800 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 722 xx | | EUF23800 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 723 xx | | ZBF7226 | Zanussi | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 724 xx | | AG91854-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 726 xx | | BV178 | Boretti | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 744 728 xx | | DFS920JE | De Dietrich | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 745 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 700 00 | 20041217 | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 754 700 01 | 20050729 | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 754 700 02 | 20060203 | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 701 00 | 20041203 | JG19488 | Juno-Electrolux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 754 701 01 | 20050715 | JG19488 | Juno-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 754 701 02 | 20060203 | JG19488 | Juno-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 702 00 | 20041217 | 445172 0/40542 | Privileg | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 754 702 01 | 20050909 | 445172 0/40768 | Privileg | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 754 702 02 | 20060203 | 445172 0/40542 | Privileg | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 703 00 | 20050624 | QT220I | Husqvarna Electrolux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 754 703 01 | 20050909 | QT220I | Husqvarna Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 754 703 02 | 20060203 | QT220I | Husqvarna Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 704 00 | 20050415 | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | replaceable | | replaceable |
| 922 754 704 01 | 20050729 | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | replaceable |
| 922 754 704 02 | 20060203 | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 706 xx | | JG19488 | Juno-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 707 xx | | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 708 xx | | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 708 xx | | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 709 xx | | 445172 0/41072 | Privileg | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 710 xx | | QT220I | Husqvarna Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 712 xx | | EUF2330 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 713 xx | | ITE239-0 | Küppersbusch | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|------------------------|-----------------|----------------------------------|--|----------------------------|-------------------------|--|-----------------------------|---|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 922 754 714 xx | | JUF94180 | Juno-Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 715 xx | | AG91850-4I | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 716 xx | | ITE239-1 | Küppersbusch | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 717 xx | | ITE239-0CN | Küppersbusch | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 754 719 xx | | EUF23700 | Electrolux | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 760 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 761 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 772 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 773 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 803 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 804 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 805 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 823 xxx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 860 5xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 861 5xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 862 5xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 863 5xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 922 873 5xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | 3 | not featured |
| 923 415 310 xx | | SK88800I | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 312 xx | | SK81000I | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 314 xx | | SK81200I | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 339 xx | | SK88805I | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 345 xx | | SK88809I | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 349 xx | | SK88800I(EURO) | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 351 xx | | SK81000I(EURO) | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 353 xx | | SK81200I(EURO) | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 355 xx | | SK88800I(CH) | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 357 xx | | SK81200I(CH) | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 359 xx | | PRIVILEG4951 115139 | Privileg | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 361 xx | | PRIVILEG4953 | Quelle | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 363 xx | | PRIVILEG4955 817719 | Privileg | kit not available | | 50286482000 | not featured | | not featured | | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|------------------------------------|-----------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 923 415 396 xx | | SK88800I(UK) | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 397 xx | | SK81200I(UK) | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 437 xx | | SK810 00 I-1 | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 438 xx | | SK81040I-1 | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 439 xx | | SK98800I | AEG | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 415 440 xx | | PRIVILEG 8058 | Quelle | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 454 6xx xx | | Valid for all PNCs | | kit not available | | 4055010708 | not featured | | not featured | | not featured |
| 923 455 6xx xx | | Valid for all PNCs | | kit not available | | 4055010708 | not featured | | not featured | | not featured |
| 923 456 6xx xx | | Valid for all PNCs with ERF2000 | | kit not available | | 4055010708 | not featured | | not featured | | not featured |
| 923 457 xxx xx | | Valid for all PNCs | | 50286484006 | | 50292572000 | 50286485003 | | not featured | | not featured |
| 923 521 6xx xx | | Valid for all PNCs with FLEC | | kit not available | | 50286482000 | not featured | | not featured | | not featured |
| 923 521 6xx xx | | Valid for all PNCs with ERF2000 | | kit not available | | 50286481002 | not featured | | not featured | | not featured |
| 923 524 xxx xx | | Valid for all PNCs | | 50286484006 | | 50292572000 | 50286485003 | | not featured | | not featured |
| 923 531 xxx xx | | Valid for all PNCs | | 50286483008 | 2 | not featured | not featured | | not featured | | not featured |
| 923 532 xxx xx | | Valid for all PNCs | | 50286483008 | 2 | not featured | not featured | | not featured | | not featured |
| 923 533 xxx xx | | Valid for all PNCs | | 50286483008 | 2 | not featured | not featured | | not featured | | not featured |
| 923 534 xxx xx | | Valid for all PNCs | | 50286483008 | 15 | kit not available | not featured | | 50286483008 | 15 | not featured |
| 923 535 002 xx | | WI2591V | Rex-Electrolux | 50286483008 | 15 | kit not available | not featured | | 50286483008 | 15 | not featured |
| 923 583 017 xx | | IK3028SR | Electrolux | 50286483008 | 22 | | | | | | |
| 923 583 018 xx | | ERN3011FOW | Electrolux | 50286483008 | 22 | | | | | | |
| 923 748 xxx xx | | Valid for all PNCs | | 50286483008 | 16 | kit not available | 50286483008 | | not featured | | not featured |
| 923 761 xxx xx | | Valid for all PNCs | | 50286483008 | 11 | not featured | not featured | | not featured | | not featured |
| 923 771 xxx xx | | Valid for all PNCs | | 50286483008 | 11 | kit not available | not featured | | not featured | | not featured |
| 923 781 xxx xx | | Valid for all PNCs | | 50286483008 | 11 | kit not available | not featured | | not featured | | not featured |
| 923 791 xxx xx | | Valid for all PNCs | | 50286483008 | 11 | not featured | not featured | | not featured | | not featured |
| 923 800 7xx xx | | Valid for all PNCs (no Minifan) | | 50286483008 | 6 | 4055120051 | not featured | | not featured | | not featured |
| 923 800 7xx xx | | Valid for all PNCs (Minifan) | | 50286483008 | 6 | 4055120069 | not featured | | not featured | | not featured |
| 923 801 700 xx | | SK91800-4I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 712 xx | | JKI9088 | Juno-Electrolux | 50286483008 | 6 | 4055120028 | not featured | | not featured | | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|--------------------|----------------------|-------------------------------|----|-------------------------|----------------------|--|--------------------------|----|--------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 923 801 715 xx | | SK91800-4I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 716 xx | | 819319_40883 | Privileg | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 717 xx | | SK91800-4I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 718 xx | | ERO3420 | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 719 xx | | ERO3420 | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 720 xx | | IK331 | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 723 xx | | IKE339-0 | Küppersbusch | 50286483008 | 6 | 4055120028 | not featured | | not featured | | not featured |
| 923 801 724 xx | | JRG90180 | Juno-Electrolux | 50286483008 | 6 | 4055120028 | not featured | | not featured | | not featured |
| 923 801 725 xx | | IK3310RE | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 726 xx | | IK3310LI | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 727 xx | | IK331 | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 728 xx | | SK91800-5I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 729 xx | | SK91800-4I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 730 xx | | SK91800-4I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 731 xx | | IKE339-0 | Küppersbusch | 50286483008 | 6 | 4055120028 | not featured | | not featured | | not featured |
| 923 801 732 xx | | IKE339-1 | Küppersbusch | 50286483008 | 6 | 4055120028 | not featured | | not featured | | not featured |
| 923 801 733 xx | | JRG90181 | Juno-Electrolux | 50286483008 | 6 | 4055120028 | not featured | | not featured | | not featured |
| 923 801 734 xx | | SK91800-5I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 735 xx | | SK91800-6I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 736 xx | | SK91800-5I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 737 xx | | IK3310RE | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 738 xx | | IK3310LI | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 739 xx | | IK331 | Electrolux | 50286483008 | 6 | 4055120044 | not featured | | not featured | | not featured |
| 923 801 740 xx | | QR330I | Husqvarna Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 741 xx | | SK91800-5I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 743 xx | | SK91800-4I | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 801 746 xx | | ERG34800 | Electrolux | 50286483008 | 6 | 4055120028 | not featured | | not featured | | not featured |
| 923 801 747 xx | | QR331I | Husqvarna Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 802 xxx xx | | Valid for all PNCs | | 50286483008 | 17 | kit not available | not featured | | 50286483008 | 17 | not featured |
| 923 803 xxx xx | | Valid for all PNCs | | 50286483008 | 17 | kit not available | not featured | | 50286483008 | 17 | not featured |
| 923 804 xxx xx | | Valid for all PNCs | | 50286483008 | 6 | 4055120051 | not featured | | not featured | | not featured |
| 923 805 xxx xx | | Valid for all PNCs | | 50286483008 | 17 | kit not available | not featured | | 50286483008 | 17 | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|----------|---|----------------|----------------------------------|----|-------------------------------|-------------------------|----|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 923 807 500 xx | | JLWFF1101R | John Lewis | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 501 xx | | S70338KA | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 503 xx | | S70338KA | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 504 xx | | JLWFF1101R | John Lewis | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 505 xx | | KE680-1-2T | Küppersbusch | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 506 xx | | DKS876X | De Dietrich | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 507 xx | | S70338KA | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 508 xx | | S70338KA1 | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 509 xx | | S70338KA | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 511 xx | | JLWFF1102R | John Lewis | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 512 xx | | DKS876X | De Dietrich | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 513 xx | | JLWFF1552R | John Lewis | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 516 xx | | JLWFF1552R | John Lewis | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 517 xx | | DKS876X | De Dietrich | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 807 518 xx | | S70338KA1 | AEG Electrolux | 50286483008 | 6 | 4055120036 | not featured | | not featured | | not featured |
| 923 811 xxx xx | | Valid for all PNCs | | 50286483008 | 16 | kit not available | 50286483008 | 16 | not featured | | not featured |
| 923 812 xxx xx | | Valid for all PNCs | | 50286483008 | 16 | kit not available | 50286483008 | 16 | not featured | | not featured |
| 923 814 000 00 | 20080714 | JLWFF1552W | John Lewis | 50286483008 | 17 | kit not available | 50286483008 | 17 | not featured | | not featured |
| 923 814 000 01 | 20081031 | JLWFF1552W | John Lewis | 50286483008 | 17 | kit not available | not featured | | 50286483008 | 17 | not featured |
| 923 814 003 xx | | JLWFF1552W | John Lewis | 50286483008 | 17 | kit not available | not featured | | 50286483008 | 17 | not featured |
| 923 815 xxx xx | | Valid for all PNCs | | 50286484006 | 16 | kit not available | 50286483008 | 16 | not featured | | not featured |
| 923 818 xxx xx | | Valid for all PNCs | | 50286484006 | 16 | kit not available | 50286483008 | 16 | not featured | | not featured |
| 923 819 xxx xx | | Valid for all PNCs | | 50286484006 | 16 | kit not available | 50286483008 | 16 | not featured | | not featured |
| 923 821 0xx xx | | Valid for all PNCs | | 50286483008 | 16 | kit not available | 50286483008 | 16 | not featured | | not featured |
| 923 876 5xx xx | | Valid for all PNCs | | replaceable | | not featured | not featured | | not featured | | not featured |
| 923 877 5xx xx | | Valid for all PNCs with display board 242531369/5 or 242531331/5 | | 50286483008 | 11 | 2425313869 (display board) | not featured | | not featured | | not featured |
| 923 877 5xx xx | | Valid for all PNCs with display board 242515824/9 | | 50286483008 | 11 | 2425158363 (display board) | not featured | | not featured | | not featured |
| 923 877 5xx xx | | Valid for all PNCs with display board 242515823/1 or | | 50286483008 | 11 | 2425158355 (display board) | not featured | | not featured | | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|---|----------------------|---------------------------|----------|-------------------------------|----------------|----------|--------------------|----------|-----------------------|
| | | | | Air refrigerator Kit | Position | evaporator refrigerator | Air 0°C Kit | Position | Air Freezer Kit | Position | evaporator Freezer |
| | | 242515811/6 | | | | | | | | | |
| 923 878 5xx xx | | Valid for all PNCs with display board 242531373/7 or 242531335/6 | | 50286483008 | 12 | 2425313877 (display board) | not featured | | not featured | | not featured |
| 923 878 5xx xx | | Valid for all PNCs with display board 242515824/9 | | 50286483008 | 12 | 2425158363 (display board) | not featured | | not featured | | not featured |
| 923 879 5xx xx | | valid for all PNCs | | 50286483008 | 6 | kit not available | not featured | | not featured | | not featured |
| 925 031 568 xx | | ERB34633W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 577 xx | | ZRB734W | Zanussi | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 586 xx | | ERB34400W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 700 xx | | ERB32400W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 701 xx | | ERB32400W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 702 xx | | KF3222 | Elektro Helios | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 703 xx | | KF3222 | Elektro Helios | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 704 xx | | QRT4202W | Husqvarna-Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 706 xx | | EN3200AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 707 xx | | KF32200 | Elektro Helios | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 708 xx | | KF32200 | Elektro Helios | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 709 xx | | EN3200AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 807 xx | | EN3402AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 810 xx | | ERB34400X | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 813 xx | | ERB34400W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 814 xx | | ERB34400W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 031 829 xx | | EN3402AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 174 xx | | ERA36633W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 175 xx | | ERA36633X | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 176 xx | | ERA36770C | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 177 xx | | ERA36770S | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 178 xx | | ERA36770Y | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 179 xx | | ERA36770Z | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 180 xx | | ERA36833W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 492 xx | | ERA40633W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|----------------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 032 493 xx | | ERA40633X | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 494 xx | | ERA40833W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 495 xx | | ERA40833X | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 506 xx | | S71408KG9 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 507 xx | | S81408KG | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 508 xx | | S80400KG | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 510 xx | | ZRB941VXL | Zanussi | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 524 xx | | S74000CSM0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 525 xx | | S74000CSW0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 529 xx | | ERB40400W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 530 xx | | ERB40400W | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 537 xx | | EN4011AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 538 xx | | EN4011AOX | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 543 xx | | EN4002AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 548 xx | | S84000CSM1 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 554 xx | | RN4011AOW | Electrolux-Rex | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 556 xx | | RN4011AOX | Electrolux-Rex | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 557 xx | | EN4002AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 561 xx | | S7400RCSM0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 568 xx | | S84000CDX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 569 xx | | S84000CSX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 570 xx | | S74000CSX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 573 xx | | S64000CSX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 831 xx | | S80360KG | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 832 xx | | S80368KG | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 836 xx | | ZRB937VW | Zanussi | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 837 xx | | ZRB937VXL | Zanussi | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 838 xx | | ZRB736W | Zanussi | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 839 xx | | RJP3549 | Rosenlew | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 860 xx | | S73600CSM0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 862 xx | | S73600CSW0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 867 xx | | QRT4215W | Husqvarna-Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|---|----------------------|----------------------------------|----|-------------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 032 873 xx | | S73600CSM0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 896 xx | | S83600CSM1 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 899 xx | | QRT4225X | Husqvarna-Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 901 xx | | EN3611AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 902 xx | | EN3611AOX | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 903 xx | | EN3613AOX | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 916 xx | | ZRB937VW2 | Zanussi | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 917 xx | | ZRB937VX2 | Zanussi | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 923 xx | | SB337 | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 924 xx | | S83600CSW1 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 925 xx | | QRT4226W | Husqvarna-Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 926 xx | | QRT4226X | Husqvarna-Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 928 xx | | KF36200 | Elektro Helios | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 930 xx | | EN3613AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 931 xx | | EN3612AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 932 xx | | EN3612AOX | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 935 xx | | RN3613AOX | Electrolux-Rex | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 953 xx | | S7360PCSM0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 954 xx | | S7360PCSW0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 961 xx | | S83600CDX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 962 xx | | S83600CSX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 963 xx | | S73600CSX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 965 xx | | S83609CSM1 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 970 xx | | EN3613AOW | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 971 xx | | EN3613AOX | Electrolux | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 972 xx | | S63600CSX0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 973 xx | | S63600CSW0 | AEG | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 980 xx | | 245+92A+++ | Satrap | 50286483008 | 27 | 50286484006 | not featured | | 50286483008 | 27 | not featured |
| 925 032 2xx xx | | Valid for all PNCs with display board 2425136xx | | 50286483008 | | 2425136526 (display board) | not featured | | 50286483008 | | not featured |
| 925 032 2xx xx | | Valid for all PNCs with display board | | 50286483008 | | 2425313851 (display board) | not featured | | 50286483008 | | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|----------|---|--------------------|----------------------------------|--------|-------------------------------|-------------------------|--|-----------------------------|--------|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| | | 2425313xx | | | | | | | | | |
| 925 032 6xx xx | | Valid for all PNCs with display board 2425136xx | | 50286483008 | | 2425136534 (display board) | not featured | | 50286483008 | | not featured |
| 925 032 6xx xx | | Valid for all PNCs with display board 2425313xx | | 50286483008 | | 2425313851 (display board) | not featured | | 50286483008 | | not featured |
| 925 032 856 xx | | S80368KG | AEG Electrolux | 50286483008 | 27 | | | | 50286483008 | 27 | |
| 925 033 001 xx | 20060201 | ANB3450 | ArthurMartinElux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 002 xx | 20060102 | ENB3450 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 004 xx | 20060201 | ZNB3450 | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 005 xx | 20060728 | S75348KG | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 007 xx | 20060606 | ENB3451X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 012 xx | 20060421 | S75340KG1 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 014 xx | 20060912 | S75340KG | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 015 xx | 20060428 | S75348KG1 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 017 xx | 20060911 | S65340KG1 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 020 xx | 20060911 | ENA3450 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 021 xx | 20060908 | ENA3451 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 022 xx | 20060913 | ENA3451X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 023 xx | 20060313 | RJP3350 | Rosenlew | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 025 xx | 20060801 | ZNB34NDX | Zanussi | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 026 xx | 20060911 | ZNB34NVD | Zanussi | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 031 xx | 20060707 | ZNB3450S | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 038 xx | 20060116 | ENB3450 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 040 xx | | ZNB3450 | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 042 xx | | ZKN3406 | Zanker | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 046 xx | | 399774_41093 | Privileg | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 048 xx | | JLFFW1803 | John Lewis | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 052 xx | | ANA8450 | ArthurMartinElux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 034 055 xx | | JLFFW1807 | John Lewis | 50286483008 | 21 | | | | | | |
| 925 033 054 xx | | CBFF 340 1C ELECTROL | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 056 xx | | ENB34607X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|--------------------|----------------------------------|--------|----------------------------|-------------------------|--|-----------------------------|--------|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 033 059 xx | | ENB34405W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 060 xx | | ENB34400W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 061 xx | | ENB34400X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 063 xx | | ENA34500W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 067 xx | | S75340KG9 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 071 xx | | RNB34391S | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 073 xx | | S75348KG9 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 075 xx | | S64340KG1 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 077 xx | | 937941_41237 | Privileg | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 078 xx | | 636867_41260 | Privileg | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 079 xx | | ENB34405S | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 081 xx | | SB323N10 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 083 xx | | RNB34391X | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 084 xx | | RNB34351M | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 085 xx | | RNB34351Z | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 086 xx | | RNB34351Y | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 091 xx | | ZNB344S | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 099 xx | | S75340KG2 | AEG Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 100 xx | | S75348KG2 | AEG Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 101 xx | | 629918_41363 | Privileg | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 102 xx | | 858799_41364 | Privileg | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 103 xx | | ENB34405W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 105 xx | | ENB34400X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 106 xx | | ENB34405S | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 108 xx | | ZNB344W | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 109 xx | | ZNB344S | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 111 xx | | RJP3350 | Rosenlew | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 141 xx | | RNB34391X | Rex-Electrolux | 50286483008 | 18 | not featured | not featured | | 50286483008 | 18 | not featured |
| 925 033 201 xx | | ENB3850 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 203 xx | | ZNB3850 | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 204 xx | | S75388KG | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 206 xx | | ENB3851X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|--------------------|----------------------------------|--------|----------------------------|-------------------------|--|-----------------------------|--------|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 033 208 xx | | S75380KG1 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 209 xx | | S75380KG | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 210 xx | | S75388KG1 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 212 xx | | S65380KG1 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 215 xx | | ENA3850 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 216 xx | | ENA3851 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 217 xx | | ENA3851X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 219 xx | | ZNB38NDX | Zanussi | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 220 xx | | ZNB38NVD | Zanussi | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 222 xx | | ZNB3850S | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 226 xx | | ENB3850 | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 228 xx | | ZNB3850 | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 230 xx | | ZKN3806 | Zanker | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 233 xx | | 974027_41094 | Privileg | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 234 xx | | ZKN3806 | Zanker | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 235 xx | | JLFFW2004 | John Lewis | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 236 xx | | RJP3750 | Rosenlew | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 238 xx | | ENB38607X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 240 xx | | ANA38707X | ArthurMartinElux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 241 xx | | ENB38400W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 242 xx | | ENB38400X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 243 xx | | ENA38500W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 250 xx | | S75388KG9 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 252 xx | | S75380KG9 | AEG Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 254 xx | | RNB38607X | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 256 xx | | 806798_41238 | Privileg | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 257 xx | | 639296_41261 | Privileg | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 258 xx | | RNB38391S | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 259 xx | | RNB38351M | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 260 xx | | RNB38351Z | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 261 xx | | RNB38351Y | Rex-Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 263 xx | | ENB38607X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|--------------------|--------------------|----------------------------------|--------|----------------------------|-------------------------|--|-----------------------------|--------|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 033 264 xx | | ZNB384S | Zanussi-Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | kit not available | | not featured |
| 925 033 265 xx | | PC381NF | Zoppas | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 266 xx | | PC381NFS | Zoppas | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 267 xx | | PC381NFX | Zoppas | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 270 xx | | S75380KG2 | AEG Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 271 xx | | S75388KG2 | AEG Electrolux | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 272 xx | | 714183_41263 | Privileg | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 273 xx | | 809694_41262 | Privileg | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 274 xx | | 239316_41365 | Privileg | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 275 xx | | 826018_41366 | Privileg | 50286483008 | 9 / 9a | kit not available | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 278 xx | | ENB38400W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 279 xx | | ENB38400X | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 382 xx | | ENA38970C | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 383 xx | | ENA38970S | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 384 xx | | ENA38970Y | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 385 xx | | ENA38970Z | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 382 xx | | ENA38970C | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 393 xx | | ENA38935X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 394 xx | | ENA38935X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 399 xx | | ENB38933W | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 46x xx | | Valid for all PNCs | | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 47x xx | | Valid for all PNCs | | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 656 xx | | ENA34733W | Electrolux | 50286483008 | 9 / 9a | not featured | not featured | | 50286483008 | 9 / 9a | not featured |
| 925 033 661 xx | | ENA34933W | Electrolux | 50286483008 | 18 | not featured | not featured | | 50286483008 | 18 | not featured |
| 925 033 663 xx | | ENA34935X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 676 xx | | ENA34935X | Electrolux | 50286483008 | 19 | not featured | not featured | | 50286483008 | 19 | not featured |
| 925 033 679 xx | | ENB34933W | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 680 xx | | ENB34933X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 810 xx | | RNA38933W | REX Electrolux | 50286483008 | | kit not available | not featured | | 50286483008 | | kit not available |
| 925 033 706 xx | | S83400CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 707 xx | | S83400CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 727 xx | | S83409CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|----------------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 033 728 xx | | S83409CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 733 xx | | S83400CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 734 xx | | S83400CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 747 xx | | ENB34943W | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 749 xx | | QRT4230W | Husqvarna-Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 750 xx | | QRT4230X | Husqvarna-Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 751 xx | | S83408CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 752 xx | | S83408CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 753 xx | | ENA34980S | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 756 xx | | ENB34943X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 762 xx | | RNA34980S | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 763 xx | | RNA34980Y | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 764 xx | | RNA34980Z | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 765 xx | | RNA34980C | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 769 xx | | ENB34963X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 770 xx | | ENA34980C | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 771 xx | | ENB34953X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 773 xx | | EN3487AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 783 xx | | ENA34980Z | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 784 xx | | ENA34980Y | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 787 xx | | EN3440AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 788 xx | | EN3450AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 789 xx | | EN3450AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 790 xx | | EN3441AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 791 xx | | EN3441AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 792 xx | | EN3450DOX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 793 xx | | EN3442AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 794 xx | | EN3442AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 795 xx | | RN3451AOW | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 796 xx | | RN3451AOX | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 797 xx | | EN3451AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 798 xx | | EN3451AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|----------------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 033 800 xx | | ENB38933X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 815 xx | | S83800CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 816 xx | | S83800CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 831 xx | | RNA38970Y | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 840 xx | | S83809CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 841 xx | | S83809CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 847 xx | | QRT4630W | Husqvarna-Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 848 xx | | QRT4630X | Husqvarna-Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 849 xx | | ENB38739X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 850 xx | | ENB38943W | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 853 xx | | ENA38980S | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 854 xx | | ENB38953X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 857 xx | | ENA38980C | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 858 xx | | ENB38943X | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 859 xx | | RNA38980S | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 860 xx | | RNA38980Y | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 861 xx | | RNA38980Z | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 862 xx | | RNA38980C | Electrolux-Rex | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 863 xx | | S83800CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 864 xx | | S83800CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 869 xx | | EN3840AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 870 xx | | EN3840AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 871 xx | | EN3850DOX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 872 xx | | EN3851AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 873 xx | | EN3853AOW | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 874 xx | | EN3853AOX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 883 xx | | EN3841AOX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 884 xx | | EN3850AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 885 xx | | EN3850AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 887 xx | | ZRB638FW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 888 xx | | ZRB938FW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 889 xx | | ZRB938FW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|--------------------|----------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 033 850 xx | | ENB38943W | Electrolux | 50286483008 | 18 | not featured | not featured | | 50286483008 | 18 | not featured |
| 925 033 89 xx | | Valid for all PNCs | | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 907 xx | | EN3850COW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 908 xx | | EN3850COX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 913 xx | | S73800CNW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 914 xx | | S73800CNS1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 915 xx | | EN3851AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 918 xx | | RN3851AOW | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 919 xx | | RN3851AOX | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 920 xx | | RN3850COW | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 921 xx | | RN3850COX | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 922 xx | | ZRB938FWD2 | Zanussi | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 923 xx | | ZRB938FXD2 | Zanussi | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 924 xx | | S73801CTW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 925 xx | | S73801CNW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 926 xx | | EN3851ACX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 931 xx | | QRT4640W | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 932 xx | | S83800CTX0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 934 xx | | S73801CNX0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 935 xx | | EN3851AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 936 xx | | EN3851AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 937 xx | | JLFFW2018 | John Lewis | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 938 xx | | JLSS2019 | John Lewis | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 939 xx | | RN3850ADW | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 940 xx | | RN3850ADX | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 941 xx | | EN53853AW | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 942 xx | | EN53853AX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 943 xx | | S57380CNX0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 945 xx | | S73913CTM0 | AEG-Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 950 xx | | SJBM361EWH | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 951 xx | | SJBM361ESL | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 952 xx | | SJBP361UWH | Sharp | 50286483008 | 19 | | | | 50286483008 | 19 | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|----------------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 033 953 xx | | SJBM362ESL | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 954 xx | | SJBP361EWH | Sharp | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 955 xx | | SJBP361EST | Sharp | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 956 xx | | SJBP361UST | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 033 959 xx | | S52933CTWO | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 033 960 xx | | S52933CTM0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 035 xx | | ANB35405S | ArthurMartinElux | 50286484006 | 21 | | | | 50286483008 | 20 | |
| 925 034 059 xx | | JLSS1808 | John Lewis | 50286483008 | 21 | | | | | | |
| 925 034 203 xx | | S75398KG3 | AEG Electrolux | 50286483008 | 21 | | | | | | |
| 925 034 238 xx | | S75390KG38 | AEG | 50286483008 | 21 | | | | | | |
| 925 034 244 xx | | JLFFW2007 | John Lewis | 50286483008 | 21 | | | | | | |
| 925 034 245 xx | | JLSS2009 | John Lewis | 50286483008 | 21 | | | | | | |
| 925 034 250 xx | | ZNB39NDX8 | Zanussi | 50286483008 | 21 | | | | | | |
| 925 034 253 xx | | S75388KG68 | AEG | 50286483008 | 21 | | | | | | |
| 925 034 506 xx | | ZRB634FW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 507 xx | | ZRB934FW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 508 xx | | ZRB934FW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 509 xx | | ZRB634FX2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 510 xx | | ZRB934FX2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 511 xx | | FRB934NW2 | Faure | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 512 xx | | ZRB934NW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 513 xx | | ZRB934NX2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 514 xx | | S73402CNS1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 517 xx | | ZRB934FX2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 518 xx | | RJP3342 | Rosenlew | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 524 xx | | S73400CTW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 525 xx | | S73400CTS1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 526 xx | | S73400CNW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 527 xx | | S73400CNS1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 531 xx | | QRT4221W | Husqvarna-Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 533 xx | | PRB934NW2 | Zoppas | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 534 xx | | PRB934NX2 | Zoppas | 50286483008 | 20 | | | | 50286483008 | 20 | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|----------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 034 536 xx | | S73401CNS1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 537 xx | | ZRB934NW2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 538 xx | | ZRB934NX2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 541 xx | | EN3450COW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 542 xx | | EN3450COX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 545 xx | | S73400CTW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 546 xx | | S73400CTS1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 555 xx | | RN3450COW | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 556 xx | | RN3450COX | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 559 xx | | ZRB934FX2C | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 560 xx | | S73401CTW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 561 xx | | S73401CNW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 563 xx | | ZRB934EW | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 564 xx | | ZRB934NW2S | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 566 xx | | EN3451ACX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 573 xx | | ZRB934FX2 | Zanussi | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 576 xx | | S73409CNS2 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 577 xx | | S73409CNW2 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 578 xx | | EN3451AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 579 xx | | EN3451AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 580 xx | | EN3450AOW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 581 xx | | EN3450AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 584 xx | | JLFFW1817 | John Lewis | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 585 xx | | JLSS1819 | John Lewis | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 586 xx | | S73402CNS2 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 587 xx | | S73402CNW2 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 588 xx | | EN3440COW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 589 xx | | EN3440COX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 592 xx | | RN3451ADW | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 593 xx | | RN3451ADX | Electrolux-Rex | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 423 xx | | JLFFW2005 | John Lewis | 50286483008 | 21 | | | | | | |
| 925 034 504 xx | | EN3453AOW | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|-----------------|------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|----|-----------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 925 034 505 xx | | EN3453AOX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 535 xx | | SB323N15 | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 557 xx | | ZRB934FWD2 | Zanussi | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 558 xx | | ZRB934FXD2 | Zanussi | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 571 xx | | QRT4240W | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 572 xx | | S83400CTX0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 575 xx | | S73401CNX0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 582 xx | | S8900CTW0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 583 xx | | S8900CTX0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 590 xx | | EN3433AOW | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 591 xx | | EN3433AOX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 594 xx | | EN53453AX | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 595 xx | | EN53453AW | Electrolux | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 596 xx | | S57340CNX0 | AEG | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 598 xx | | SUPERBT | IKEA | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 599 xx | | SUPERBT | IKEA | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 600 xx | | SUPERBT | IKEA | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 601 xx | | EN3449AFW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 602 xx | | EN3449AFX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 605 xx | | SJBM321EWH | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 606 xx | | SJBM321ESL | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 607 xx | | SJBM322EWH | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 608 xx | | SJBM322ESL | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 609 xx | | SJBP321EWH | Sharp | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 610 xx | | SJBP321UWH | Sharp | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 611 xx | | SJBP321EST | Sharp | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 612 xx | | SJBP321UST | Sharp | 50286483008 | 19 | | | | 50286483008 | 19 | |
| 925 034 613 xx | | SJBM321UWH | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 614 xx | | SJBM321USL | Sharp | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 617 xx | | EN3455COW | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 618 xx | | S73402CNW1 | AEG | 50286483008 | 20 | | | | 50286483008 | 20 | |
| 925 034 619 xx | | EN3443AOX | Electrolux | 50286483008 | 20 | | | | 50286483008 | 20 | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | | |
|----------------|------|--------------------|----------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|-------------|-----------------------|--|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer | |
| 925 034 620 xx | | EN3430COX | Electrolux | 50286483008 | 20 | | | | | 50286483008 | 20 | |
| 925 034 621 xx | | EN3430COW | Electrolux | 50286483008 | 20 | | | | | 50286483008 | 20 | |
| 925 041 101 xx | | A72200GSW0 | AEG | 50286483008 | 23 | | | | | | | |
| 925 041 102 xx | | EUC22230W | Electrolux | 50286483008 | 23 | | | | | | | |
| 925 041 103 xx | | EUC22430W | Electrolux | 50286483008 | 23 | | | | | | | |
| 925 041 108 xx | | RUC22430W | Electrolux-Rex | 50286483008 | 23 | | | | | | | |
| 925 041 112 xx | | A72209GSW0 | AEG | 50286483008 | 23 | | | | | | | |
| 925 041 115 xx | | EUF2241AOW | Electrolux | 50286483008 | 23 | | | | | | | |
| 925 041 116 xx | | RUF2241AOW | Electrolux-Rex | 50286483008 | 23 | | | | | | | |
| 925 041 117 xx | | EUF2242AOW | Electrolux | 50286483008 | 23 | | | | | | | |
| 925 041 118 xx | | SG198 | Electrolux | 50286483008 | 23 | | | | | | | |
| 925 041 121 xx | | 200GSA++ | Satrap | 50286483008 | 23 | | | | | | | |
| 925 041 122 xx | | ZFU23400WA | Zanussi | 50286483008 | 23 | | | | | | | |
| 925 041 123 xx | | PFU23400WA | Zoppas | 50286483008 | 23 | | | | | | | |
| 925 041 126 xx | | ZFU23400WA | Zanussi | 50286483008 | 23 | | | | | | | |
| 925 041 127 xx | | ZFU722W | Zanussi | 50286483008 | 23 | | | | | | | |
| 925 041 129 xx | | AGS1901 | AEG | 50286483008 | 23 | | | | | | | |
| 925 041 130 xx | | AGS1982 | AEG | 50286483008 | 23 | | | | | | | |
| 925 041 131 xx | | EUF2243AOW | Electrolux | 50286483008 | 23 | | | | | | | |
| 925 041 134 xx | | A52200GSW1 | AEG | 50286483008 | 23 | | | | | | | |
| 925 041 136 xx | | EUF2242AOX | Electrolux | 50286483008 | 23 | | | | | | | |
| 925 041 40x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | |
| 925 041 41x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | |
| 925 041 42x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | |
| 925 041 43x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | |
| 925 041 700 xx | | S63300KDW0 | AEG | 50286483008 | 25 | | | | | | | |
| 925 041 701 xx | | S63300KDX0 | AEG | 50286483008 | 25 | | | | | | | |
| 925 041 717 xx | | ERF3301AOW | Electrolux | 50286483008 | 25 | | | | | | | |
| 925 041 718 xx | | ERF3301AOX | Electrolux | 50286483008 | 25 | | | | | | | |
| 925 041 719 xx | | ERF3310AOW | Electrolux | 50286483008 | 25 | | | | | | | |
| 925 041 720 xx | | RRF3310AOW | Electrolux-Rex | 50286483008 | 25 | | | | | | | |
| 925 041 721 xx | | ERF3310AOX | Electrolux | 50286483008 | 25 | | | | | | | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | | | | |
|----------------|------|--------------------|------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|--|-----------------------|--|--|--|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer | | | |
| 925 041 722 xx | | S63300KDW0 | AEG | 50286483008 | 25 | | | | | | | | | |
| 925 041 725 xx | | SC320 | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 041 729 xx | | S63300KDX0 | AEG | 50286483008 | 25 | | | | | | | | | |
| 925 041 738 xx | | ERF3314AOW | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 041 739 xx | | ERF3314AOX | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 002 xx | | ERF4112AOW | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 004 xx | | ERF4111DOW | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 005 xx | | ERF4111DOX | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 029 xx | | ERF4112AOX | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 030 xx | | ERF4112AOW | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 031 xx | | ERF4111AOW | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 037 xx | | ERF4112AOX | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 041 xx | | FROSTFRI | IKEA | 50286483008 | 25 | | | | | | | | | |
| 925 052 044 xx | | ERF4118AOW | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 048 xx | | S74010KDW0 | AEG | 50286483008 | 25 | | | | | | | | | |
| 925 052 049 xx | | S74010KDX0 | AEG | 50286483008 | 25 | | | | | | | | | |
| 925 052 052 xx | | ERF4114AOW | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 053 xx | | ERF4114AOX | Electrolux | 50286483008 | 25 | | | | | | | | | |
| 925 052 056 xx | | S74010KDW0 | AEG | 50286483008 | 25 | | | | | | | | | |
| 925 052 057 xx | | S74010KDX0 | AEG | 50286483008 | 25 | | | | | | | | | |
| 925 052 25x xx | | Valid for all PNCs | | 50286483008 | 26 | | | | | | | | | |
| 925 052 26x xx | | Valid for all PNCs | | 50286483008 | 26 | | | | | | | | | |
| 925 052 505 xx | | A72800GSW0 | AEG | 50286483008 | 26 | | | | | | | | | |
| 925 052 512 xx | | SG248 | Electrolux | 50286483008 | 26 | | | | | | | | | |
| 925 052 513 xx | | EUF2800FW | Electrolux | 50286483008 | 26 | | | | | | | | | |
| 925 052 518 xx | | ZFU27400WA | Zanussi | 50286483008 | 26 | | | | | | | | | |
| 925 052 520 xx | | FFU27400WA | Faure | 50286483008 | 26 | | | | | | | | | |
| 925 052 521 xx | | ZFU27400XA | Zanussi | 50286483008 | 26 | | | | | | | | | |
| 925 052 523 xx | | ZFU27400WA | Zanussi | 50286483008 | 26 | | | | | | | | | |
| 925 052 524 xx | | EUF2701AOW | Electrolux | 50286483008 | 26 | | | | | | | | | |
| 925 052 530 xx | | AGS2512 | AEG | 50286483008 | 26 | | | | | | | | | |
| 925 052 531 xx | | ZFU27400XA | Zanussi | 50286483008 | 26 | | | | | | | | | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | | | | |
|----------------|------|--------------------|----------------|----------------------------------|----|----------------------------|-------------------------|--|-----------------------------|--|-----------------------|--|--|--|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer | | | |
| 925 052 532 xx | | FG2820X | Elektro Helios | 50286483008 | 26 | | | | | | | | | |
| 925 052 538 xx | | FG2820 | Elektro Helios | 50286483008 | 26 | | | | | | | | | |
| 925 052 540 xx | | A62800GSW0 | AEG | 50286483008 | 26 | | | | | | | | | |
| 925 052 541 xx | | K4553 | IEE | 50286483008 | 26 | | | | | | | | | |
| 925 052 544 xx | | A62800GSX0 | AEG | 50286483008 | 26 | | | | | | | | | |
| 925 052 75x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | | | |
| 925 052 76x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | | | |
| 925 052 77x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | | | |
| 925 052 78x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | | | |
| 925 052 79x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | | | |
| 925 052 80x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | | | |
| 925 052 81x xx | | Valid for all PNCs | | 50286483008 | 24 | | | | | | | | | |
| 925 054 00x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | | |
| 925 054 01x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | | |
| 925 054 020 xx | | S53120CNW2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 021 xx | | FRB32313XA | Faure | 50286483008 | 22 | | | | | | | | | |
| 925 054 022 xx | | FRB32313WA | Faure | 50286483008 | 22 | | | | | | | | | |
| 925 054 023 xx | | EN3241JOW | Electrolux | 50286483008 | 22 | | | | | | | | | |
| 925 054 024 xx | | S53120CNX2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 025 2xx xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | | |
| 925 054 30x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | | |
| 925 054 310 xx | | S63439CNX2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 311 xx | | S63438CNX2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 312 xx | | S53434CNX2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 313 xx | | S66634CNX2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 314 xx | | S63439CNW2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 315 xx | | S63429CNX2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 40x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | | |
| 925 054 41x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | | |
| 925 054 42x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | | |
| 925 054 430 x | | S53520CTX2 | AEG | 50286483008 | 22 | | | | | | | | | |
| 925 054 431 x | | S53520CTX2 | AEG | 50286483008 | 22 | | | | | | | | | |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | | | |
|----------------|------|---|------------|----------------------------------|----|-------------------------------|-------------------------|---|-----------------------------|-------------------|-----------------------|--|-------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer | | |
| 925 054 60x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | |
| 925 054 61x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | |
| 925 054 62x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | |
| 925 054 63x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | |
| 925 054 64x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | |
| 925 054 65x xx | | Valid for all PNCs | | 50286483008 | 22 | | | | | | | | |
| 925 054 800 xx | | S53410CTW2 | AEG | 50286483008 | 22 | | | | | | | | |
| 925 054 801 xx | | S53420CTW2 | AEG | 50286483008 | 22 | | | | | | | | |
| 925 054 900 xx | | S53820CTW2 | AEG | 50286483008 | 22 | | | | | | | | |
| 925 501 021 xx | | C7280NLD2P | SMEG | 50286483008 | | | | | | 50286483008 | | | |
| 925 584 5xx xx | | Valid for all PNCs | | 50286483008 | 4 | not featured | not featured | | | not featured | | | not featured |
| 925 585 5xx xx | | Valid for all PNCs | | 50286483008 | 4 | kit not available | not featured | | | not featured | | | not featured |
| 925 587 5xx xx | | Valid for all PNCs | | 50286483008 | 4 | not featured | not featured | | | not featured | | | not featured |
| 925 589 5xx xx | | Valid for all PNCs | | 50286483008 | 10 | not featured | not featured | | | not featured | | | not featured |
| 925 696 6xx xx | | Valid for all PNCs | | 50286483008 | 4 | kit not available | not featured | | | not featured | | | kit not available |
| 925 697 7xx xx | | Valid for all PNCs | | 50286485003 | | not featured | not featured | | | 50286483008 | 7 | | not featured |
| 925 699 7xx xx | | Valid for all PNCs | | 50286485003 | | not featured | not featured | | | 50286483008 | 7 | | not featured |
| 925 700 6xx xx | | Valid for all PNCs | | 50286483008 | 2 | kit not available | not featured | | | not featured | | | kit not available |
| 925 701 6xx xx | | Valid for all PNCs | | 50286483008 | 5 | kit not available | not featured | | | not featured | | | kit not available |
| 925 703 6xx xx | | Valid for all PNCs | | 50286484006 | | 50292572000 | 50286483008 | 1 | | kit not available | | | not featured |
| 925 771 7xx xx | | Valid for all PNCs | | 50286483008 | 5 | not featured | not featured | | | not featured | | | not featured |
| 925 781 xxx xx | | Valid for all PNCs | | 50286483008 | 8 | kit not available | not featured | | | 50286485003 | | | 50292572000 |
| 925 807 5xx xx | | Valid for all PNCs | | 50286485003 | | not featured | not featured | | | 50286483008 | 7 | | not featured |
| 925 928 xxx xx | | Valid for all PNCs | | replaceable | | kit not available | not featured | | | replaceable | | | not featured |
| 925 929 7xx xx | | Valid for all PNCs | | replaceable | | kit not available | not featured | | | replaceable | | | not featured |
| 925 931 5xx xx | | Valid for all PNCs | | replaceable | | kit not available | not featured | | | replaceable | | | not featured |
| 925 933 xxx xx | | Valid for all PNCs with display board 2425136xx | | replaceable | | 2425313885 (display board) | not featured | | | replaceable | | | not featured |
| 925 934 xxx xx | | Valid for all PNCs | | replaceable | | kit not available | not featured | | | replaceable | | | not featured |
| 925 938 xxx xx | | Valid for all PNCs | | replaceable | | kit not available | not featured | | | not featured | | | not featured |
| 925 941 7xx xx | | Valid for all PNCs | | replaceable | | kit not available | not featured | | | replaceable | | | not featured |
| 925 943 5xx xx | | Valid for all PNCs | | replaceable | | kit not available | not featured | | | replaceable | | | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|--------------------|----------------|-------------------------------|--|-------------------------|----------------------|--|--------------------------|--|--------------------|
| | | | | Air refrigerator Kit Position | | evaporator refrigerator | Air 0°C Kit Position | | Air Freezer Kit Position | | evaporator Freezer |
| 933 013 4xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 0xx xx | | Valid for all PNCs | | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 014 2xx xx | | Valid for all PNCs | | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 014 4xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | kit not available | | not featured |
| 933 014 6xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | kit not available | | not featured |
| 933 014 80x xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 810 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 811 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 812 xx | | Valid for all PNCs | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 813 xx | | Valid for all PNCs | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 814 xx | | Valid for all PNCs | Privileg | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 815 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 816 xx | | Valid for all PNCs | Privileg | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 818 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 820 xx | | Valid for all PNCs | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 821 xx | | Valid for all PNCs | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 822 xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 824 xx | | Valid for all PNCs | AEG Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 825 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 826 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 828 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 829 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 831 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 832 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 834 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 835 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 836 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 838 xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 839 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 840 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 841 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 842 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |

| PNC | DATE | MODEL (NOTE) | BRAND NAME | Faulty temperature sensor | | | | | | | |
|----------------|------|--------------------|------------|---------------------------|----------|----------------------------|----------------|----------|--------------------|----------|-----------------------|
| | | | | Air refrigerator Kit | Position | evaporator refrigerator | Air 0°C Kit | Position | Air Freezer Kit | Position | evaporator Freezer |
| 933 014 843 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 844 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 845 xx | | Valid for all PNCs | | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 846 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 847 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 849 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 014 850 xx | | Valid for all PNCs | Frigidaire | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 016 102 xx | | Valid for all PNCs | | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 016 104 xx | | Valid for all PNCs | | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 016 111 xx | | Valid for all PNCs | | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 016 115 xx | | Valid for all PNCs | AEG | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 016 126 xx | | Valid for all PNCs | AEG | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 019 xxx xx | | Valid for all PNCs | | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 027 0xx xx | | Valid for all PNCs | | not featured | | not featured | not featured | | kit not available | | not featured |
| 933 033 102 xx | | Valid for all PNCs | | 50286483008 | | kit not available | not featured | | not featured | | not featured |
| 933 033 700 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 701 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 702 xx | | Valid for all PNCs | Zanker | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 703 xx | | Valid for all PNCs | Progress | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 704 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 705 xx | | Valid for all PNCs | AEG | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 707 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 708 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 710 xx | | Valid for all PNCs | Electrolux | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 711 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |
| 933 033 712 xx | | Valid for all PNCs | Zanussi | not featured | | not featured | not featured | | 50286483008 | | not featured |

Appendix KIT A1

unplug the appliance before carrying out the operations and use appropriate protection.



REPLACEMENT PROCEDURE FOR APPLIANCES WITH AN A1 - 50286481002 KIT

- a) Access the control board support of the appliance.
- b) Remove the support and the previous circuit boards.
- c) Detach the connectors from the previous power board.
- d) Connect the connectors to the new power board.
- e) Fit the support and the new circuit boards (power and display boards) fig. A




cd001451

Note:

Even if the faulty temperature sensor of the evaporator is still connected to the connector, the new circuit board uses only the air temperature sensor of the refrigerator.

Appendix KIT A2

unplug the appliance before carrying out the operations and use appropriate protection.

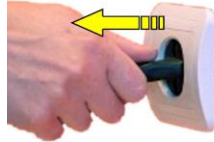

REPLACEMENT PROCEDURE FOR APPLIANCES WITH AN A2 - 50286482000 KIT

- a) Access the control board support of the appliance.



cd001452


- b) Cut the cable of the temperature sensor of the evaporator as shown in the figure.

Note: the temperature sensor of the evaporator is fitted in the first positions on the left side of the connector.




cd001453

- c) insulate the cable previously cut with some electrical insulating tape.

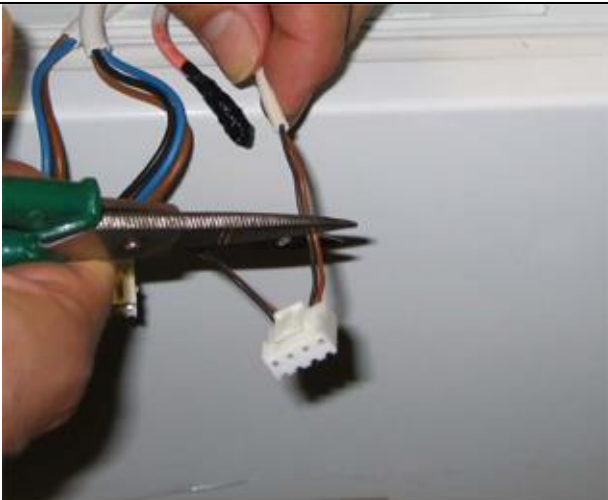

cd001454

- d) Cut the wires of the air temperature sensor as shown in the figure.

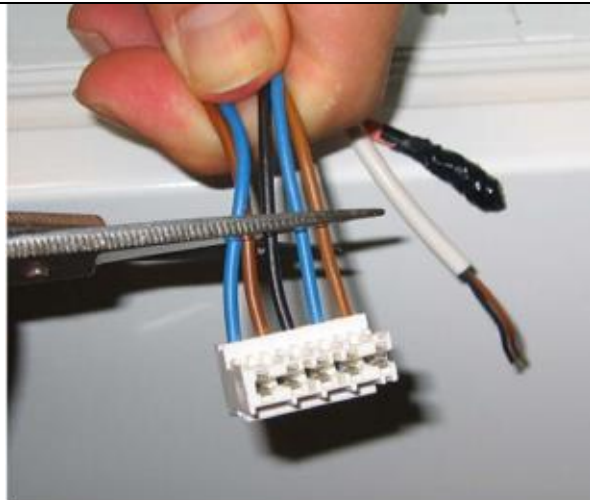

cd001455

- e) Cut the wiring as shown in the figure.




cd001456

- f) Cut and remove the end of the sleeves from all cables.




cd001457

- g) Connect the wiring to the new connector (the two-pole cable in the first two positions on the left side of the connector; the three-pole cable in the first three positions on the right side of the connector) observing the colour correspondence (for example: blue with blue, black with black, etc.)

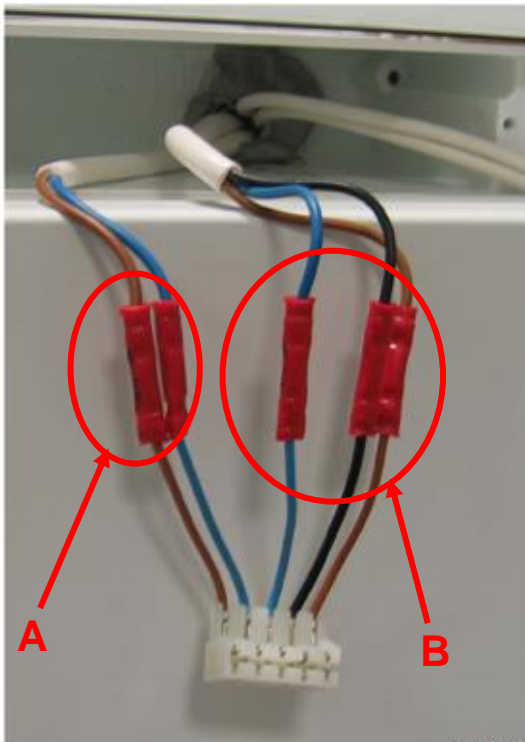

cd001458

- h) View of the new connections:
 A. two-pole cable
 B. three-pole cable

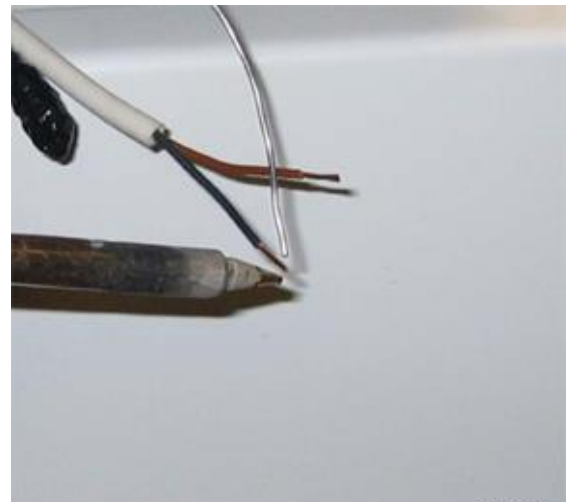


cd001459

- i) Solder the air temperature sensor wires.




j) Connect the wires of the new sensor connector to the soldered wires.

Note: before soldering, fit the two 15 mm heat shrink tubings to the wires of the new connector.

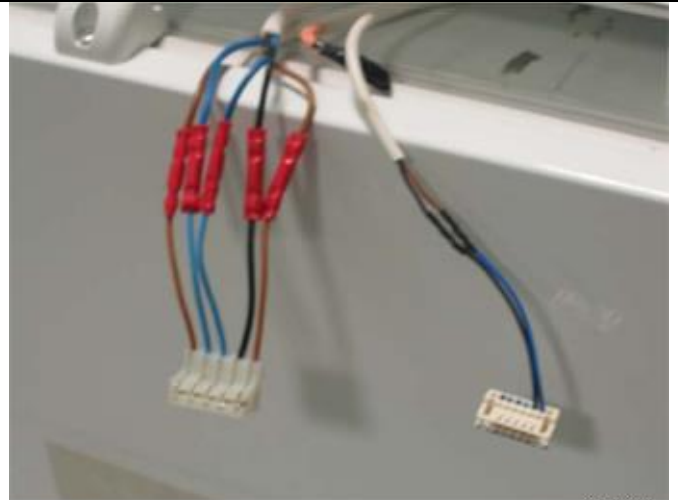


k) Warm up the two heat shrink tubings to insulate the 2 soldered joints.

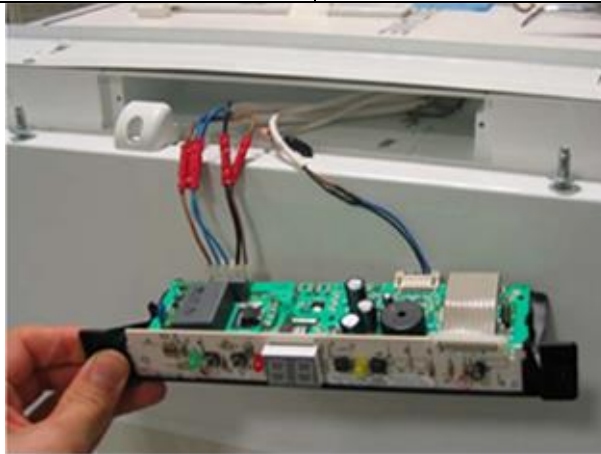

l) Connect the connectors to the new power board.

View of the power board (from the component side).

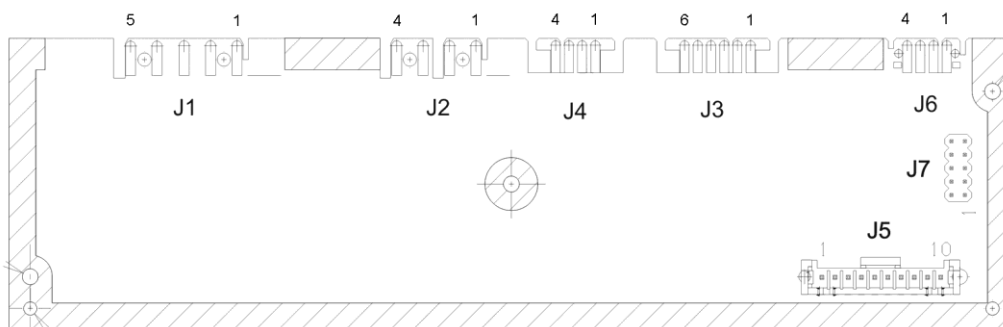

J1 wiring connector (5 pin)

J3 temperature sensor connector (6 pin)

Note:

the new circuit board uses only the air temperature sensor of the refrigerator.

Warning:

in some models the previous FLEC circuit board displayed GREEN digits. The new circuit board displays only RED digits.

Appendix KIT A3

unplug the appliance before carrying out the operations and use appropriate protection.



REPLACEMENT PROCEDURE FOR APPLIANCES WITH AN A3 - 4055010708 KIT



Warning: unplug the appliance before carrying out the operations.

- a) Access the control board support of the appliance.
- b) Remove the support and the previous circuit boards.
- c) Detach the connectors from the previous power board.
- d) Connect the connectors to the new power board.
- e) Fit the support and the new circuit boards (power and display boards) fig. A



Note:

even if the faulty temperature sensor of the evaporator is still connected to the connector, the new circuit board uses only the air temperature sensor of the refrigerator.

Appendix KIT B


unplug the appliance before carrying out the operations and use appropriate protection.



REPLACEMENT PROCEDURE FOR APPLIANCES WITH A B - 50286483008 KIT

- a) Remove the drawers and/or the shelves from inside the appliance.

EXAMPLE OF INDENTATION

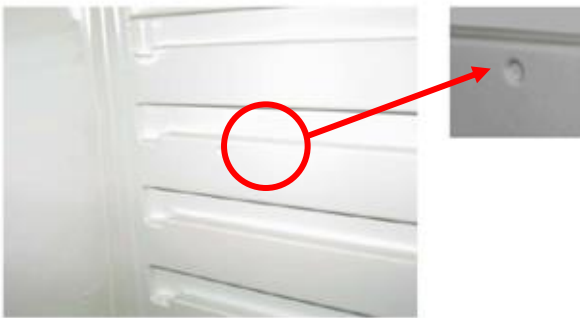

cd001463

- b) Identify the indentation on the compartment wall (see example above).



To Access The Exact Location See At The Bottom Of This Section.



cd001464

- c) Drill a 10 mm hole in the compartment just next to the indentation.



cd001465

d) Cut the cable of the faulty temperature sensor.




cd001466

e) Grip the cable with some pliers (note: the faulty sensor must not be removed from inside the compartment).



cd001467

f) Pull out the cable of the temperature sensor.

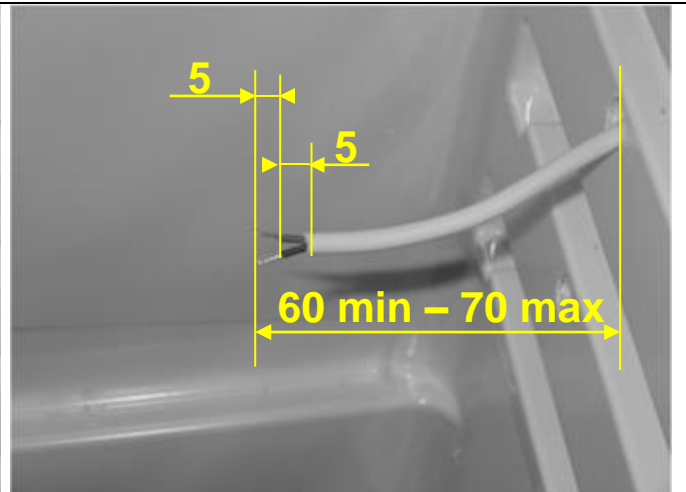

cd001469

g) Cut and remove the sleeve according to the measures shown in the figure.




cd001471

h) Solder the two cable wires.



cd001470

i) Insert the temperature sensor cable into the 50 mm heat shrink tubing.

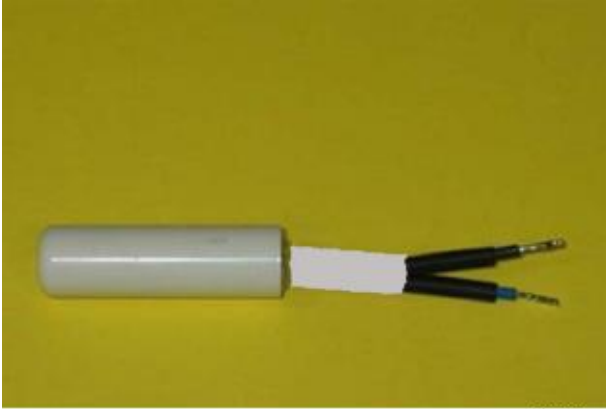

cd001494

- j) Insert the wires of the new temperature sensor into the two 15 mm heat shrink tubings.



cd001495

- k) Solder the wires of the new temperature sensor with the wires of the cable you previously pulled out.



cd001496

- l) Warm up the two heat shrink tubings to insulate the 2 soldered joints.




cd001475

- m) Warm up the 50 mm heat shrink tubing to insulate the wires with the joints.



cd001476

- n) Fit the new sensor in the cover of the housing and fit the cable as shown in the figure.

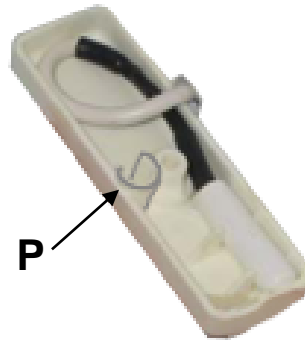

cd001483

- o) Insert the element **P** in the hole previously drilled in the compartment (where the cable of the sensor comes out).



cd001477

- p) Fit the cover in the rectangular seat in the compartment (if there is no seat, place the cover so as not to interfere with the drawers and/or with the shelves) and secure it with the screw supplied in the kit.



cd001478

- q) Fit the screw cover.


POSITION 1



POSITION 2



POSITION 3

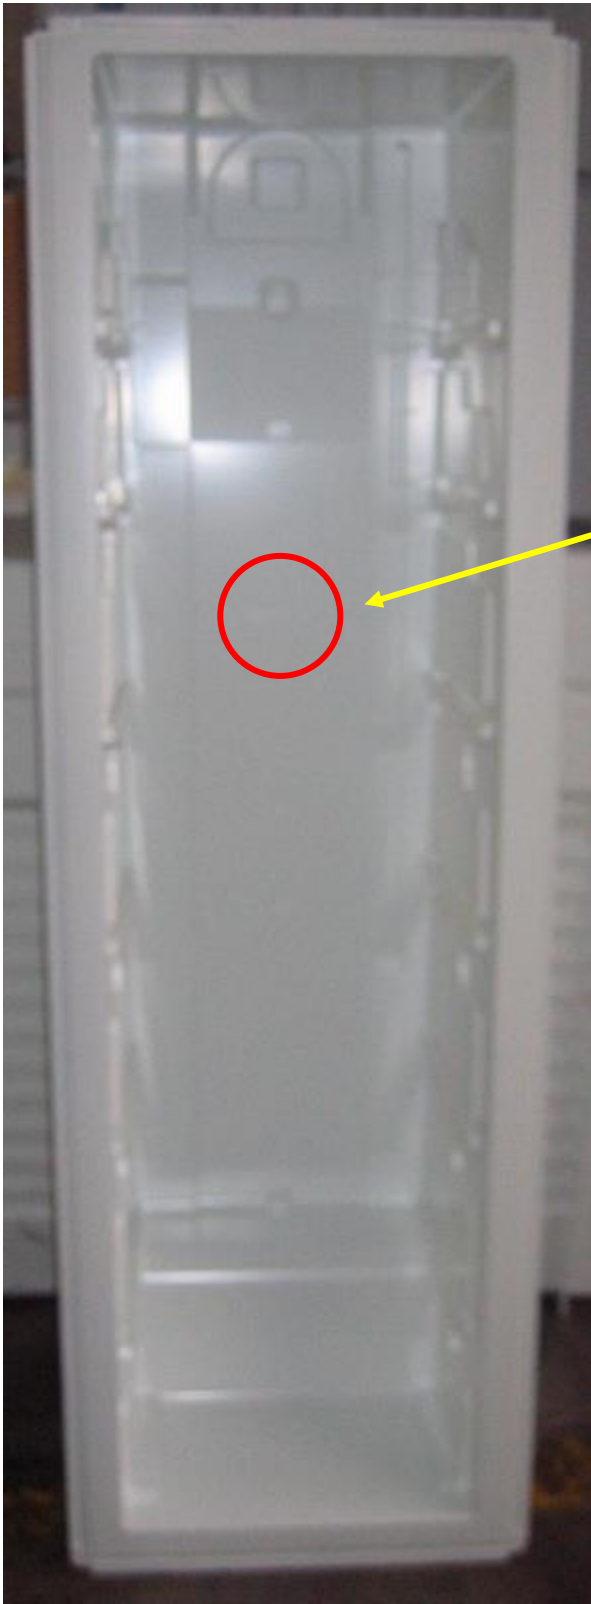


POSITION 4




POSITION 5



POSITION 6

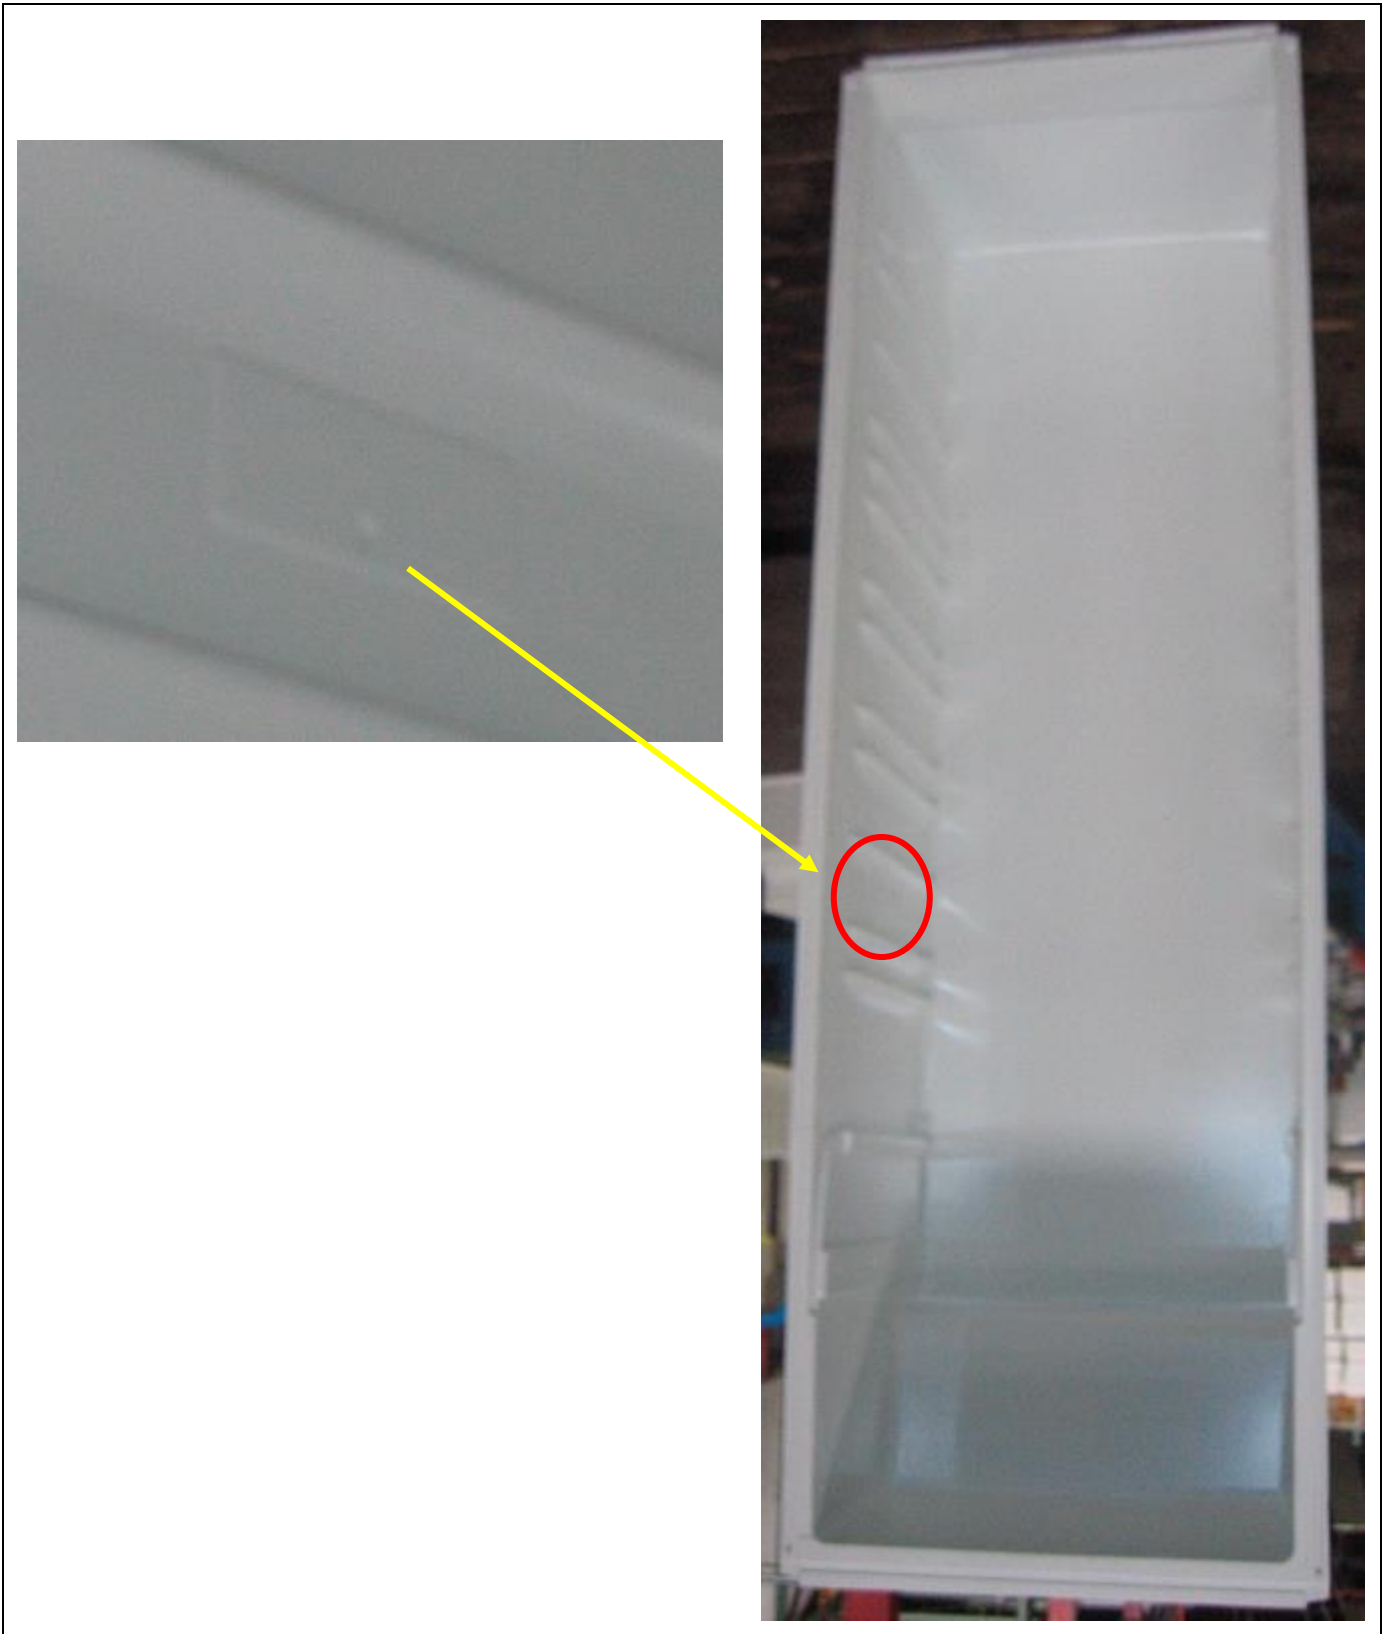



POSITION 7

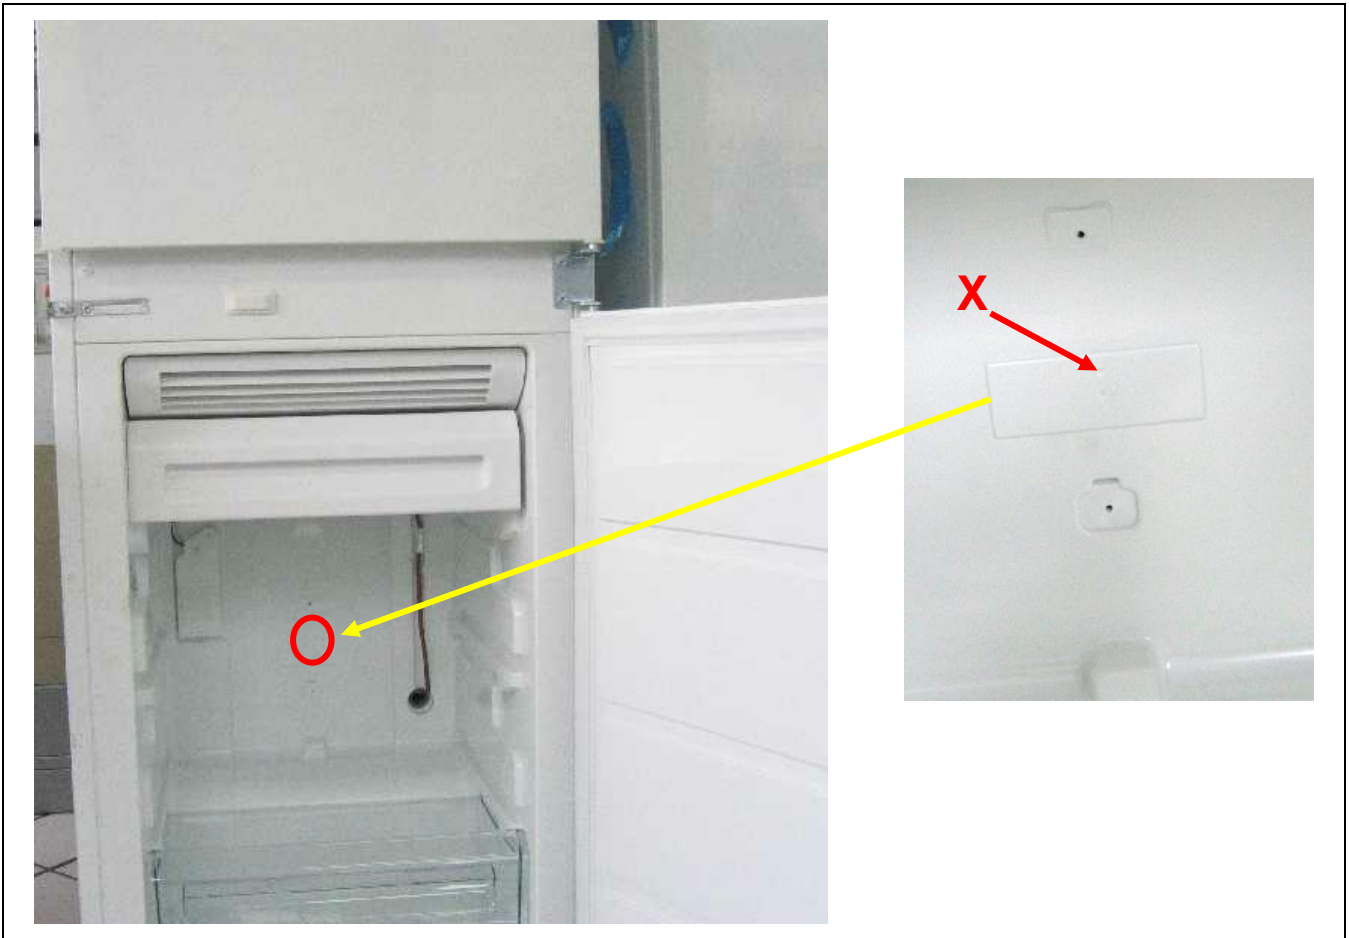

IMPORTANT NOTE:

Drill a hole in the compartment in correspondence with the indentation **X** indicated in figure.


POSITION 8

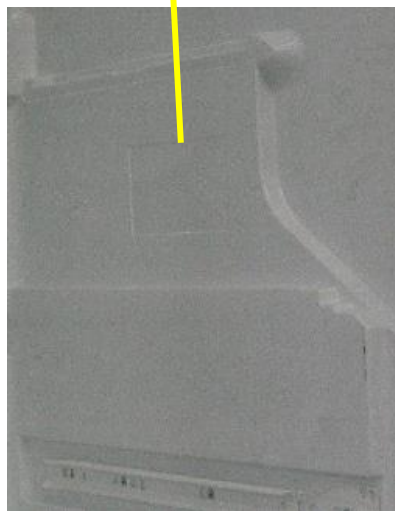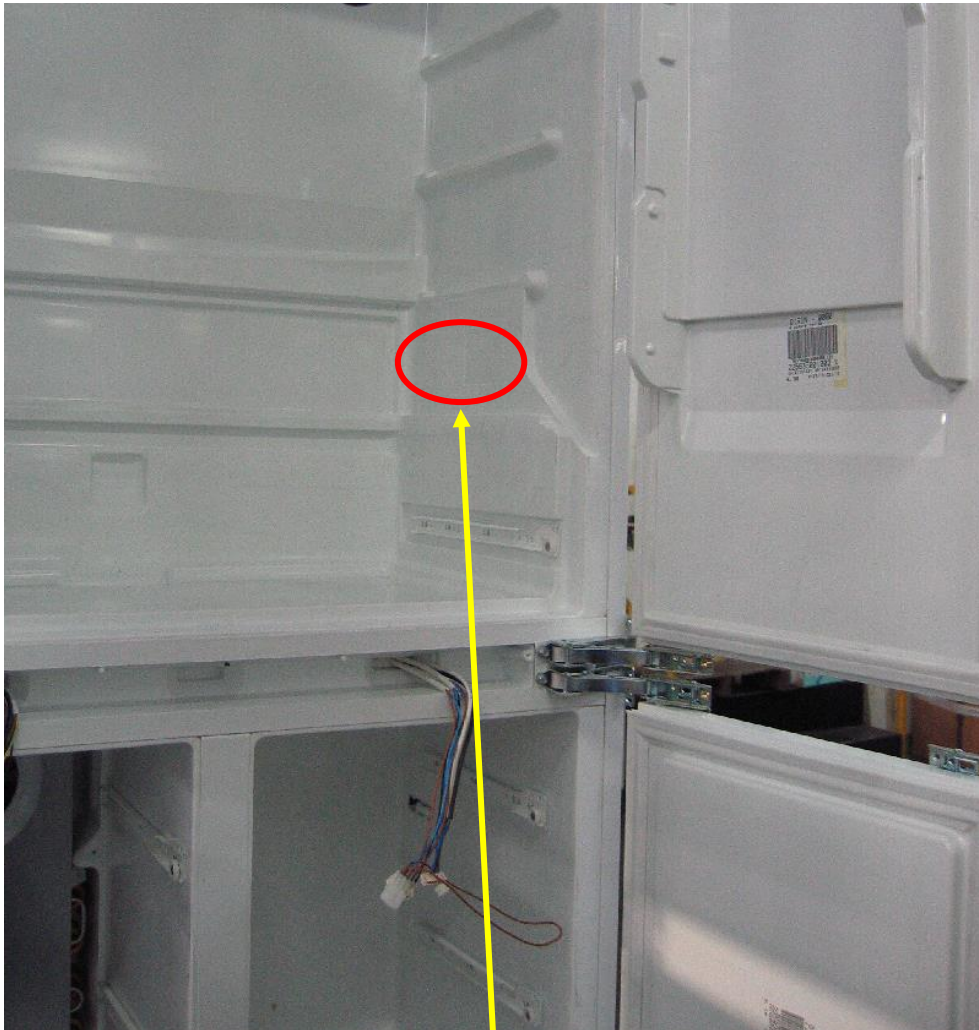

POSITION 9 (till Serial Number 026xxxxx)




POSITION 9a

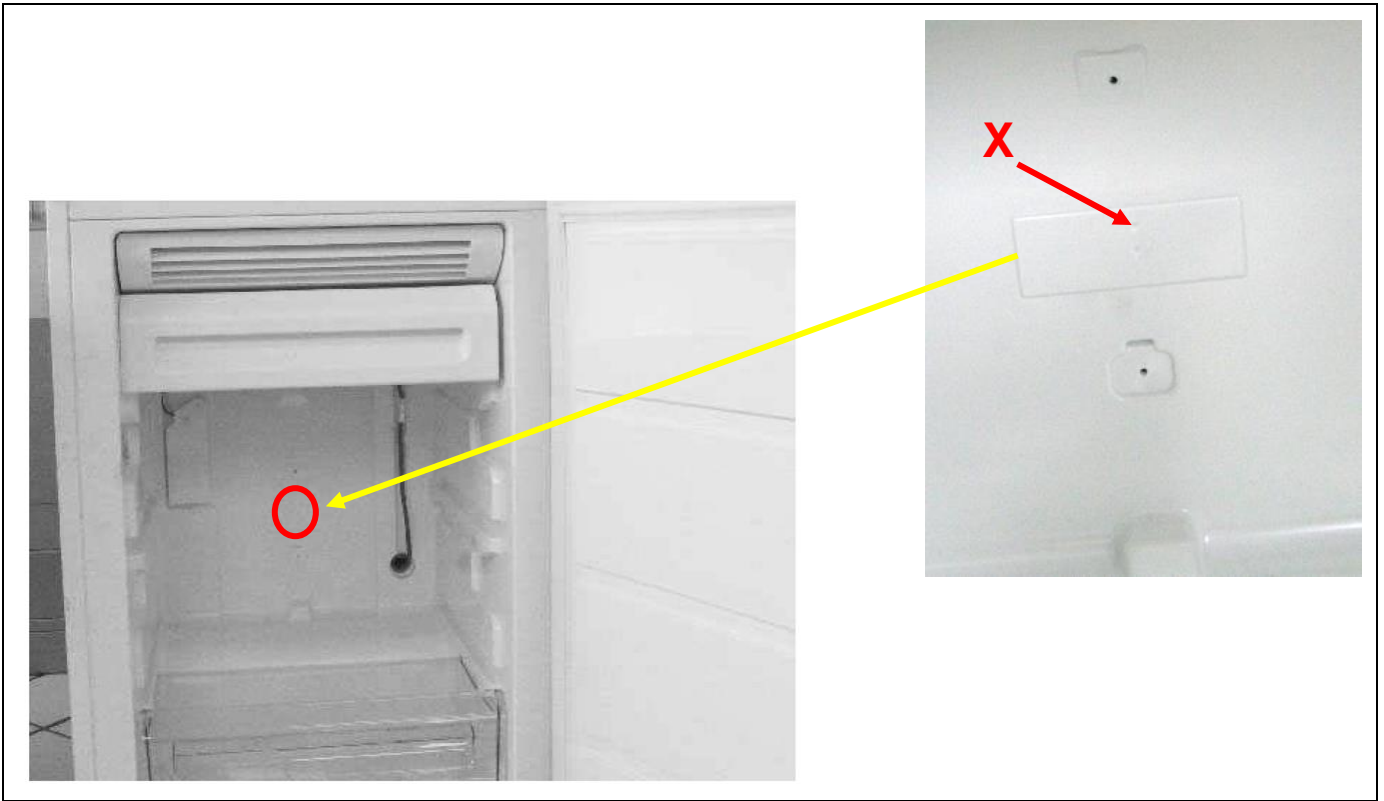

IMPORTANT NOTE:

If the Service Bulletin 599374122 indicates the use of the KIT B part no. 50286483008, drill the compartment in the point corresponding to the indentation **X** shown in figure.
Otherwise, if it indicates KIT NOT AVAILABLE, do not drill the compartment, because the sensor is foamed in the compartment side panel and therefore the KIT B cannot be used, due to the interference between the sensor cover and the freezer drawer.

POSITION 10

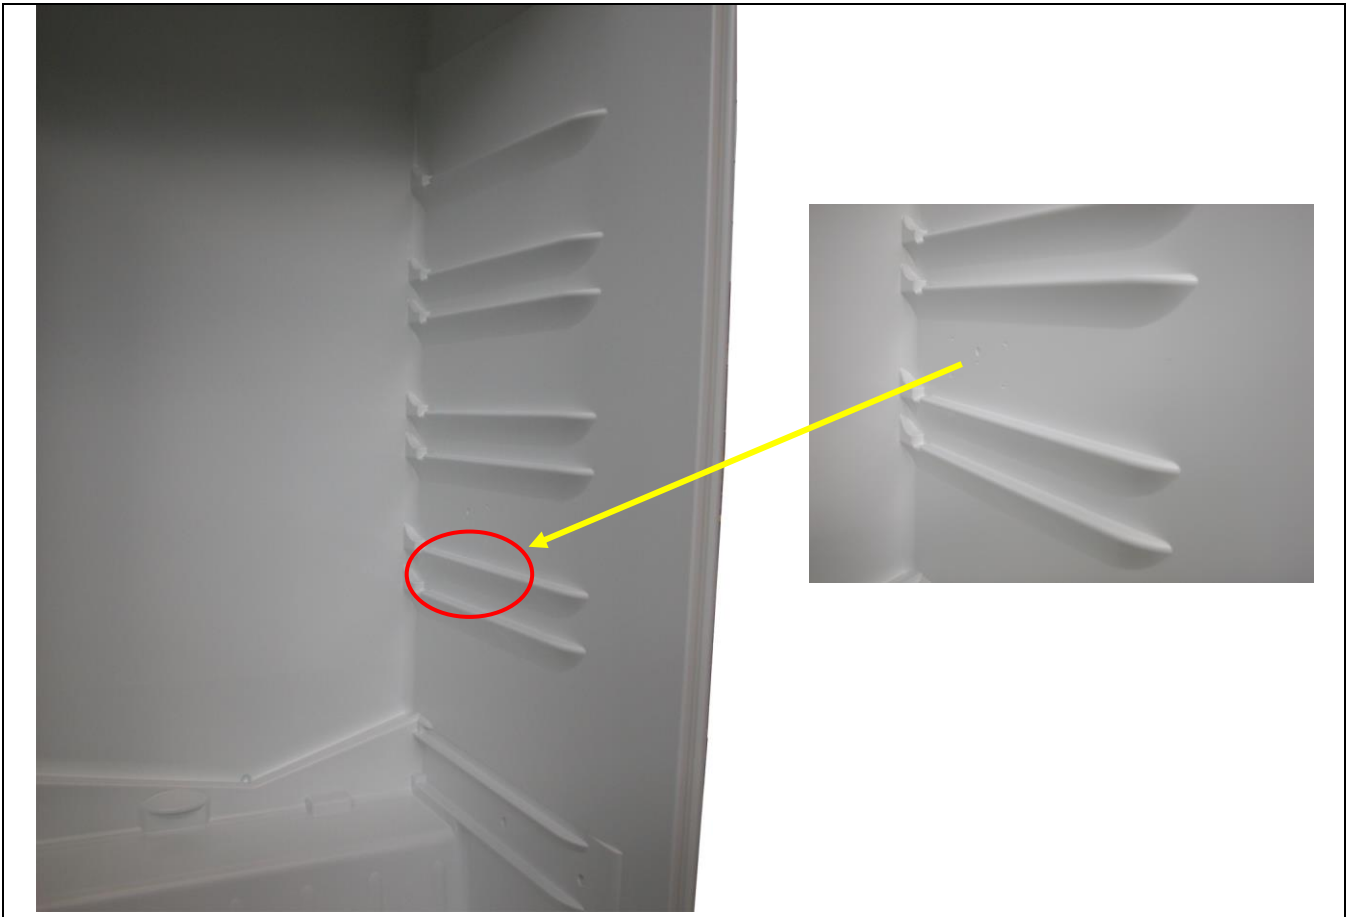


POSITION 11




POSITION 12



POSITION 13

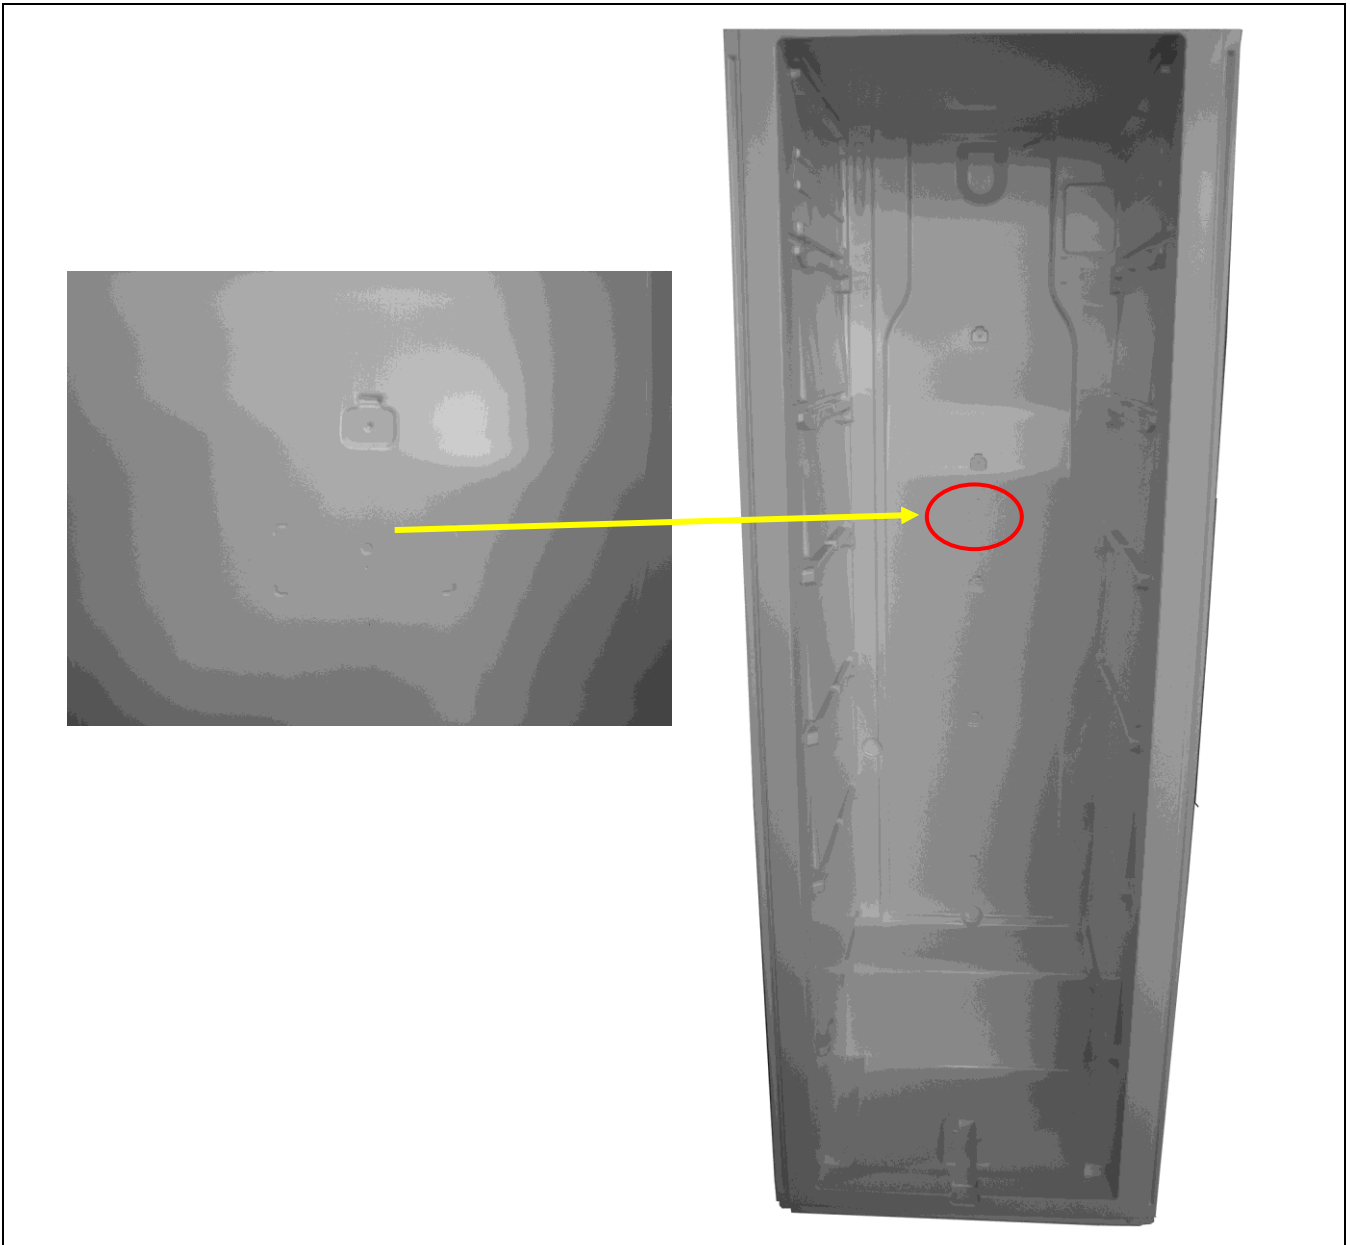


POSITION 14

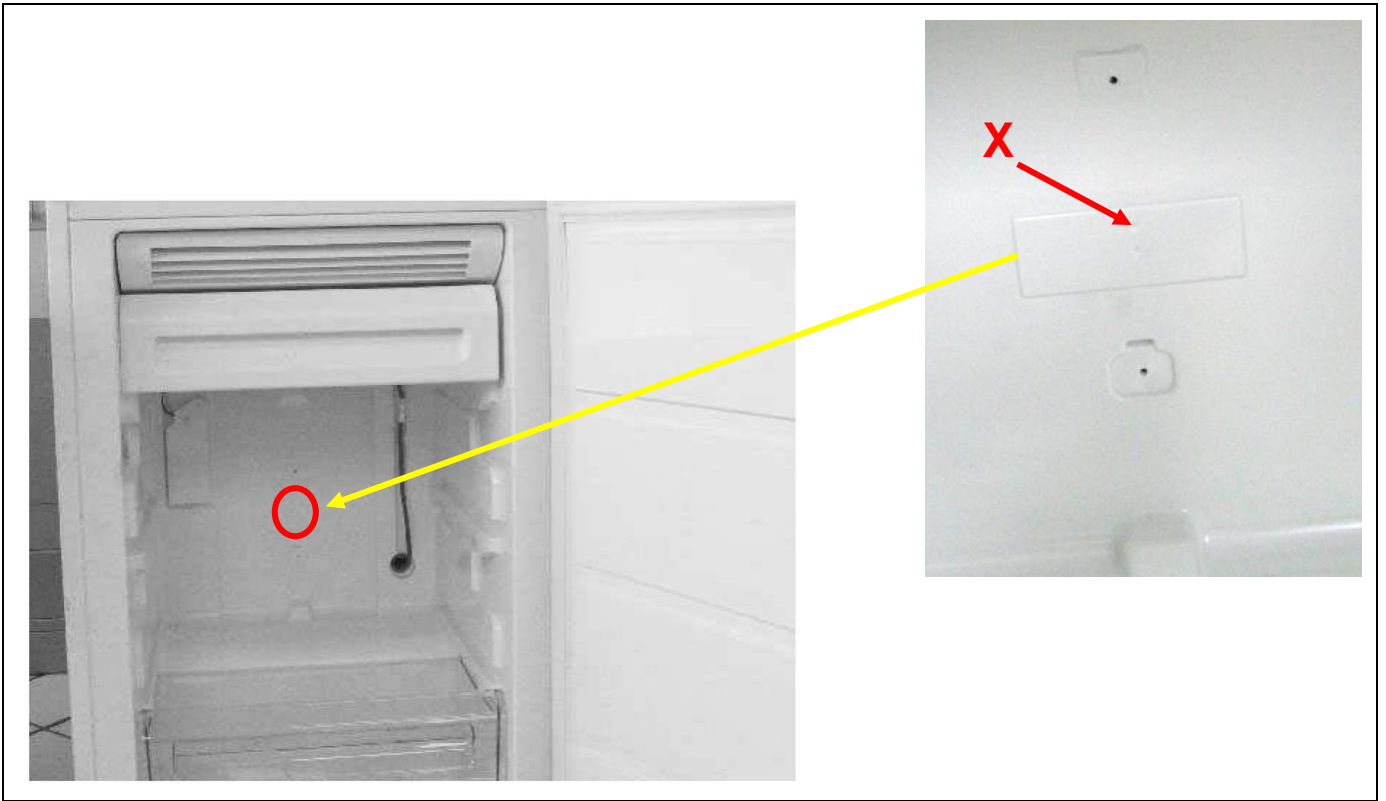


IMPORTANT NOTE:

Drill the compartment in the point corresponding to the indentation **X** indicated in figure.


POSITION 15

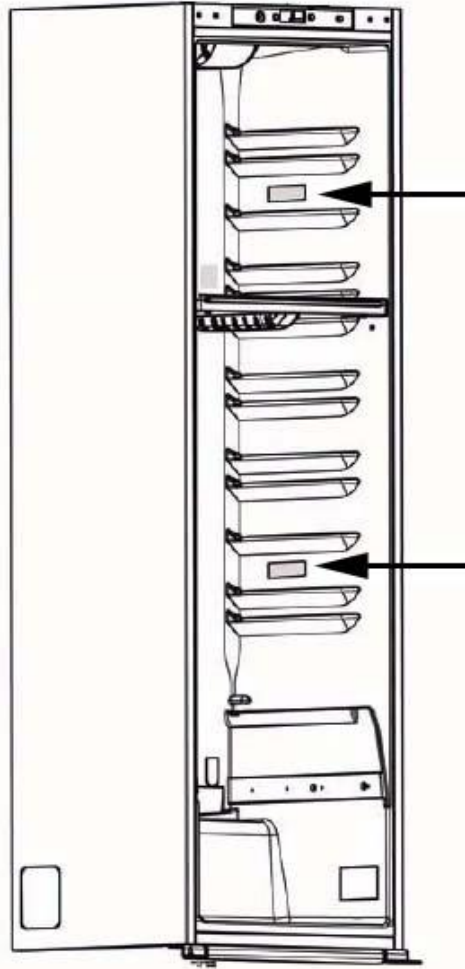


POSITION 16

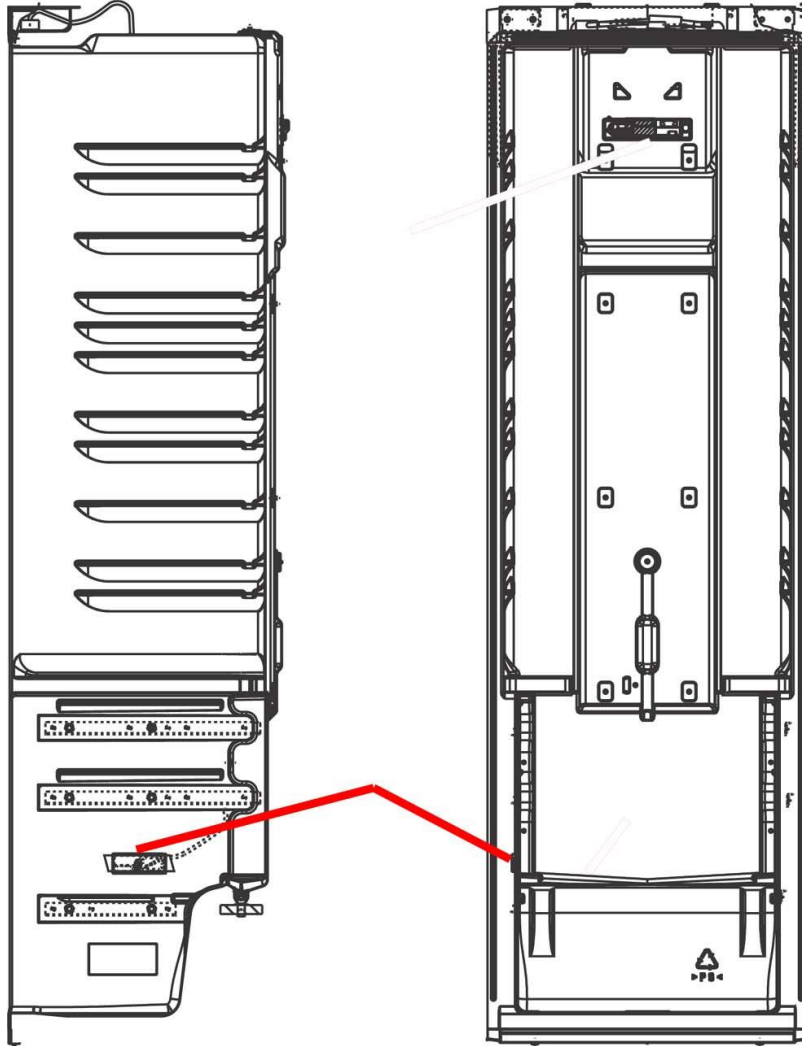

POSITION 17

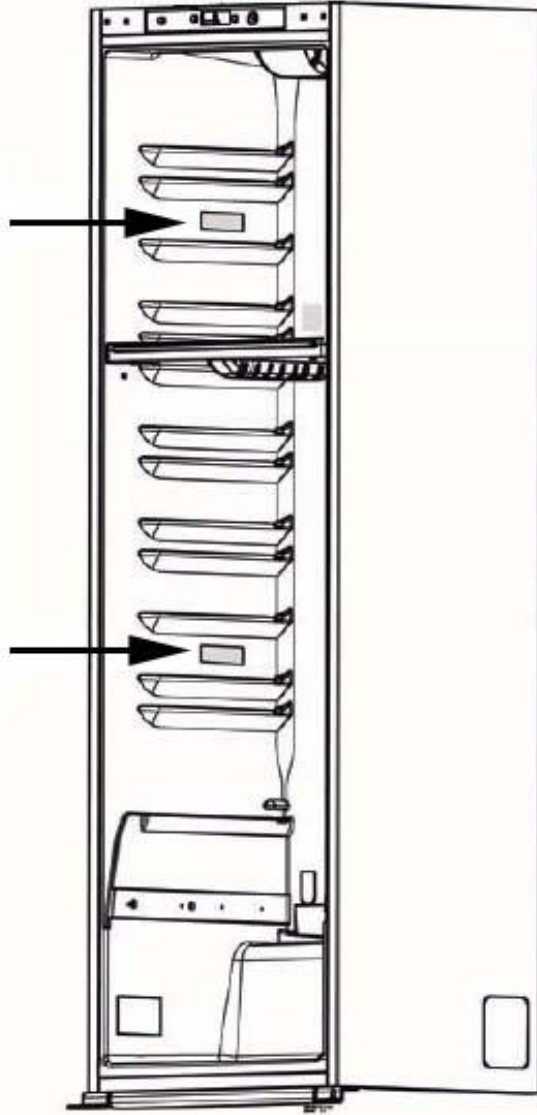

POSITION 18

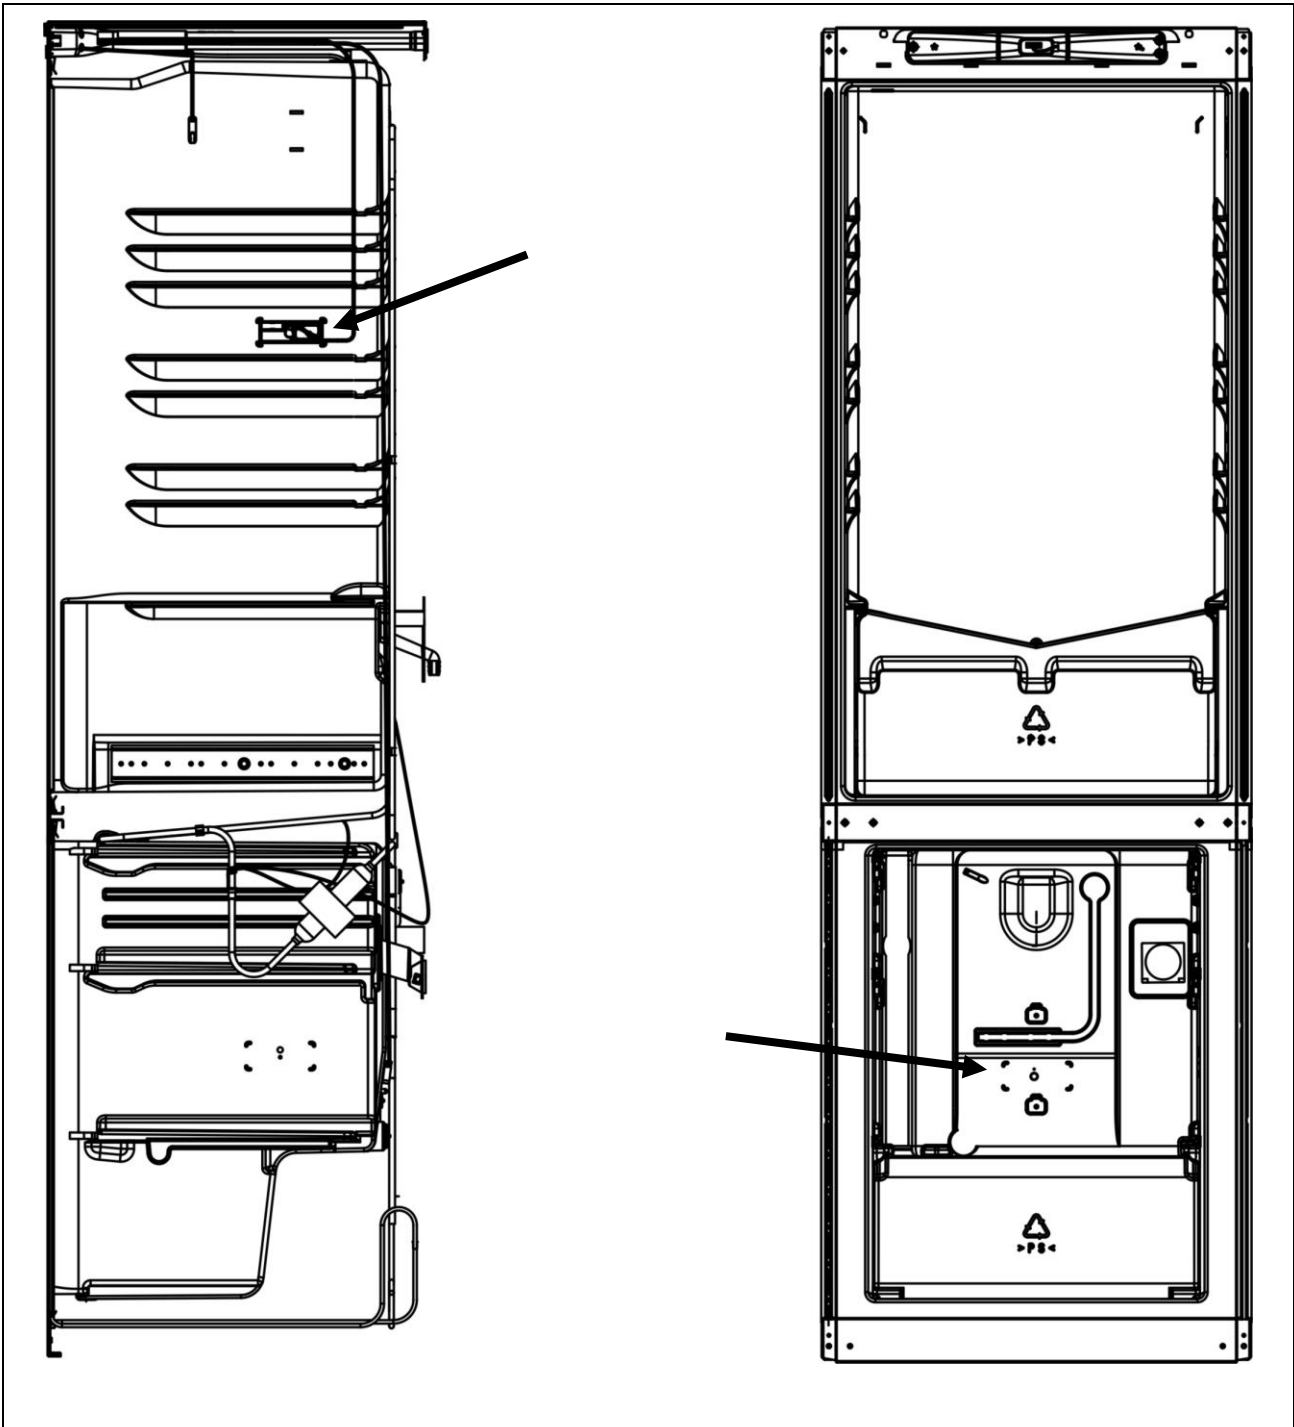


POSITION 19


Probe position in the freezer



Probe position in the refrigerator

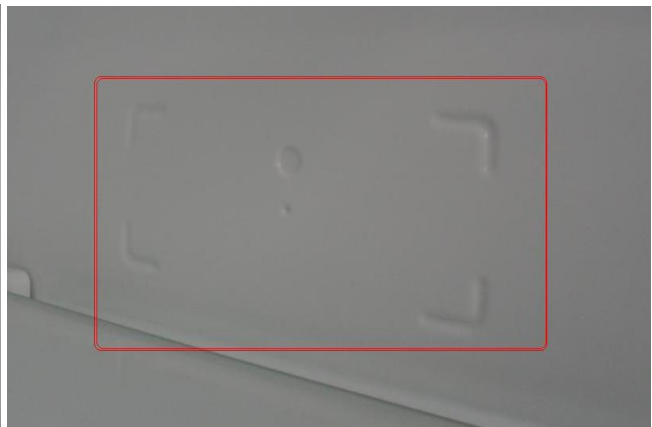

Probe position on the refrigerator evaporator

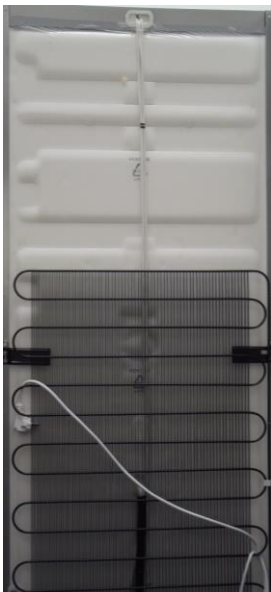


POSITION 20


Probe position in the freezer



Probe position in the fridge

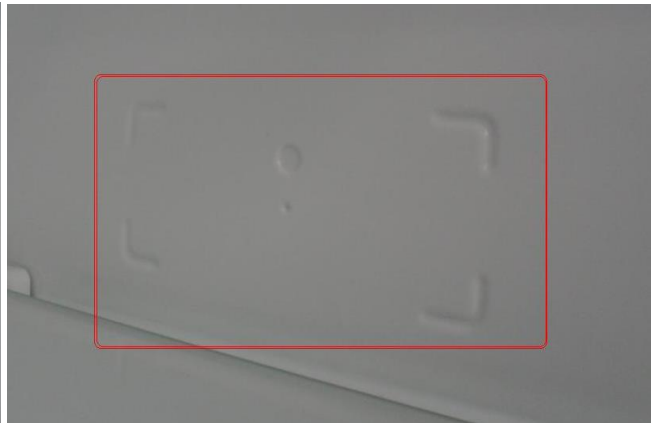


POSITION 21

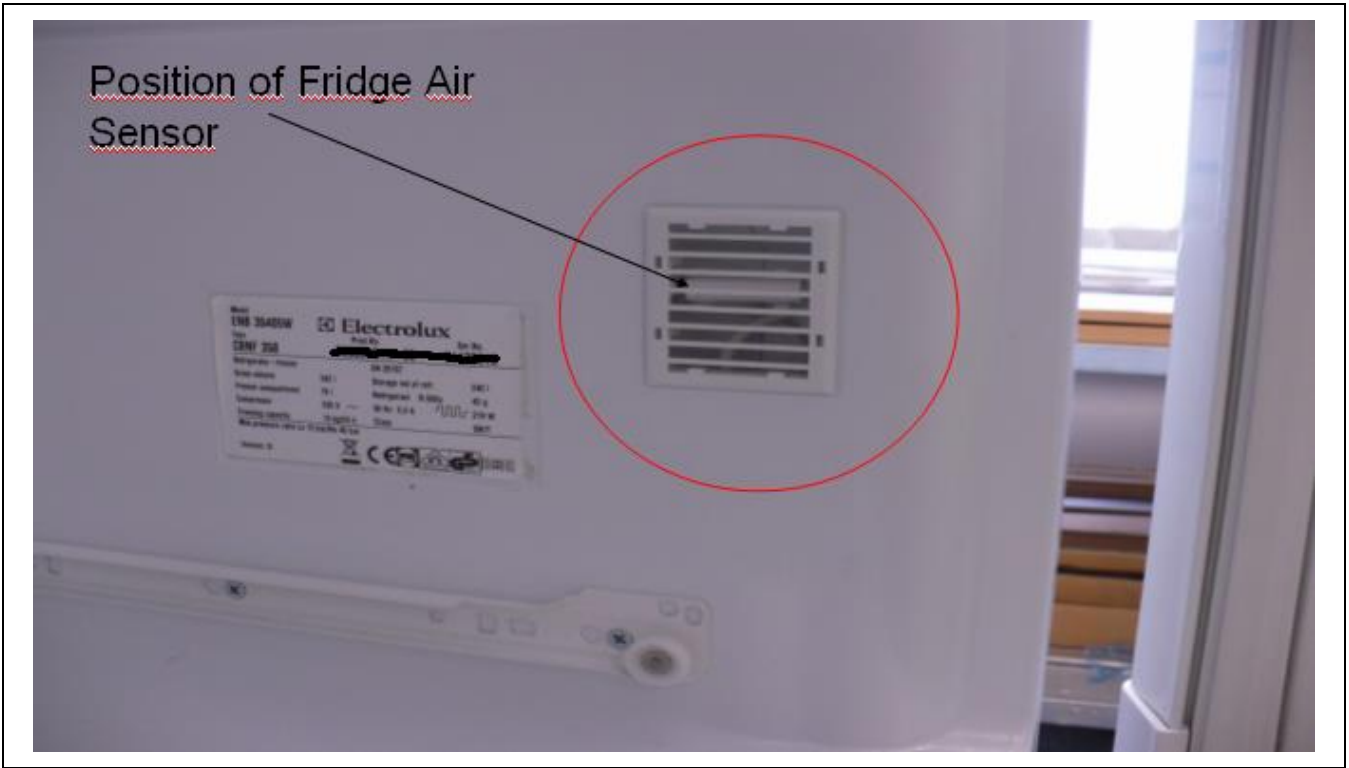

POSITION 22



POSITION 23

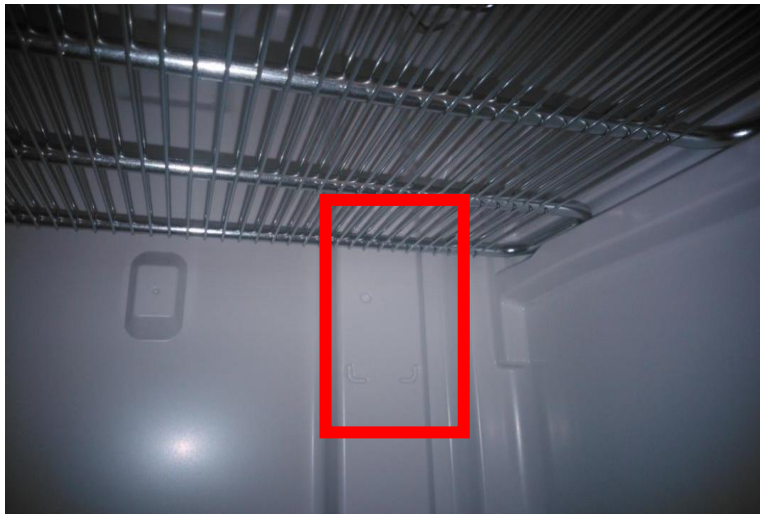

POSITION 24



POSITION 25



POSITION 26







POSITION 27


Position on the freezer



Position on the refrigerator

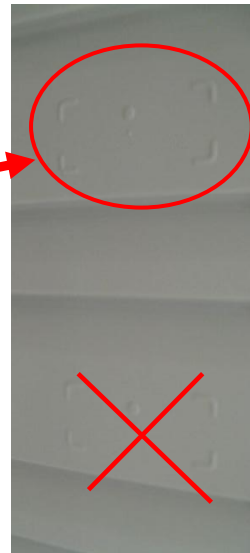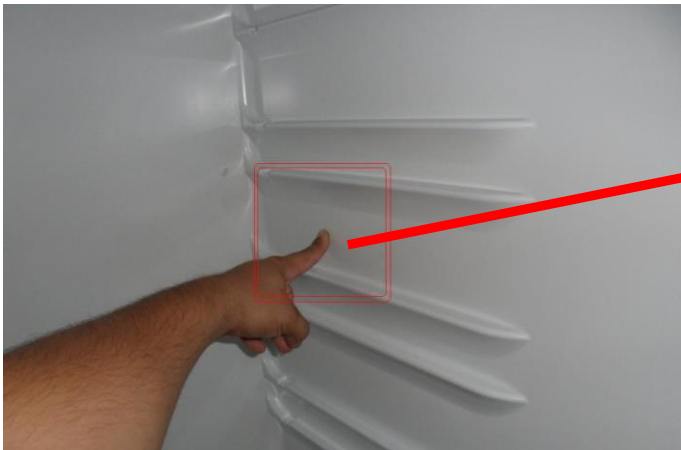


Position on the refrigerator evaporator

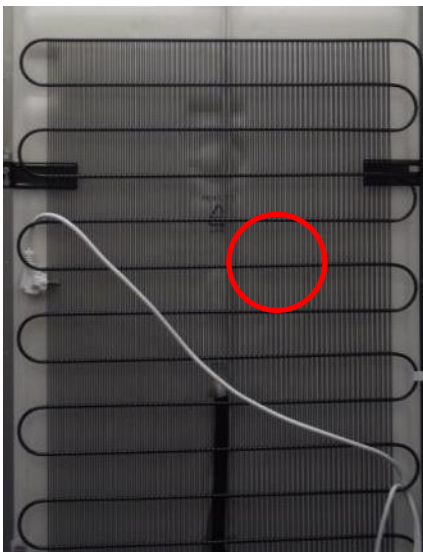

Appendix KIT C and C1

unplug the appliance before carrying out the operations and use appropriate protection.

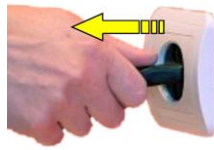

REPLACEMENT PROCEDURE FOR APPLIANCES WITH

KIT C - 50286484006


KIT C1 - 50292572000

- a) Remove the drawers and/or the shelves from inside the appliance.



cd001480


- b) Access the faulty temperature sensor.
Note:
the support of the sensor may vary depending on the appliance.

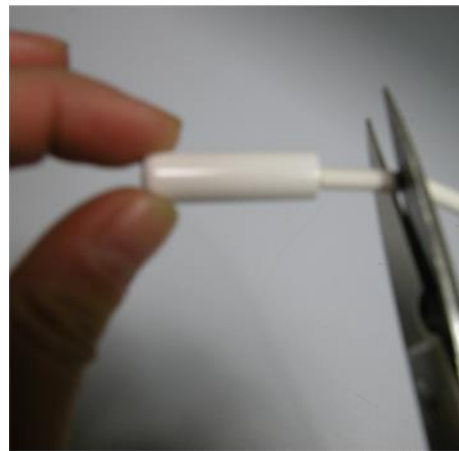

cd001490

- c) Cut the cable of the faulty temperature sensor after checking that the new sensor can reach its correct position.

Only for the C1 kit, for insulation reasons, the cable of the new sensor should not be shortened! The exceeding cable must be properly positioned.

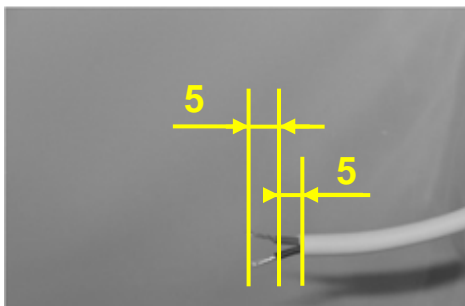

cd001491

- d) Cut and remove the sleeve according to the measures shown in the figure.




cd001492

- e) Solder the two cable wires.




cd001493

- f) Insert the temperature sensor cable into the 50 mm heat shrink tubing.

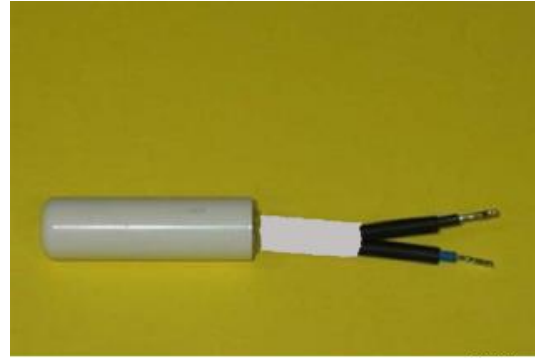

cd001494

- g) Insert the wires of the new temperature sensor into the two 15 mm heat shrink tubings.

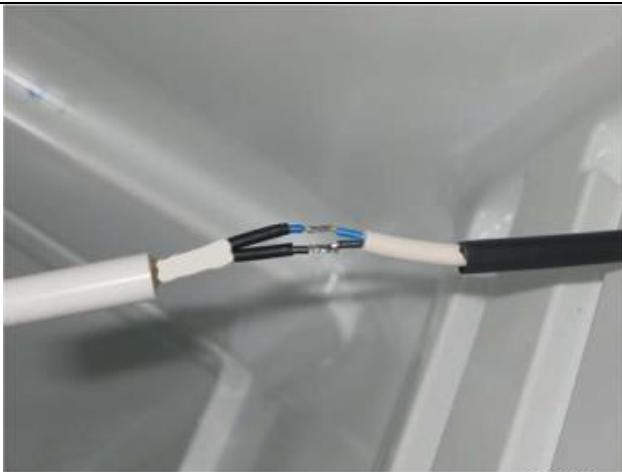

cd001495

- h) Solder the wires of the new temperature sensor with the wires of the cable you previously cut.



cd001496

- i) Warm up the two heat shrink tubings to insulate the 2 soldered joints.



cd001497


- j) Warm up the 50 mm heat shrink tubing to insulate the wires with the joints.

- k) Fit the new sensor into its original housing. The exceeding cable must be properly positioned.

NOTE FOR THE 4-DOOR MODEL (PNC 925 781 xxx):




- l) view of the position of the faulty original sensor to be replaced.

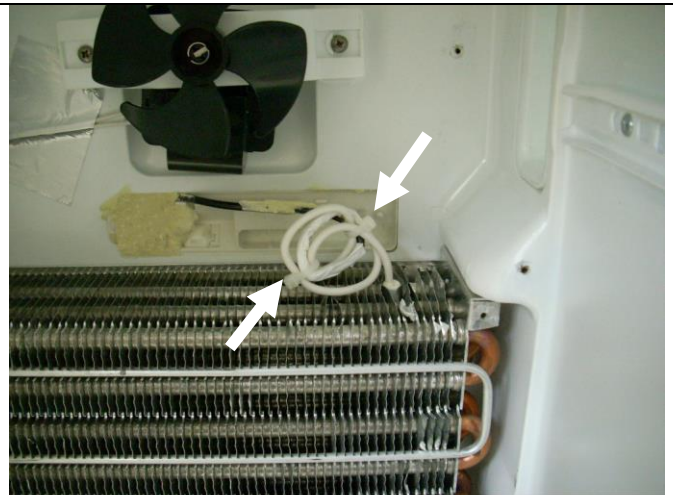

- m) View of the new sensor cable position. The exceeding cable must be secured in place using 2 clamps as shown in the figure to avoid contact with the fan and the defrosting heating element.

Appendix KIT D

unplug the appliance before carrying out the operations and use appropriate protection.

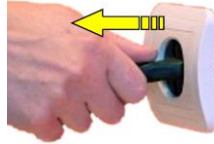


REPLACEMENT PROCEDURE FOR APPLIANCES WITH A D - 50286485003 KIT

- a) Remove the drawers and/or the shelves from inside the appliance.




cd001481

- b) Remove the protection grid from the temperature sensor.
Note:
the protection grid may differ depending on the appliance.

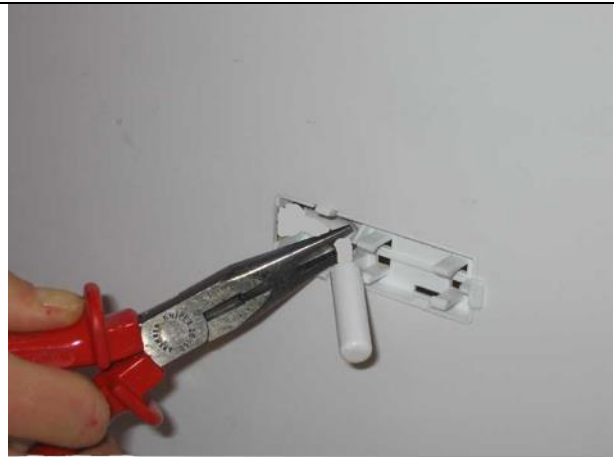


cd001485

- c) Remove the faulty temperature sensor.

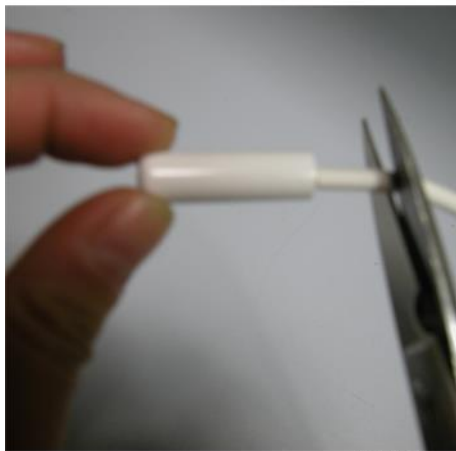

cd001490

- d) Cut the cable of the faulty temperature sensor.

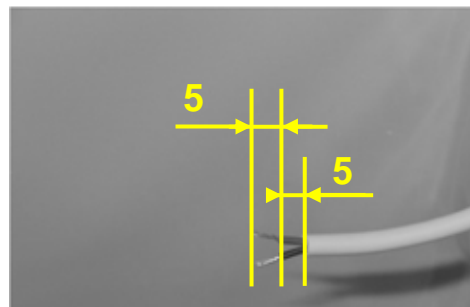

cd001491

- e) Cut and remove the sleeve according to the measures shown in the figure.




cd001492

f) Solder the two cable wires.



cd001493

g) Insert the temperature sensor cable into the 50 mm heat shrink tubing.

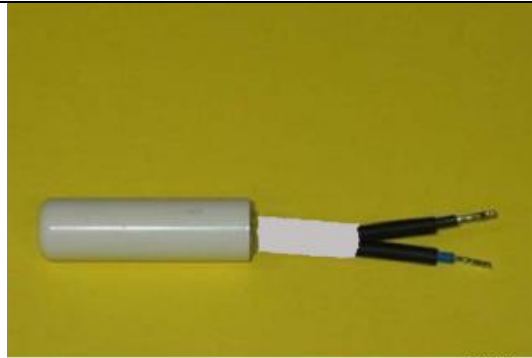

cd001494

h) Insert the wires of the new temperature sensor into the two 15 mm heat shrink tubings.



cd001495

i) Solder the wires of the new temperature sensor with the wires of the cable you previously cut.




cd001496

j) Warm up the two heat shrink tubings to insulate the 2 soldered joints.



cd001497

k) Warm up the 50 mm heat shrink tubing to insulate the wires with the joints.

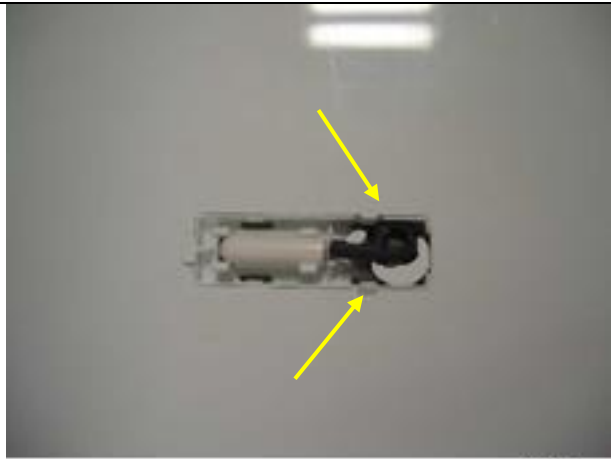

0001498

l) Fit the new sensor into its original housing.

Note: place the cable so that it does not come in contact with the hooks on the grid shown in the figure in order to avoid damaging the cable when refitting the grid.

m) Reposition the protection grid over the temperature sensor.

REVISIONS:

| Revision | Date | Description | Author | Approved by - on |
|----------|---------|-------------------|------------------|---------------------------|
| 00 | 07/2011 | Document creation | | |
| 01 | 03/2012 | New PNC | | |
| 02 | 04/2014 | New PNC | Alfio De Lorenzi | |
| 03 | 11/2014 | New PNC | Marek Zemsta | Sándor Kórik – 20.11.2014 |
| 04 | 05/2016 | New PNC | Tomasz Hyży | Nora Tihanyi –23.05.2016 |