

ICE BUILDING IN COMBI BOTTOM FRIDGE COMPARTMENT

DESCRIPTION:

Ice is building up because of the fridge evaporator tubes are too close to the inner liner.




SOLUTION:


Follow the below instructions to bend the fridge evaporator:



1. Unplug the appliance. Remove the condenser screws. Bend back the condenser from the cabinet. Be careful not to damage brazed joints.

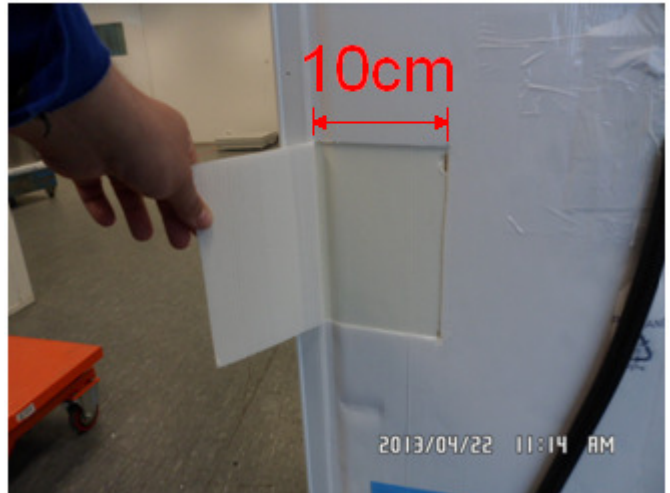

2. Cut the corrugated material approximately 10cm from the left side panel on height of ice formed inside.

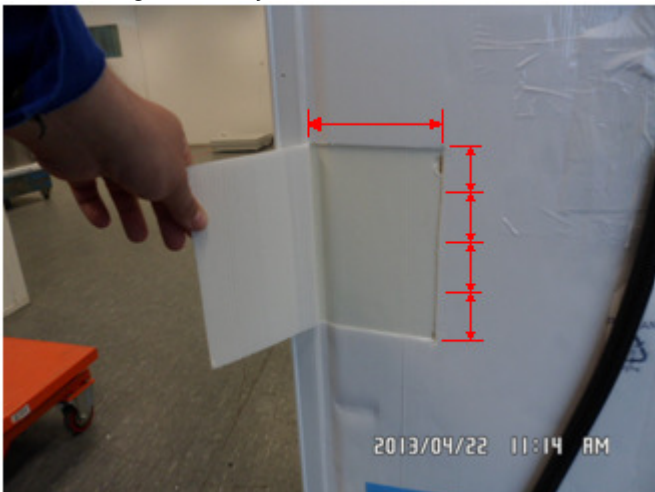

3. Cut the foam 4,5 cm deep and split the length to 4 parts.



4. Take out the cutted foam with a big screw driver or other hand tool. Clean the tubes from the foam.




5. Please be sure the foam removing process does not cause damage to the inner liner!



6. Pull back the fridge evaporator tubes from the inner liner until the distance is 3-4 cm.



7. Before you put back the removed foam parts cut them 2-4 cm for better binding with new foam.

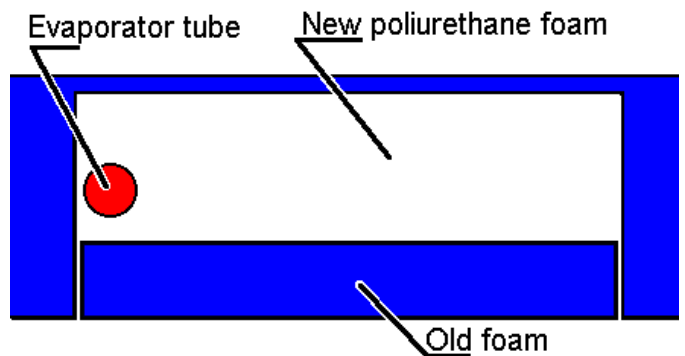

8. Place the foam parts to the cabinet back (close to corrugated material). Before placing the last part you have to fill up the space between inner liner and foam parts with polyurethane foam (PO)

9. Bend the corrugated material to the cutted parts, push it and wait until the new polyurethane foam gets solid.

10. Bend out the corrugated material and fill up the gaps with rubber or some material that can not react with polyurethane foam.

11. Band back the corrugated material and use transparent adhesive tape to attach it.

12. Fix the condenser to the cabinet with screws

13. Plug on the appliance and wait approximately 1,5 – 3 hours to check if there is any condensation on the cutted place and also on the claimed area inside the fridge compartment.

MODELS INVOLVED:

PNC	TYPE	BRAND
925 031 055	CB290 1C	Electrolux
925 031 057	CB290 1C	Elektro Helios
925 031 060	CB290 1C	Zanussi-Electrolux
925 031 062	CB290 1C	Zanussi
925 031 065	CB290 1C	Zanussi
925 031 067	CB290 1C	Faure
925 031 083	CB290 1C	Electrolux
925 031 086	CB290 1C	Electrolux
925 031 087	CB290 1C	Electrolux
925 031 088	CB290 1C	Electrolux
925 031 093	CB290 1C	AEG
925 031 095	CB290 1C	Rex-Electrolux
925 031 104	CB290 1C	Zoppas
925 031 106	CB290 1C	Electrolux
925 031 107	CB290 1C	AEG
925 031 108	CB290 1C	AEG
925 031 109	CB290 1C	AEG
925 031 110	CB290 1C	Electrolux-Rex
925 031 111	CB290 1C	Electrolux-Rex
925 031 112	CB290 1C	Electrolux-Rex
925 031 113	CB290 1C	Novamatic
925 031 114	CB290 1C	Zanussi
925 031 115	CB290 1C	Zanker
925 031 116	CB290 1C	Zanker
925 031 117	CB290 1C	Electrolux
925 031 118	CB290 1C	Electrolux
925 031 119	CB290 1C	Electrolux
925 031 120	CB290 1C	Electrolux
925 031 121	CB290 1C	Zanussi
925 031 122	CB290 1C	Zoppas
925 031 123	CB290 1C	Elektro Helios
925 031 124	CB290 1C	Electrolux
925 031 125	CB290 1C	Electrolux-Rex
925 031 126	CB290 1C	Electrolux-Rex
925 031 127	CB290 1C	Electrolux-Rex
925 031 128	CB290 1C	Electrolux-Rex
925 031 129	CB290 1C	Novamatic
925 031 130	CB290 1C	Electrolux
925 031 131	CB290 1C	Electrolux
925 031 132	CB290 1C	Electrolux
925 031 133	CB290 1C	Electrolux
925 031 409	CB340 1C	Zanussi
925 031 418	CB340 1C	Electrolux
925 031 424	CB340 1C	Electrolux
925 031 425	CB340 1C	Electrolux
925 031 434	CB340 1C	Electrolux
925 031 437	CB340 1C	Electrolux
925 031 447	CB340 1C	Zanker

PNC	TYPE	BRAND
925 032 468	CB400 1C	Zanussi
925 032 475	CB400 1C	Electrolux
925 032 479	CB400 1C	Zoppas
925 032 481	CB400 1C	Rex-Electrolux
925 032 482	CB400 1C	Rex-Electrolux
925 032 483	CB400 1C	Zanussi
925 032 486	CB400 1C	Electrolux
925 032 487	CB400 1C	Electrolux
925 032 488	CB400 1C	Electrolux
925 032 489	CB400 1C	Electrolux
925 032 491	CB400 1C	Electrolux
925 032 505	CB400 1C	Electrolux
925 032 520	CB400 1C	Zoppas
925 032 521	CB400 1C	Zanussi
925 032 523	CB400 1C	AEG-Electrolux
925 032 528	CB400 1C	Husqvarna-Electrolux
925 032 531	CB400 1C	Zanker
925 032 532	CB400 1C	Electrolux
925 032 533	CB400 1C	Electrolux
925 032 534	CB400 1C	Electrolux
925 032 535	CB400 1C	Electrolux
925 032 536	CB400 1C	Electrolux
925 032 539	CB400 1C	Zanker
925 032 540	CB400 1C	Zanker
925 032 542	CB400 1C	Zanussi
925 032 544	CB400 1C	Zanussi
925 032 545	CB400 1C	Zanussi
925 032 546	CB400 1C	Zanussi
925 032 547	CB400 1C	Zanussi
925 032 551	CB400 1C	Zoppas
925 032 552	CB400 1C	Zoppas
925 032 553	CB400 1C	AEG
925 032 555	CB400 1C	AEG
925 032 558	CB400 1C	Zanussi
925 032 559	CB400 1C	Zanussi
925 032 560	CB400 1C	Zanussi
925 032 562	CB400 1C	Electrolux
925 032 563	CB400 1C	Electrolux
925 032 564	CB400 1C	Electrolux
925 032 565	CB400 1C	Electrolux
925 032 571	CB400 1C	Electrolux-Rex
925 032 572	CB400 1C	Electrolux-Rex
925 032 810	CB360 1C	AEG
925 032 813	CB360 1C	Electrolux
925 032 818	CB360 1C	Electrolux
925 032 819	CB360 1C	Electrolux
925 032 821	CB360 1C	Electrolux
925 032 822	CB360 1C	Electrolux

PNC	TYPE	BRAND
925 031 503	CB340 1C	Zanker
925 031 504	CB340 1C	Zanussi
925 031 508	CB340 1C	Zanussi
925 031 519	CB340 1C	Faure
925 031 522	CB340 1C	Elektro Helios
925 031 523	CB340 1C	Elektro Helios
925 031 524	CB340 1C	Rosenlew
925 031 526	CB340 1C	Zanussi
925 031 536	CB340 1C	Electrolux
925 031 552	CB340 1C	Zanker
925 031 553	CB340 1C	Zanussi
925 031 560	CB340 1C	Zanussi
925 031 561	CB340 1C	Curtiss
925 031 563	CB340 1C	Listo
925 031 564	CB340 1C	Elektro Helios
925 031 565	CB340 1C	Electrolux
925 031 566	CB340 1C	Electrolux
925 031 567	CB340 1C	Electrolux
925 031 571	CB340 1C	John Lewis
925 031 572	CB340 1C	John Lewis
925 031 574	CB340 1C	AEG
925 031 576	CB340 1C	AEG
925 031 585	CB340 1C	Electrolux
925 031 588	CB340 1C	Elektro Helios
925 031 589	CB340 1C	Electrolux
925 031 590	CB340 1C	Electrolux
925 031 591	CB340 1C	AEG
925 031 592	CB340 1C	AEG
925 031 593	CB340 1C	AEG
925 031 594	CB340 1C	AEG
925 031 595	CB340 1C	IKEA
925 031 596	CB340 1C	IKEA
925 031 597	CB340 1C	IKEA
925 031 598	CB340 1C	IKEA
925 031 599	CB340 1C	Electrolux
925 031 803	CB340 1C	Novamatic
925 031 804	CB340 1C	Electrolux
925 031 805	CB340 1C	Zanussi
925 031 806	CB340 1C	Faure
925 031 808	CB340 1C	Electrolux
925 031 809	CB340 1C	Electrolux
925 031 815	CB340 1C	Zanussi
925 031 816	CB340 1C	Electrolux
925 031 817	CB340 1C	Electrolux
925 031 818	CB340 1C	Faure
925 031 819	CB340 1C	Zanussi
925 031 820	CB340 1C	Zanussi
925 031 821	CB340 1C	Zanussi
925 031 822	CB340 1C	Zanussi
925 031 823	CB340 1C	Zanussi

PNC	TYPE	BRAND
925 032 823	CB360 1C	Electrolux
925 032 824	CB360 1C	Electrolux
925 032 834	CB360 1C	AEG
925 032 835	CB360 1C	AEG
925 032 849	CB360 1C	Zoppas
925 032 850	CB360 1C	Zoppas
925 032 851	CB360 1C	Zoppas
925 032 852	CB360 1C	Zoppas
925 032 853	CB360 1C	Zanussi
925 032 854	CB360 1C	Electrolux
925 032 857	CB360 1C	Zanussi
925 032 858	CB360 1C	AEG
925 032 859	CB360 1C	AEG
925 032 863	CB360 1C	Electrolux-Rex
925 032 864	CB360 1C	Electrolux-Rex
925 032 865	CB360 1C	Electrolux-Rex
925 032 866	CB360 1C	Electrolux-Rex
925 032 868	CB360 1C	AEG
925 032 869	CB360 1C	AEG
925 032 870	CB360 1C	Husqvarna-Electrolux
925 032 871	CB360 1C	AEG
925 032 872	CB360 1C	AEG
925 032 874	CB360 1C	Electrolux
925 032 875	CB360 1C	Electrolux
925 032 876	CB360 1C	Electrolux
925 032 877	CB360 1C	Electrolux
925 032 878	CB360 1C	AEG
925 032 879	CB360 1C	AEG
925 032 880	CB360 1C	AEG
925 032 881	CB360 1C	Zanussi
925 032 882	CB360 1C	Zanussi
925 032 883	CB360 1C	Electrolux
925 032 884	CB360 1C	Electrolux
925 032 885	CB360 1C	Electrolux
925 032 886	CB360 1C	Electrolux
925 032 887	CB360 1C	Electrolux
925 032 888	CB360 1C	AEG
925 032 889	CB360 1C	Electrolux
925 032 890	CB360 1C	Electrolux
925 032 891	CB360 1C	Electrolux
925 032 892	CB360 1C	Zanker
925 032 893	CB360 1C	Zanker
925 032 894	CB360 1C	Zanker
925 032 895	CB360 1C	Zanker
925 032 897	CB360 1C	Novamatic
925 032 898	CB360 1C	AEG
925 032 900	CB360 1C	Zanussi
925 032 904	CB360 1C	Electrolux-Rex
925 032 905	CB360 1C	Electrolux-Rex
925 032 906	CB360 1C	Zanussi

PNC	TYPE	BRAND
925 031 824	CB340 1C	Rosenlew
925 031 825	CB340 1C	Elektro Helios
925 031 826	CB340 1C	Elektro Helios
925 031 827	CB340 1C	Elektro Helios
925 031 828	CB340 1C	Electrolux
925 031 830	CB340 1C	Electrolux
925 031 831	CB340 1C	Zanussi
925 031 832	CB340 1C	Novamatic
925 031 833	CB340 1C	Electrolux
925 031 834	CB340 1C	Electrolux
925 031 835	CB340 1C	Electrolux
925 031 836	CB340 1C	Electrolux
925 031 837	CB340 1C	Electrolux
925 031 838	CB340 1C	Electrolux
925 031 839	CB340 1C	IKEA
925 031 840	CB340 1C	Electrolux
925 031 841	CB340 1C	Electrolux
925 031 842	CB340 1C	Electrolux
925 031 843	CB340 1C	Electrolux
925 031 844	CB340 1C	Electrolux
925 032 079	CB360 1C	Electrolux
925 032 092	CB360 1C	Faure
925 032 093	CB360 1C	Zanussi
925 032 116	CB360 1C	Elektro Helios
925 032 117	CB360 1C	Rosenlew
925 032 118	CB360 1C	Rosenlew
925 032 119	CB360 1C	Zoppas
925 032 121	CB360 1C	Zanussi
925 032 123	CB360 1C	Zanussi
925 032 144	CB360 1C	Faure
925 032 146	CB360 1C	Faure
925 032 156	CB360 1C	Rex-Electrolux
925 032 157	CB360 1C	Zanussi
925 032 158	CB360 1C	Zanussi
925 032 162	CB360 1C	AEG
925 032 165	CB360 1C	Husqvarna-Electrolux
925 032 166	CB360 1C	Electrolux
925 032 167	CB360 1C	Electrolux
925 032 170	CB360 1C	Electrolux
925 032 171	CB360 1C	Electrolux
925 032 182	CB360 1C	Electrolux
925 032 192	CB360 1C	AEG
925 032 193	CB360 1C	AEG
925 032 425	CB400 1C	Electrolux
925 032 451	CB400 1C	Zanussi
925 032 455	CB400 1C	Zanussi
925 032 465	CB400 1C	Zoppas
925 032 467	CB400 1C	Zanussi

PNC	TYPE	BRAND
925 032 907	CB360 1C	Faure
925 032 908	CB360 1C	Zanussi
925 032 909	CB360 1C	Zanussi
925 032 910	CB360 1C	Zanussi
925 032 911	CB360 1C	Faure
925 032 912	CB360 1C	Zanussi
925 032 913	CB360 1C	Zanussi
925 032 914	CB360 1C	Zanussi
925 032 915	CB360 1C	Zanussi
925 032 918	CB360 1C	Zanussi
925 032 919	CB360 1C	Rosenlew
925 032 920	CB360 1C	Rosenlew
925 032 921	CB360 1C	Electrolux-Rex
925 032 922	CB360 1C	Electrolux-Rex
925 032 927	CB360 1C	Zoppas
925 032 929	CB360 1C	Zoppas
925 032 933	CB360 1C	Electrolux
925 032 934	CB360 1C	Electrolux
925 032 936	CB360 1C	Electrolux
925 032 937	CB360 1C	Electrolux
925 032 938	CB360 1C	Electrolux-Rex
925 032 939	CB360 1C	Electrolux-Rex
925 032 940	CB360 1C	Electrolux-Rex
925 032 941	CB360 1C	Electrolux-Rex
925 032 942	CB360 1C	Zanussi
925 032 943	CB360 1C	Zanussi
925 032 944	CB360 1C	Zanussi
925 032 945	CB360 1C	Zanussi
925 032 946	CB360 1C	Novamatic
925 032 947	CB360 1C	Electrolux
925 032 948	CB360 1C	Electrolux
925 032 949	CB360 1C	Electrolux
925 032 950	CB360 1C	Electrolux
925 032 951	CB360 1C	Electrolux
925 032 952	CB360 1C	Faure
925 032 955	CB360 1C	Electrolux
925 032 956	CB360 1C	Electrolux
925 032 957	CB360 1C	Electrolux
925 032 958	CB360 1C	Electrolux
925 032 959	CB360 1C	Electrolux
925 032 960	CB360 1C	Electrolux
925 032 964	CB360 1C	AEG
925 032 966	CB360 1C	Electrolux
925 032 967	CB360 1C	Electrolux
925 032 968	CB360 1C	Electrolux-Rex
925 032 969	CB360 1C	Electrolux-Rex
925 032 974	CB360 1C	Electrolux

REVISION:

Revision	Date	Description	Author	Approved by - on
00	04/2013	Document Creation	Krzysztof Łazowski	Sándor Kórik – 26.04.2013