


DRAIN TUBES BLOCKED WITH ICE IN FRIDGE SECTION

DESCRIPTION:


Condensed water is not draining or is spilling over defrost channel. It is caused by ice formed in drain hose.

SOLUTION:

To solve the problem follow below instructions.

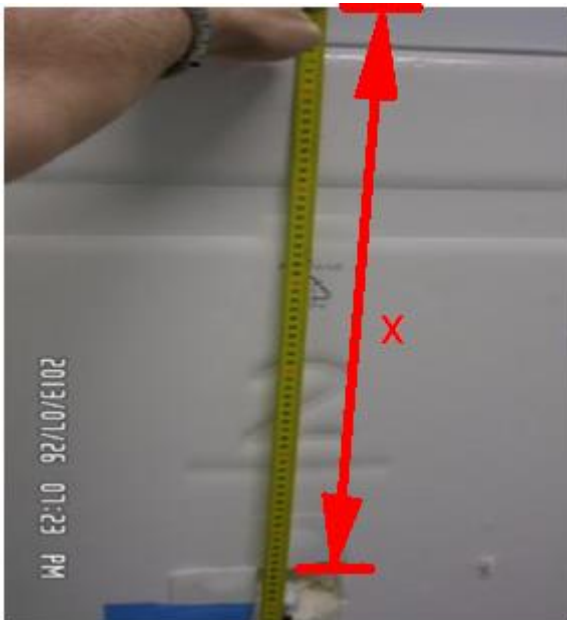


1. Mark corrugated material in the back of appliance on indicated height.

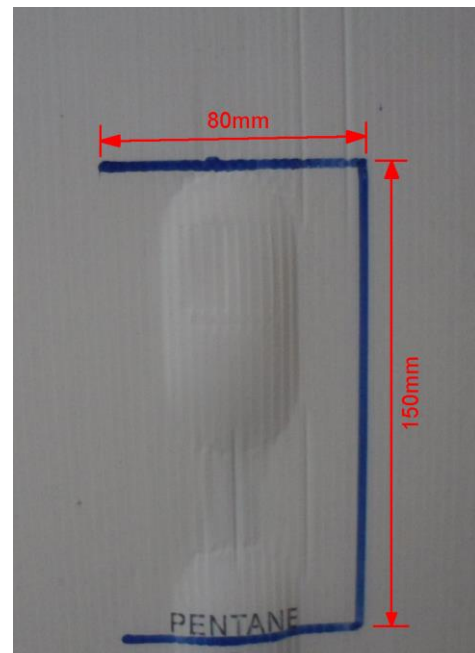

2. Draw cutting lines below marked height.

Appliance type	Distance from top of appliance
CBZ/CBZF 310	650mm
CBZ/CBZF 340	700mm
CBZ/CBZF 380	800mm

Note: Appliance type can be found on product plate:

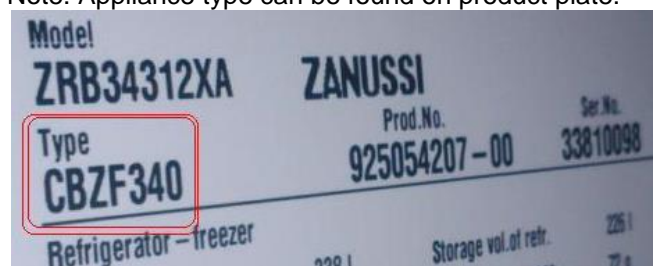



3. Cut corrugated material following markings and bend out to the uncut side.



4. Remove foam from around the drain hose.
Note: Be careful not to damage inner liner.



5. Remove tape securing drain hose and cut the end of hose as indicated in picture.



6. Remove the hose from spigot.



7. Attach new hose to drain channel spigot.




8. Fasten drain hose with adhesive tape (~10cm strip).



9. Attach drain tube to corrugated material using nail clips.



10. Correct hose positioning.

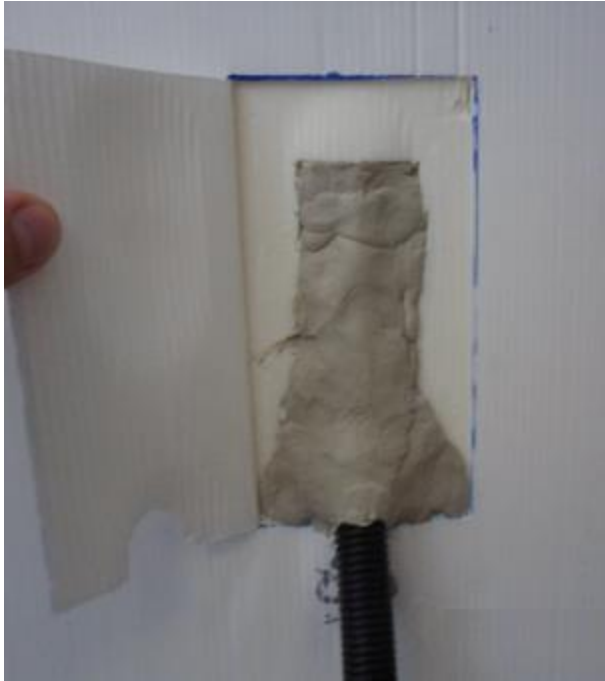

11. Seal affected area with rubber putty.



12. Bend back corrugated material and secure it with adhesive tape.



13. Cut hose to required length and insert the end into evaporation tray.
Note: Make sure it stays in tray and tray is secured on the compressor.

Appliance type	Approximate hose length
CBZ 310	810mm
CBZ 340	910mm
CBZF 310	810mm
CBZF 340	900mm
CBZF 345	925mm
CBZF 380	900mm

The new drain hose should now be securely fixed on the back of appliance and corrugated material fixed and sealed neatly with adhesive tape. Good adhesion is important not only to be aesthetically pleasing but also to prevent moisture from dampening the panel.

SPARE PART NUMBER:

Spare part code	Description	Quantity
4055059028	White, adhesive tape	1
2230266013	Plastic nail clip	2
8961482463	Putty, 100g	1
2230428423	Drain hose, 1350mm	1

MODELS INVOLVED:

PNC	Brand	Base model	Energy class	PNC	Brand	Base model	Energy class
925053250	Zanussi	CBZ310	A+	925053275	AEG	CBZ310	A+
925053251	Zanussi	CBZ310	A++	925053276	AEG	CBZ310	A++
925053252	Electrolux	CBZ310	A+	925053277	Electrolux	CBZ310	A+
925053253	Zanussi	CBZ310	A+	925053278	Electrolux	CBZ310	A+
925053254	Zanussi	CBZ310	A+	925053279	Electrolux	CBZ310	A++
925053255	Zanussi	CBZ310	A++	925053280	Electrolux	CBZ310	A++
925053256	Zanussi	CBZ310	A++	925053281	Electrolux	CBZ310	A++
925053257	Elektro Helios	CBZ310	A+	925053282	Electrolux	CBZ310	A++
925053258	Elektro Helios	CBZ310	A+	925053283	Electrolux	CBZ310	A+
925053259	Elektro Helios	CBZ310	A+	925053284	Electrolux	CBZ310	A+
925053260	Zanussi	CBZ310	A+	925053285	Electrolux	CBZ310	A+
925053261	Zanussi	CBZ310	A+	925053286	Electrolux	CBZ310	A+
925053262	Zanussi	CBZ310	A++	925053287	Electrolux	CBZ310	A+
925053263	Zanussi	CBZ310	A++	925053288	Electrolux	CBZ310	A+
925053264	Elektro Helios	CBZ310	A++	925053289	Faure	CBZ310	A++
925053265	Elektro Helios	CBZ310	A++	925053290	Electrolux	CBZ310	A++
925053266	Zanussi	CBZ310	A++	925053291	Electrolux	CBZ310	A++
925053267	Zanussi	CBZ310	A++	925053292	Electrolux	CBZ310	A++
925053268	Rosenlew	CBZ310	A+	925053293	Electrolux	CBZ310	A++
925053269	Faure	CBZ310	A+	925053294	Electrolux	CBZ310	A++
925053270	Electrolux	CBZ310	A+	925053295	Electrolux	CBZ310	A+
925053271	Zanussi	CBZ310	A++	925053296	Electrolux	CBZ310	A+
925053272	Zanussi	CBZ310	A++	925053297	IKEA	CBZ310	A+
925053273	Zanker	CBZ310	A++	925053298	IKEA	CBZ310	A+
925053274	Zanker	CBZ310	A++	925053299	IKEA	CBZ310	A++

PNC	Brand	Base model	Energy class	PNC	Brand	Base model	Energy class
925053300	AEG	CBZ310	A++	925053539	Electrolux	CBZ340	A+
925053301	Electrolux	CBZ310	A+	925053540	Electrolux	CBZ340	A+
925053302	Electrolux	CBZ310	A+	925053541	Electrolux	CBZ340	A++
925053500	Zanussi	CBZ340	A+	925053542	Electrolux	CBZ340	A++
925053501	Zanussi	CBZ340	A++	925053543	Electrolux	CBZ340	A+
925053502	Electrolux	CBZ340	A+	925053544	Electrolux	CBZ340	A+
925053503	Zanussi	CBZ340	A+	925053545	Electrolux	CBZ340	A++
925053504	Zanussi	CBZ340	A++	925053546	Electrolux	CBZ340	A++
925053505	Zanussi	CBZ340	A++	925053552	AEG	CBZ340	A++
925053506	Zanussi	CBZ340	A+	925053553	AEG	CBZ340	A++
925053507	Zanussi	CBZ340	A+	925053556	Electrolux-Rex	CBZ340	A++
925053508	Zanussi	CBZ340	A++	925053557	Electrolux-Rex	CBZ340	A++
925053509	Zanussi	CBZ340	A++	925053559	Electrolux-Rex	CBZ340	A++
925053510	Zanussi	CBZ340	A++	925053560	Electrolux-Rex	CBZ340	A++
925053511	Zanussi	CBZ340	A++	925053561	Electrolux	CBZ340	A+
925053512	Zanussi	CBZ340	A+	925053562	Electrolux	CBZ340	A++
925053513	Zanussi	CBZ340	A++	925053563	Electrolux	CBZ340	A+
925053514	Zanussi	CBZ340	A++	925053564	Electrolux	CBZ340	A++
925053515	Zanussi	CBZ340	A++	925053565	Electrolux	CBZ340	A+
925053516	Zanussi	CBZ340	A++	925053566	Electrolux	CBZ340	A+
925053517	Zanussi	CBZ340	A++	925053567	Electrolux	CBZ340	A+
925053518	Zanussi	CBZ340	A++	925053568	Electrolux	CBZ340	A+
925053519	Rosenlew	CBZ340	A++	925053569	Electrolux	CBZ340	A++
925053520	Rosenlew	CBZ340	A++	925053571	Electrolux	CBZ340	A++
925053521	Rosenlew	CBZ340	A+	925053572	Electrolux	CBZ340	A+
925053522	Faure	CBZ340	A++	925053573	Electrolux	CBZ340	A+
925053523	Faure	CBZ340	A+	925053579	AEG	CBZ340	A++
925053524	Rosenlew	CBZ340	A+	925053580	Electrolux	CBZ340	A+
925053525	Rosenlew	CBZ340	A+	925053581	Electrolux	CBZ340	A+
925053526	Electrolux	CBZ340	A+	925053582	Electrolux	CBZ340	A+
925053527	Zanussi	CBZ340	A++	925053583	Electrolux	CBZ340	A+
925053528	Zanussi	CBZ340	A++	925053584	Zanussi	CBZ340	A+
925053529	Zoppas	CBZ340	A++	925053585	Zanussi	CBZ340	A+
925053530	Zoppas	CBZ340	A++	925053586	Husqvarna-Electrolux	CBZ340	A+
925053531	Faure	CBZ340	A++	925053587	Zanussi	CBZ340	A+
925053532	Faure	CBZ340	A+	925054000	Zanussi	CBZF310	A+
925053533	Zanussi	CBZ340	A+	925054001	Zanussi	CBZF310	A+
925053534	Zanussi	CBZ340	A+	925054002	Faure	CBZF310	A+
925053535	Zanussi	CBZ340	A++	925054003	Zanussi	CBZF310	A+
925053536	Zanussi	CBZ340	A++	925054004	Zanussi	CBZF310	A+
925053537	AEG	CBZ340	A+	925054005	Zanussi	CBZF310	A+
925053538	AEG	CBZ340	A++	925054006	Zanussi	CBZF310	A+

PNC	Brand	Base model	Energy class	PNC	Brand	Base model	Energy class
925054007	Zanussi	CBZF310	A+	925054219	Rosenlew	CBZF340	A+
925054008	Zanussi	CBZF310	A+	925054220	Elektro Helios	CBZF340	A++
925054009	Elektro Helios	CBZF310	A+	925054221	Elektro Helios	CBZF340	A++
925054010	Faure	CBZF310	A+	925054222	Rosenlew	CBZF340	A++
925054011	Zanussi	CBZF310	A+	925054223	Zanussi	CBZF340	A++
925054012	Zanussi	CBZF310	A+	925054224	Zanussi	CBZF340	A++
925054013	Zanker	CBZF310	A+	925054225	Zanussi	CBZF340	A+
925054014	Zanker	CBZF310	A+	925054226	Faure	CBZF340	A+
925054015	AEG	CBZF310	A+	925054227	Zanussi	CBZF340	A++
925054016	AEG	CBZF310	A++	925054228	Zanussi	CBZF340	A++
925054017	Electrolux	CBZF310	A+	925054229	Zanussi	CBZF340	A+
925054018	Electrolux	CBZF310	A+	925054230	Zanussi	CBZF340	A+
925054019	John Lewis	CBZF310	A++	925054231	Zanussi	CBZF340	A+
925054020	AEG	CBZF310	A++	925054232	Zanussi	CBZF340	A+
925054021	Faure	CBZF310	A+	925054233	Zoppas	CBZF340	A+
925054022	Faure	CBZF310	A+	925054234	Zoppas	CBZF340	A+
925054023	Electrolux	CBZF310	A+	925054235	Zoppas	CBZF340	A++
925054024	AEG	CBZF310	A++	925054236	Zoppas	CBZF340	A++
925054025	John Lewis	CBZF310	A+	925054237	Faure	CBZF340	A+
925054026	John Lewis	CBZF310	A+	925054238	Zanussi	CBZF340	A+
925054027	Electrolux	CBZF310	A+	925054239	Zanussi	CBZF340	A+
925054028	Electrolux	CBZF310	A+	925054240	Zanussi	CBZF340	A+
925054029	Electrolux	CBZF310	A+	925054241	Zanussi	CBZF340	A+
925054200	Zanussi	CBZF340	A+	925054242	Zanussi	CBZF340	A++
925054201	Zanussi	CBZF340	A+	925054243	Zanussi	CBZF340	A++
925054202	Zanussi	CBZF340	A+	925054244	Zanussi	CBZF340	A++
925054203	Zanussi	CBZF340	A++	925054245	AEG	CBZF340	A+
925054204	Zanussi	CBZF340	A++	925054246	AEG	CBZF340	A++
925054205	Zanussi	CBZF340	A+	925054247	Electrolux	CBZF340	A+
925054206	Zanussi	CBZF340	A+	925054248	Electrolux	CBZF340	A+
925054207	Zanussi	CBZF340	A+	925054249	Electrolux	CBZF340	A++
925054208	Zanussi	CBZF340	A+	925054250	Electrolux	CBZF340	A+
925054209	Zanussi	CBZF340	A++	925054251	Electrolux	CBZF340	A+
925054210	Zanussi	CBZF340	A+	925054252	Electrolux	CBZF340	A++
925054211	Zanussi	CBZF340	A+	925054253	Electrolux	CBZF340	A++
925054212	Zanussi	CBZF340	A++	925054260	Zanussi	CBZF340	A+
925054213	Zanussi	CBZF340	A++	925054261	Zanussi	CBZF340	A++
925054214	Zanussi	CBZF340	A+	925054262	Zanussi	CBZF340	A+
925054215	Zanussi	CBZF340	A+	925054264	AEG	CBZF340	A++
925054216	Zanussi	CBZF340	A++	925054265	AEG	CBZF340	A++
925054217	Zanussi	CBZF340	A+	925054266	Electrolux	CBZF340	A++
925054218	Zanussi	CBZF340	A+	925054267	Electrolux	CBZF340	A++

PNC	Brand	Base model	Energy class	PNC	Brand	Base model	Energy class
925054268	AEG	CBZF340	A++	925054318	Electrolux	CBZF340	A+
925054269	AEG	CBZF340	A++	925054319	Electrolux	CBZF340	A+
925054270	Electrolux	CBZF340	A+	925054321	AEG	CBZF340	A++
925054271	Electrolux	CBZF340	A+	925054323	AEG	CBZF340	A++
925054272	Electrolux	CBZF340	A++	925054325	Electrolux	CBZF340	A++
925054273	Electrolux	CBZF340	A++	925054326	Electrolux	CBZF340	A+
925054276	Electrolux-Rex	CBZF340	A++	925054327	Electrolux	CBZF340	A+
925054277	Electrolux-Rex	CBZF340	A++	925054328	Husqvarna-Electrolux	CBZF340	A++
925054278	Electrolux-Rex	CBZF340	A++	925054400	Zanussi	CBZF345	A+
925054279	Electrolux-Rex	CBZF340	A++	925054401	Zanussi	CBZF345	A+
925054281	Electrolux	CBZF340	A+	925054402	Zanussi	CBZF345	A+
925054282	Electrolux	CBZF340	A+	925054403	Zanussi	CBZF345	A+
925054283	Zoppas	CBZF340	A+	925054404	Zanussi	CBZF345	A+
925054284	Zoppas	CBZF340	A+	925054405	Zanussi	CBZF345	A++
925054285	AEG	CBZF340	A+	925054406	Zanussi	CBZF345	A+
925054286	AEG	CBZF340	A+	925054407	Zanussi	CBZF345	A+
925054287	Electrolux	CBZF340	A+	925054408	Zanussi	CBZF345	A+
925054288	Electrolux	CBZF340	A+	925054409	Zanussi	CBZF345	A++
925054289	Electrolux	CBZF340	A+	925054410	Zanussi	CBZF345	A+
925054290	Electrolux	CBZF340	A+	925054411	Zanussi	CBZF345	A+
925054291	Electrolux	CBZF340	A+	925054412	Zanussi	CBZF345	A++
925054292	Electrolux	CBZF340	A++	925054413	Zanussi	CBZF345	A+
925054293	Electrolux	CBZF340	A+	925054415	Zanussi	CBZF345	A++
925054294	Electrolux	CBZF340	A+	925054416	Zanussi	CBZF345	A+
925054295	Electrolux	CBZF340	A+	925054417	Zanussi	CBZF345	A+
925054296	Electrolux	CBZF340	A+	925054418	Zanussi	CBZF345	A+
925054297	Electrolux	CBZF340	A+	925054419	Zanussi	CBZF345	A++
925054298	Electrolux	CBZF340	A+	925054420	Zanussi	CBZF345	A+
925054299	Electrolux	CBZF340	A+	925054421	Zanussi	CBZF345	A+
925054300	AEG	CBZF340	A++	925054422	Zanussi	CBZF345	A+
925054301	AEG	CBZF340	A++	925054423	Zanussi	CBZF345	A++
925054302	Electrolux	CBZF340	A+	925054424	AEG	CBZF345	A++
925054303	Electrolux	CBZF340	A+	925054425	AEG	CBZF345	A++
925054304	Husqvarna-Electrolux	CBZF340	A++	925054426	John Lewis	CBZF345	A++
925054305	Zanussi	CBZF340	A+	925054427	John Lewis	CBZF345	A++
925054306	IKEA	CBZF340	A++	925054428	AEG	CBZF345	A++
925054307	IKEA	CBZF340	A++	925054429	AEG	CBZF345	A++
925054308	IKEA	CBZF340	A++	925054430	AEG	CBZF345	A++
925054309	IKEA	CBZF340	A++	925054431	AEG	CBZF345	A++
925054315	AEG	CBZF340	A++	925054432	John Lewis	CBZF345	A+
925054316	Electrolux	CBZF340	A++	925054433	John Lewis	CBZF345	A+
925054317	Electrolux	CBZF340	A++	925054600	Zanussi	CBZF380	A+

PNC	Brand	Base model	Energy class	PNC	Brand	Base model	Energy class
925054601	Zanussi	CBZF380	A+	925054635	Electrolux	CBZF380	A+
925054602	Zanussi	CBZF380	A+	925054636	Electrolux	CBZF380	A+
925054603	Zanussi	CBZF380	A+	925054637	Electrolux	CBZF380	A++
925054604	Zanussi	CBZF380	A+	925054640	Electrolux	CBZF380	A++
925054605	Zanussi	CBZF380	A++	925054643	Zanussi	CBZF380	A++
925054606	Zanussi	CBZF380	A++	925054644	Zanussi	CBZF380	A++
925054607	Zanussi	CBZF380	A+	925054645	John Lewis	CBZF380	A++
925054608	Zanussi	CBZF380	A+	925054646	John Lewis	CBZF380	A++
925054609	Zanussi	CBZF380	A++	925054647	Electrolux	CBZF380	A++
925054610	Zanussi	CBZF380	A+	925054648	Electrolux	CBZF380	A++
925054611	Zanussi	CBZF380	A+	925054649	Electrolux-Rex	CBZF380	A++
925054612	Zanussi	CBZF380	A++	925054650	Electrolux-Rex	CBZF380	A++
925054613	Zanussi	CBZF380	A++	925054652	Electrolux-Rex	CBZF380	A++
925054614	Zanussi	CBZF380	A+	925054653	Zoppas	CBZF380	A+
925054615	Zanussi	CBZF380	A+	925054654	Zanussi	CBZF380	A+
925054616	Zanussi	CBZF380	A++	925054655	Electrolux-Rex	CBZF380	A++
925054617	Zanussi	CBZF380	A++	925054656	Electrolux-Rex	CBZF380	A++
925054618	Zanussi	CBZF380	A++	925054657	Electrolux-Rex	CBZF380	A++
925054619	Zanussi	CBZF380	A+	925054658	Electrolux-Rex	CBZF380	A++
925054620	Zanussi	CBZF380	A++	925054659	Elektro Helios	CBZF380	A+
925054621	Zanussi	CBZF380	A+	925054660	John Lewis	CBZF380	A++
925054622	Zanussi	CBZF380	A+	925054661	John Lewis	CBZF380	A++
925054623	Zanussi	CBZF380	A+	925054662	AEG	CBZF380	A++
925054624	Zanussi	CBZF380	A++	925054664	Electrolux	CBZF380	A++
925054625	Zanussi	CBZF380	A+	925054665	Electrolux	CBZF380	A++
925054626	Zanussi	CBZF380	A+	925054667	AEG	CBZF380	A++
925054627	Zanussi	CBZF380	A+	925054669	Electrolux	CBZF380	A++
925054628	Zanussi	CBZF380	A+	925054670	Electrolux	CBZF380	A+
925054629	Zanussi	CBZF380	A++	925054671	Electrolux	CBZF380	A+
925054630	Zanussi	CBZF380	A+	925054800	AEG	CBZF340	A+
925054631	Zoppas	CBZF380	A+	925054801	AEG	CBZF340	A++
925054632	Zoppas	CBZF380	A+	925054900	AEG	CBZF380	A++
925054633	Zoppas	CBZF380	A++				
925054634	Zoppas	CBZF380	A++				

REVISION:

Revision	Date	Description	Author	Approved by - on
00	08/2013	Document Creation	Krzysztof Łazowski	Edit Kántor – 23.08.2013
01	10/2014	PNCs Update	Marzena Kosecka	Sándor Kórik – 15.10.2014