

FRIDGE DOOR BLOCKED AFTER DOOR REVERSING; DOOR SHELF BROKEN.**DESCRIPTION:**

In some models due incompatible light switch shape fridge door might collide with butter shelf. Problem occurs after door reversing procedure.

This might lead to complete blockage of fridge door and shelf being damaged.



Problem can occur in all appliances with serial number from 3375xxxx up to 338xxxxx.

SOLUTION:

To solve this problem it is necessary to exchange the light switch.




Switch shape that can cause problems.



Shape of switch that will not cause problems.

To change the switch follow below instructions:

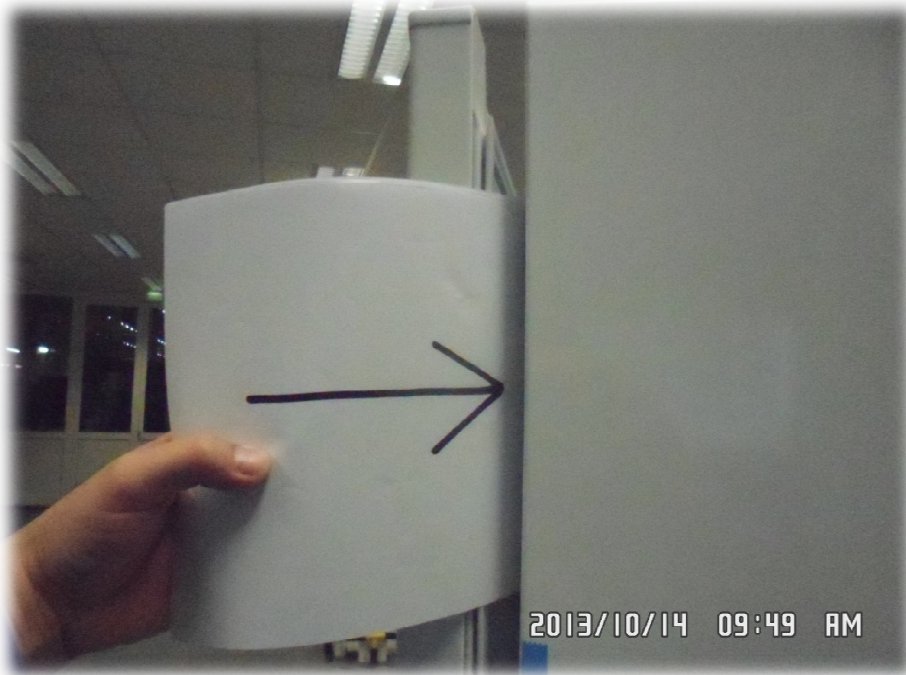

1. If it is not possible to open door because of door shelf catching on light switch, get about 5pcs of paper and push them between shelf and switch. This way door can be opened without any damage to shelf.



2. Insert flat screwdriver or other similat tool under bottom part of switch.



3. Gently lever bottom part of switch from cabinet.




4. Lever the upper part of switch.



5. Take out the switch from the cabinet.



6. Replace the switch with new one.

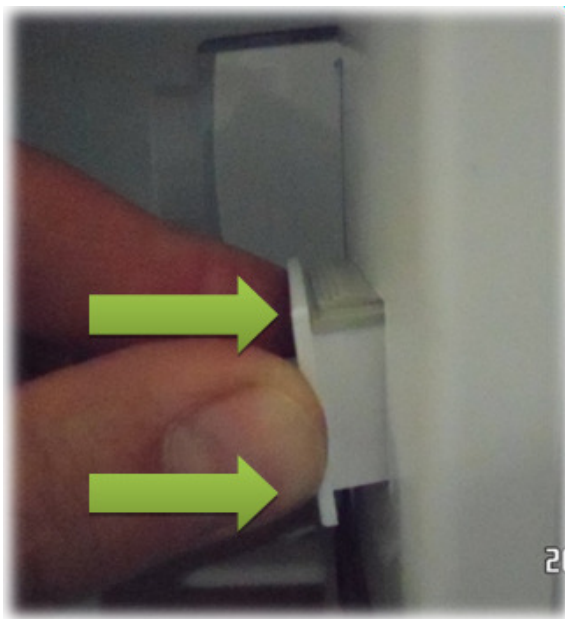

7. Insert new switch into hole in cabinet.

SPARE PART NUMBER:

| New spare part code | Description |
|---------------------|---------------|
| 2263121069 | Switch, light |

MODELS INVOLVED:

| PNC | MODEL | BRAND |
|-------------|------------|----------------|
| 92505325300 | ZRB33100WA | Zanussi |
| 92505325400 | ZRB33100XA | Zanussi |
| 92505325500 | ZRB33104WA | Zanussi |
| 92505325600 | ZRB33104XA | Zanussi |
| 92505325601 | ZRB33104XA | Zanussi |
| 92505325700 | KF34211 | Elektro Helios |

| PNC | MODEL | BRAND |
|-------------|------------|---------|
| 92505401300 | KRB32210XA | Zanker |
| 92505401400 | KRB32210WA | Zanker |
| 92505420300 | ZRB34214WA | Zanussi |
| 92505420400 | ZRB34214XA | Zanussi |
| 92505420600 | ZRB34312WA | Zanussi |
| 92505420700 | ZRB34312XA | Zanussi |

| PNC | MODEL | BRAND |
|-------------|------------|----------------|
| 92505325800 | KF34211 | Elektro Helios |
| 92505325900 | KF34211X | Elektro Helios |
| 92505326000 | ZRB33100WA | Zanussi |
| 92505326100 | ZRB33100XA | Zanussi |
| 92505326200 | ZRB33104WA | Zanussi |
| 92505326300 | ZRB33104XA | Zanussi |
| 92505326400 | KF34300 | Elektro Helios |
| 92505326500 | KF34300X | Elektro Helios |
| 92505326600 | ZRB33103WA | Zanussi |
| 92505326700 | ZRB33103XA | Zanussi |
| 92505326800 | RJP4302 | Rosenlew |
| 92505327300 | KRB33104XA | Zanker |
| 92505327301 | KRB33104XA | Zanker |
| 92505327400 | KRB33104WA | Zanker |
| 92505350300 | ZRB36101WA | Zanussi |
| 92505350400 | ZRB36104WA | Zanussi |
| 92505350401 | ZRB36104WA | Zanussi |
| 92505350500 | ZRB36104XA | Zanussi |
| 92505350501 | ZRB36104XA | Zanussi |
| 92505351200 | ZRB36101XA | Zanussi |
| 92505351300 | ZRB36404WA | Zanussi |
| 92505351400 | ZRB36404XA | Zanussi |
| 92505351500 | ZRB36104WA | Zanussi |
| 92505351600 | ZRB36104XA | Zanussi |
| 92505351700 | ZRB34103WA | Zanussi |
| 92505351800 | ZRB34103XA | Zanussi |
| 92505351900 | RJP4533 | Rosenlew |
| 92505352200 | FRB36404WA | Faure |
| 92505352300 | FRB36101WA | Faure |
| 92505352400 | RJP4532 | Rosenlew |
| 92505352500 | RJP4532X | Rosenlew |
| 92505352900 | PRB36404WA | Zoppas |
| 92505353000 | PRB36404XA | Zoppas |
| 92505353100 | FRB36104WA | Faure |
| 92505353200 | FRB36102WA | Faure |
| 92505400301 | ZRB32210WA | Zanussi |
| 92505400400 | ZRB32210XA | Zanussi |
| 92505400500 | ZRB32212WA | Zanussi |
| 92505400600 | ZRB32212XA | Zanussi |
| 92505400700 | ZRB32213WA | Zanussi |
| 92505400800 | ZRB32313WA | Zanussi |
| 92505400900 | KF32501 | Elektro Helios |

| PNC | MODEL | BRAND |
|-------------|------------|----------------|
| 92505420900 | ZRB34315WA | Zanussi |
| 92505421400 | ZRB34210WA | Zanussi |
| 92505421500 | ZRB34210XA | Zanussi |
| 92505421600 | ZRB34315XA | Zanussi |
| 92505421601 | ZRB34315XA | Zanussi |
| 92505421900 | RJP4632 | Rosenlew |
| 92505422300 | ZRB34213WA | Zanussi |
| 92505422500 | ZRB34314XA | Elektro Helios |
| 92505422600 | FRB34312XA | Faure |
| 92505422800 | ZRB34315WA | Zanussi |
| 92505423200 | ZRB34211WA | Zanussi |
| 92505423500 | PRB34315WA | Zoppas |
| 92505423600 | PRB34315XA | Zoppas |
| 92505423700 | FRB34312WA | Faure |
| 92505424000 | ZRB34211XA | Zanussi |
| 92505424200 | ZRB34315XA | Zanussi |
| 92505424300 | ZRB34214XA | Zanussi |
| 92505426000 | ZRB34310WS | Zanussi |
| 92505440300 | ZRB35210WA | Zanussi |
| 92505440400 | ZRB35210XA | Zanussi |
| 92505440500 | ZRB35214WA | Zanussi |
| 92505441000 | ZRB35212WA | Zanussi |
| 92505441100 | ZRB35213WA | Zanussi |
| 92505441200 | ZRB35315WA | Zanussi |
| 92505441300 | ZRB35212XA | Zanussi |
| 92505441500 | ZRB35214WA | Zanussi |
| 92505441600 | ZRB35312WA | Zanussi |
| 92505441900 | ZRB35315XA | Zanussi |
| 92505460300 | ZRB38212WA | Zanussi |
| 92505460301 | ZRB38212WA | Zanussi |
| 92505460500 | ZRB38214WA | Zanussi |
| 92505460900 | ZRB38315WA | Zanussi |
| 92505461400 | ZRB38213WA | Zanussi |
| 92505461600 | ZRB38315XA | Zanussi |
| 92505461900 | ZRB38313XA | Zanussi |
| 92505462200 | ZRB38212WA | Zanussi |
| 92505462300 | ZRB38212XA | Zanussi |
| 92505462400 | ZRB38315WA | Zanussi |
| 92505462800 | ZRB38313WA | Zanussi |
| 92505462900 | ZRB38315XA | Zanussi |
| 92505463100 | PRB38314WA | Zoppas |
| 92505463200 | PRB38314XA | Zoppas |

REVISION:

| Revision | Date | Description | Author | Approved by - on |
|----------|---------|-------------------|--------------------|---------------------------|
| 00 | 10/2013 | Document Creation | Krzysztof Łazowski | Sándor Kórik – 22.10.2013 |