




Uninterrupted continuous spark plug sound

DESCRIPTION:

In gas hobs equipped with spark generation function, antioverflow gasket may get stuck on the switch button. In the result, continuous repeated spark plug sound can be heard which is caused by antioverflow gasket deformation.

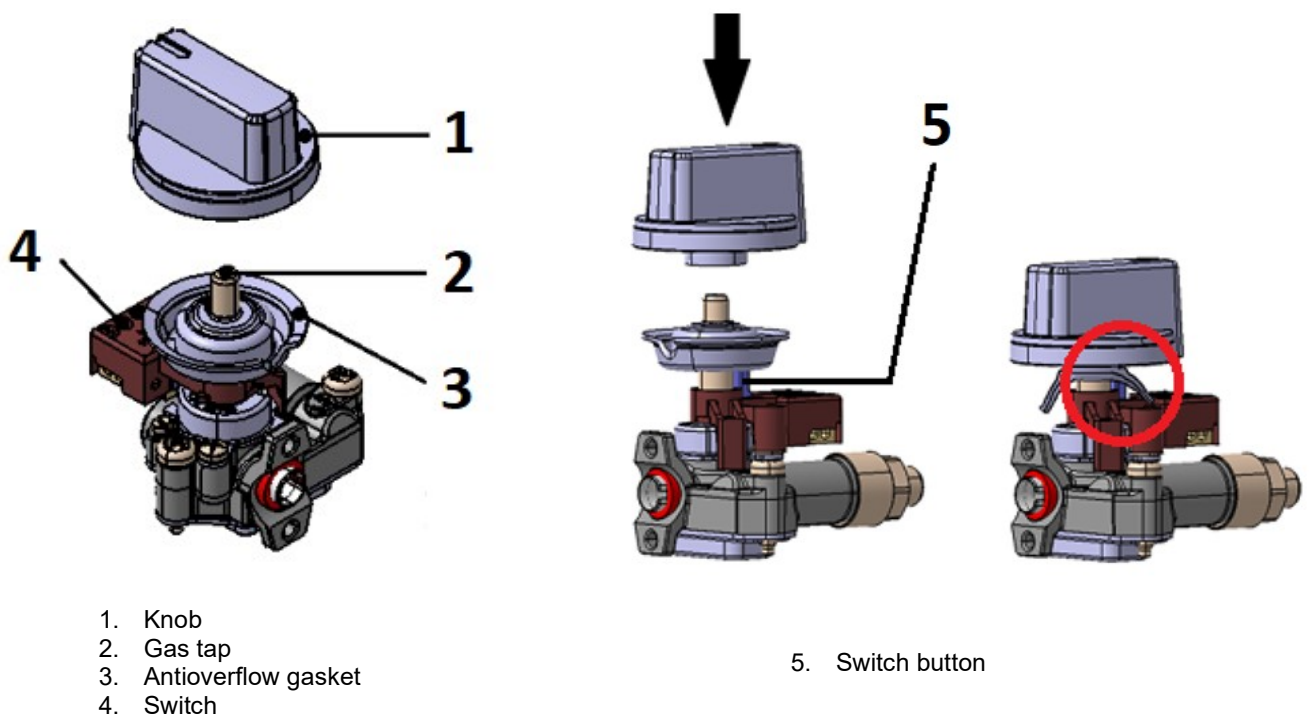


Structure of switch button system

Way of antioverflow gasket deformation


SOLUTION:

In order to avoid situation where antioverflow gasket got stuck on the switch button and has been deformed, it is required to mount additional washer for each knob of the appliance. Quantity of the ordered washers must be compatible with quantity of the knobs in order to maintain aesthetical alignment.


To proper mount washers, follow instruction below.

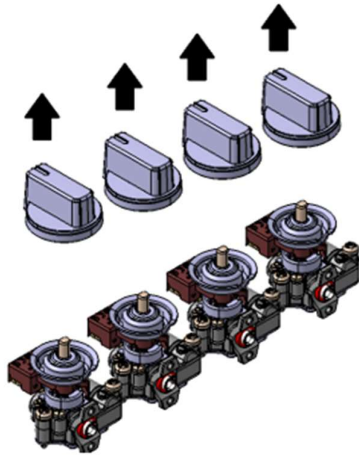


1. Pull out all knobs

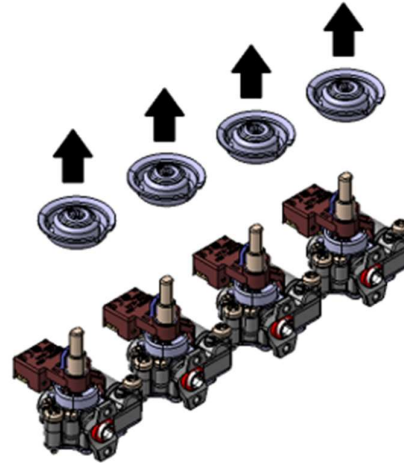


2. Pull out all antioverflow gaskets

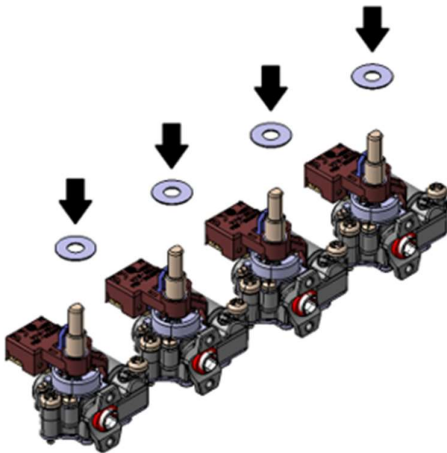


3. Insert washers

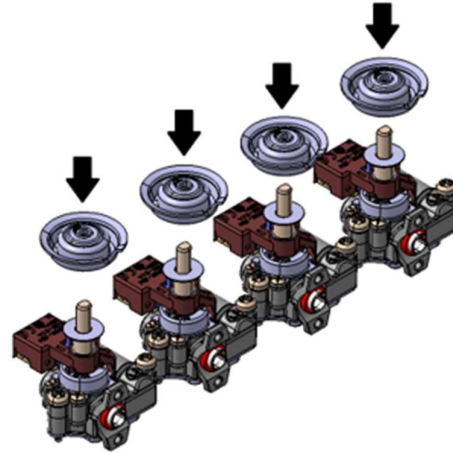

4. Insert antioverflow gaskets

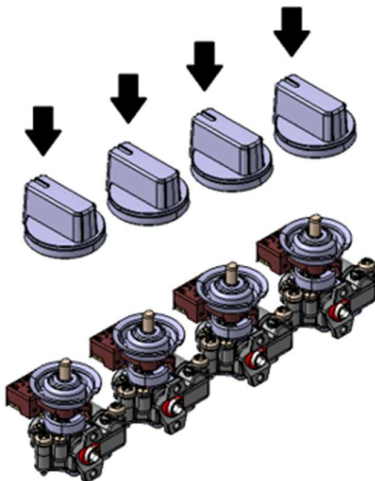

5. Insert knobs

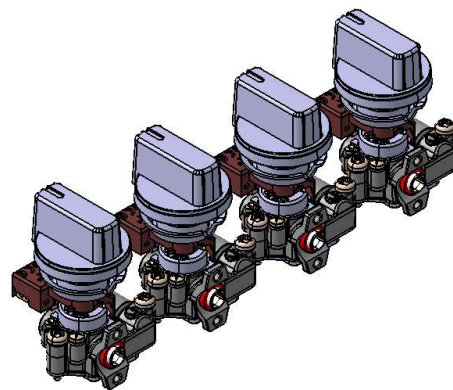

6. Ready

SPARE PART NUMBER:

Washer	Description
140237350016	Single washer – 1 piece

QES CODE:

During the intervention, use work code 11 and the following component and defect codes:

Component	567
Defect	07

MODELS INVOLVED:

The above solution is valid for the following PNCs:

PNC	MODEL	BRAND
949630728	EGH7253SOX	Electrolux
949630762	EGH7459GOX	Electrolux
949630775	PQ750UX	Electrolux
949630785	EGH7353SOX	Electrolux
949630787	EGH7353BOX	Electrolux
949630806	ZGH76534XS	Zanussi
949630807	ZGH76534XS	Zanussi
949630808	ZGH76535XS	Zanussi
949630809	ZGH76535XS	Zanussi
949630810	ZGH76524XS	Zanussi
949630811	ZGH76524XS	Zanussi
949630812	ZGH76524XX	Zanussi
949630813	ZGH76524XS	Zanussi
949630815	ZGH75524XB	Zanussi
949630817	ZGH75524XS	Zanussi
949630821	KGS7524SX	Electrolux
949630822	KGS7534SX	Electrolux
949630823	KGS7536SX	Electrolux
949630824	KGS7536X	Electrolux
949630825	KGS7536X	Electrolux
949630826	GPE373MX	Electrolux
949630828	KGS7564SX	Electrolux
949630829	KGS7566SX	Electrolux
949630830	KGS7566SX	Electrolux
949630831	KGS7566SX	Electrolux
949630835	ZGH76534XS	Zanussi
949630836	HG755550SM	AEG
949630839	HG755551SM	AEG

PNC	MODEL	BRAND
949630841	PP SL STH5F AGS7524S	Arthur Martin
949630842	PP SL STHMC AGS7536X	Arthur Martin
949630845	KGS7536SX	Electrolux
949630848	EGS7534X	Electrolux
949630849	EGS7536X	Electrolux
949630850	KGS7534XX	Electrolux
949630851	KGS7536XX	Electrolux
949630852	FGH75524XA	Faure
949630858	HGB75301UM	AEG
949630859	HGB75301UM	AEG
949630861	HGB75501UM	AEG
949630862	HGB75501UM	AEG
949630864	KGU75361X	Electrolux
949630868	HGB75501UM	AEG
949630874	KGU75361Z	Electrolux
949630878	ZGH75524XS	Zanussi
949630880	ZGH76524XS	Zanussi
949630884	ZGH75524XS	Zanussi
949630892	ZGH76534XS	Zanussi
949630893	ZGNN752X	Zanussi
949630894	ZGNN755X	Zanussi
949630895	HGB75400SM	AEG
949630896	HGB75400SM	AEG
949630898	HGB75520SM	AEG
949630899	HGB75520SM	AEG
949630929	HGB75520SM	AEG

PNC	MODEL	BRAND
949630932	KGS75341X	Electrolux
949630935	KGS7566SX	Electrolux
949630942	EGS7534X	Electrolux
949630943	EGS7536X	Electrolux
949630965	SKÅLANGH7 00523570	IKEA
949630990	HGB75500SM	AEG
949630991	HGB75500SM	AEG
949630992	HGB75400SM	AEG
949630993	HGB75420SM	AEG
949630994	HGB75520SM	AEG
949630995	PP SL STD MC FTG75T2I	Frigidaire
949640207	PQ640X	Electrolux
949640362	EGH6349BOX	Electrolux
949640365	GPE963FX	Electrolux
949640366	EGH6349GOX	Electrolux
949640386	EGH6333BOX	Electrolux
949640388	ZGG65334XA	Zanussi
949640398	HG654550SM	AEG
949640399	HG654350SM	AEG
949640448	EGH6343ROR	Electrolux
949640458	HG654351SM	AEG
949640520	MATMÄSSIGG 50368821	IKEA
949640521	MATMÄSSIGG 30376841	IKEA
949640522	MATMÄSSIGG 00376847	IKEA
949640523	MATMÄSSIGG 70376844	IKEA
949640524	MATMÄSSIGG 10376842	IKEA
949640525	MATMÄSSIGG 80376848	IKEA
949640526	MATMÄSSIGG 60376849	IKEA
949640527	MATMÄSSIGG 40368826	IKEA
949640528	MATMÄSSIGG 70368839	IKEA
949640552	EGH6343RON	Electrolux
949640553	EGH6343ROR	Electrolux
949640565	ZGH62414XS	Zanussi
949640566	ZGH62414XA	Zanussi
949640567	ZGH62414XA	Zanussi
949640568	ZGH62414XA	Zanussi
949640569	ZGH62414XA	Zanussi
949640571	GPZ262HX	Zanussi
949640572	ZGH62414XS	Zanussi

PNC	MODEL	BRAND
949640574	ZGH62414WA	Zanussi
949640575	GPZ262HW	Zanussi
949640576	ZGH62414BA	Zanussi
949640577	ZGH62424XA	Zanussi
949640578	ZGH62424XA	Zanussi
949640579	ZGH62424XA	Zanussi
949640580	FGH62414XA	Faure
949640581	FGH62414BA	Faure
949640582	FGH62414TA	Faure
949640583	FGH62414WA	Faure
949640587	EGS64041X	Electrolux
949640588	KGS6404X	Electrolux
949640589	KGS6404SX	Electrolux
949640590	KGS6404SX	Electrolux
949640591	PXL641V	Electrolux
949640593	PNL641V	Electrolux
949640594	PTL641V	Electrolux
949640595	PBL641V	Electrolux
949640596	KGS6404W	Electrolux
949640598	EGS6414X	Electrolux
949640599	EGS6414T	Electrolux
949640600	EGS6414W	Electrolux
949640604	EGS6414X	Electrolux
949640605	EGS6414W	Electrolux
949640606	EGS6414K	Electrolux
949640607	ZGH66424XS	Zanussi
949640608	ZGH66424XS	Zanussi
949640609	ZGH66425XS	Zanussi
949640610	ZGH66425XS	Zanussi
949640611	ZGH66424XX	Zanussi
949640612	ZGH66424XS	Zanussi
949640613	GPZ363SS	Zanussi
949640615	GPZ363SB	Zanussi
949640616	GPZ363SW	Zanussi
949640617	ZGH66414XS	Zanussi
949640618	GPZ263SS	Zanussi
949640619	GPZ263SB	Zanussi
949640620	GPZ263SW	Zanussi
949640624	ZGH65414XS	Zanussi
949640625	ZGH65414XS	Zanussi
949640628	ZGH65414XS	Zanussi
949640629	GPZ262SS	Zanussi
949640632	ZGH66414CA	Zanussi
949640633	GPZ263SR	Zanussi
949640635	GPZ263SN	Zanussi

PNC	MODEL	BRAND
949640637	KGS6424SX	Electrolux
949640638	KGS6424SX	Electrolux
949640639	EGS6424SX	Electrolux
949640640	KGS6424BX	Electrolux
949640641	CGS6424BX	Electrolux
949640642	KGS6424X	Electrolux
949640643	GPE262MX	Electrolux
949640644	KGS6424X	Electrolux
949640645	KGS6424K	Electrolux
949640646	KGS6424W	Electrolux
949640647	KGS6424W	Electrolux
949640648	KGS6434SX	Electrolux
949640650	KGS6426SX	Electrolux
949640651	EGS6426SX	Electrolux
949640652	GEE263MX	Electrolux
949640653	GPE263MX	Electrolux
949640654	GEE26MB	Electrolux
949640655	GPE263MB	Electrolux
949640656	GPE263MW	Electrolux
949640657	KGS6436SX	Electrolux
949640658	KGS6436SX	Electrolux
949640659	EGS6436SX	Electrolux
949640660	EGS6436SX	Electrolux
949640661	CGS6436BX	Electrolux
949640662	LGS6436SX	Electrolux
949640663	KGS6436BX	Electrolux
949640664	GEE363MX	Electrolux
949640665	KGS6436X	Electrolux
949640666	GPE363MX	Electrolux
949640667	KGS6436X	Electrolux
949640668	GPE363MB	Electrolux
949640669	EGS6436WW	Electrolux
949640670	GPE363MW	Electrolux
949640671	KGS6436RK	Electrolux
949640672	EGS6436RK	Electrolux
949640674	KGS6454SX	Electrolux
949640675	KGS6434XX	Electrolux
949640676	GME263LX	Electrolux
949640677	KGS6456SX	Electrolux
949640678	GME363NX	Electrolux
949640679	KGS6436XX	Electrolux
949640680	GME363NB	Electrolux
949640681	GME363LW	Electrolux
949640684	ZGH65424XS	Zanussi
949640685	ZGH66424XS	Zanussi

PNC	MODEL	BRAND
949640686	AGS6404SX	Arthur Martin
949640687	AGS6404K	Arthur Martin
949640688	AGS6424SX	Arthur Martin
949640689	PP SL SWMC AGS6436XX	Arthur Martin
949640692	KGS6424SX	Electrolux
949640693	KGS6426SX	Electrolux
949640694	KGS6436SX	Electrolux
949640699	KGS6456SX	Electrolux
949640701	EGS6424X	Electrolux
949640702	EGS6434X	Electrolux
949640703	EGS6436X	Electrolux
949640717	ZGH6242XA	Zanussi
949640718	ZGH62412BA	Zanussi
949640719	ZHG62414XA	Zanussi
949640724	KGU64361Z	Electrolux
949640725	HGB64301UM	AEG
949640726	HGB64301UM	AEG
949640727	HGB64301UM	AEG
949640728	HGB64301UM	AEG
949640729	HGB64301UM	AEG
949640730	HGB64301UM	AEG
949640732	KGU64361X	Electrolux
949640747	LAGAN-N 40444156	IKEA
949640748	LAGAN-N 10443993	IKEA
949640749	LAGAN-N 00435446	IKEA
949640750	LAGAN-N 40435449	IKEA
949640752	LAGAN-N 20444162	IKEA
949640753	LAGAN-N 10443993	IKEA
949640770	ZGH62414XS	Zanussi
949640772	KGU64361X	Electrolux
949640773	KGU64361X	Electrolux
949640774	ZHG62414XA	Zanussi
949640778	GRE363MX	Electrolux
949640779	GRE363MB	Electrolux
949640780	GRE363MW	Electrolux
949640781	GRE263MX	Electrolux
949640782	GRE263MB	Electrolux
949640783	GRE263MW	Electrolux
949640784	KGU64361Z	Electrolux
949640788	LAGAN-N 30450119	IKEA
949640794	ZGH65414XS	Zanussi
949640795	ZGH65414XS	Zanussi
949640796	ZGH66424XS	Zanussi
949640797	ZGH66424XS	Zanussi

PNC	MODEL	BRAND
949640800	PP SL SWMC AGS6435X	Arthur Martin
949640802	ZGH66424XS	Zanussi
949640803	EGS6404SX	Electrolux
949640804	ZGH62414XS	Zanussi
949640805	ZGH62414XS	Zanussi
949640812	EGS6424K	Electrolux
949640813	EGS6436K	Electrolux
949640818	KGS6424X	Electrolux
949640820	LAGAN-N 00444281	IKEA
949640821	MATMÄSSIGG 70443202	IKEA
949640822	HGB64301UM	AEG
949640826	ZGH65414XA	Zanussi
949640827	ZGNN640X	Zanussi
949640829	ZGNN640W	Zanussi
949640830	ZGNN642X	Zanussi
949640832	ZGNN645K	Zanussi
949640833	ZGNN645X	Zanussi
949640834	ETG45I	Essentielb
949640835	ZGNX645X	Zanussi
949640837	HGB64200SM	AEG
949640838	HGB64200SM	AEG
949640839	HGB64200SM	AEG
949640840	HGB64400SM	AEG
949640841	HGB64420SM	AEG
949640842	HGB64420SM	AEG
949640843	HGB64420SM	AEG
949640844	HGR6436SM	AEG
949640845	HGB64420SM	AEG
949640846	HGB64420SM	AEG
949640847	HGB64420SM	AEG
949640849	HGB64400SM	AEG
949640850	HGB64420SM	AEG
949640854	FTG64R2IUX	Frigidaire
949640886	KGS64341X	Electrolux

PNC	MODEL	BRAND
949640887	KGS6424W	Electrolux
949640888	KGS6424K	Electrolux
949640889	KGS6404T	Electrolux
949640890	KGS6404W	Electrolux
949640891	KGS6404B	Electrolux
949640912	EGS6424X	Electrolux
949640913	EGS6434X	Electrolux
949640914	EGS6436X	Electrolux
949640927	KGS6436X	Electrolux
949640940	LAGANGH1 80522091	IKEA
949640945	LAGANGH2 50522281	IKEA
949640990	SKÅLANGH4B 60530271	IKEA
949750921	HGB95520SM	AEG
949750922	HGB95520SM	AEG
949750923	KGS9536RS	Electrolux
949750924	KGS9536RN	Electrolux
949750925	KGS9536T	Electrolux
949750926	KGS9536W	Electrolux
949750927	KGS9536SX	Electrolux
949750928	KGS9536X	Electrolux
949750929	GPZ393SX	Electrolux
949750931	ZGH96524XS	Zanussi
949750932	ZGH96524XS	Zanussi
949750940	ZGH96524XS	Zanussi
949750943	HGB95320SM	AEG
949750945	KGS9536X	Electrolux
949750947	AGS9536X	Arthur Martin
949750949	ZGH96524XS	Zanussi
949750950	ZGH96524XS	Zanussi
949750956	ZGNN955X	Zanussi
949750959	FTG90T2IUX	Frigidaire
949750966	HGB95522SM	AEG
949750967	HGB95522SM	AEG
949750968	HGB95522SM	AEG

REVISION:

Revision	Date	Description	Author	Approved by - on
00	03/2022	Document Creation	Przemysław Krzyżak	Ermanno Felice 2022-03-08