

VIBRATION NOISE IN CALGARY FRIDGES (RF330, RF400)**DESCRIPTION:**

Vibration noise from the compressor area and the lower part of the back condenser.

SOLUTION:

To eliminate vibration:

- Fix the supplementary water tray using adhesive tape
- Fit three-way rubber spacers to the middle part of the spiral tube
- Fit a spacer to the vertical tube of the condenser

Fix the supplementary water tray:

1. Pull out the water tray.



2. Remove the screws that fix the supplementary water tray.
3. Lift and push the supplementary tray to access the support plate under the tray.



4. Stick adhesive tape under the supplementary water tray directly on the support plate.




5. Pull the tray back to the original position and push it to the adhesive sponge.
6. Fix the support screws.

Rubber spacers:



1. Fit three-way rubber spacers to the middle part of the spiral tube.

Spacer for condenser tube:

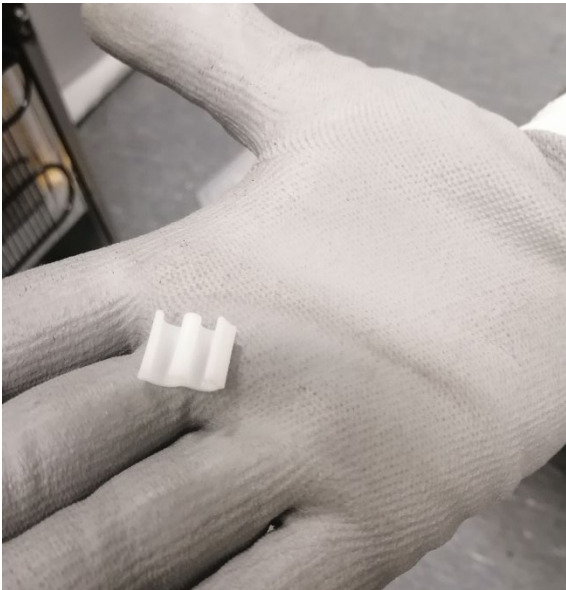

1. Snap the spacer onto the vertical condenser tube at the bottom.

SPARE PART NUMBER:

Spare part number	Description
2240202131	adhesive tape 390X5mm
140036378010	Rubber spacer 3-way
2063198002	Spacer

Use the following QES Codes when reporting the Service Order:

Component	166,306, 333, 334, 335, 336, 337, 338, 342, 343, 344
Defect	09, 88

MODELS INVOLVED:

PNC	Base model	PNC	Base model	PNC	Base model
925052002	RF400	925052114	RF400	925052169	RF400
925052012	RF400	925052116	RF400	925052170	RF400
925052029	RF400	925052117	RF400	925052171	RF400
925052030	RF400	925052118	RF400	925052172	RF400
925052037	RF400	925052120	RF400	925052173	RF400
925052041	RF400	925052121	RF400	925052178	RF400
925052048	RF400	925052122	RF400	925052179	RF400
925052049	RF400	925052123	RF400	925052180	RF400
925052052	RF400	925052124	RF400	925052185	RF400
925052053	RF400	925052125	RF400	925052187	RF400
925052056	RF400	925052129	RF400	925052188	RF400
925052057	RF400	925052130	RF400	925052196	RF400
925052072	RF400	925052131	RF400	925052197	RF400
925052073	RF400	925052134	RF400	925052198	RF400
925052089	RF400	925052150	RF400	925052205	RF400
925052090	RF400	925052153	RF400	925052206	RF400
925052095	RF400	925052154	RF400	925052221	RF400
925052097	RF400	925052155	RF400	925041798	RF330
925052098	RF400	925052156	RF400	925041799	RF330
925052101	RF400	925052160	RF400	925041800	RF330
925052102	RF400	925052164	RF400	925041801	RF330
925052103	RF400	925052165	RF400	925041802	RF330
925052104	RF400	925052166	RF400	925041804	RF330
925052106	RF400	925052167	RF400	925041812	RF330
925052107	RF400	925052168	RF400	925041813	RF330
				925041817	RF330

REVISION:

Revision	Date	Description	Author	Approved by - on
00	02/2021	Document Creation	Anna Grimlund	Szabina Czuczorne Seres