

## ROLLING DRAWERS FALLING OUT FROM THE RAIL

### DESCRIPTION

The assembled drawer is moving inside the inner liner (Freezer). The glass shelf is moving in the plastic cover. There is a gap between the plastic holder and the inner liner.



Fault: the LTC is moving inside the inner liner.

### SOLUTION:

In order to prevent the drawers falling out and to fix the gap between the plastic holder and the inner liner use an **EPS cube+ double sided tape (2801829017)**

## How to fix the gap between the inner liner and the plastic holder

### Procedure:

1

1. Measure the **distance** between the inner liner and the plastic holder and **depth** of the plastic holder







2. Get two pieces of EPS cube + double sided-tape-supplied in the service kit
3. Cut the EPS and the double-sided tape according to the measurement in step 1

2



3



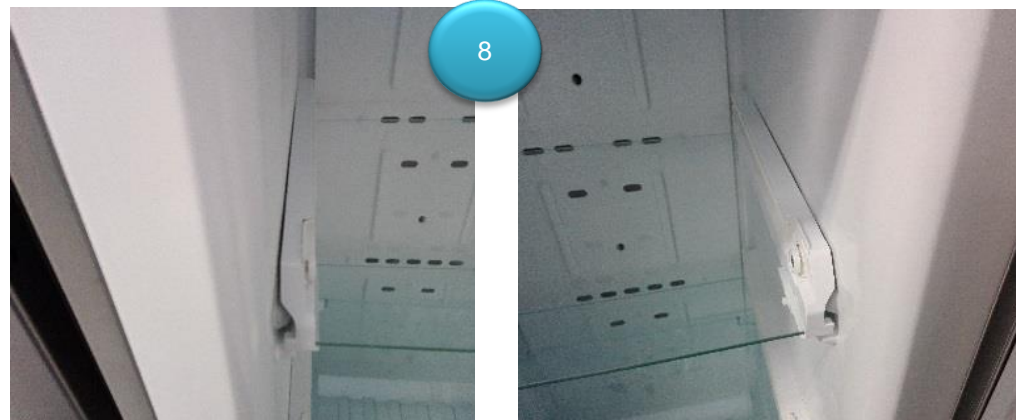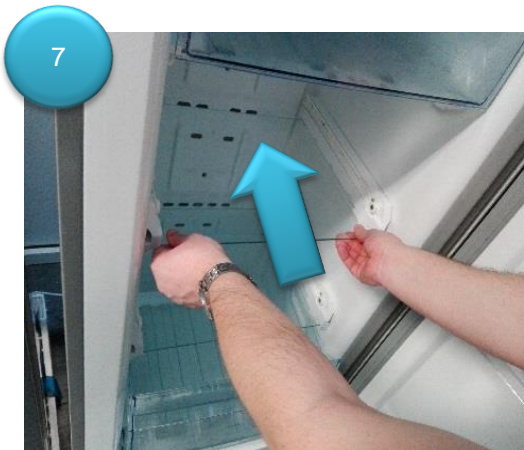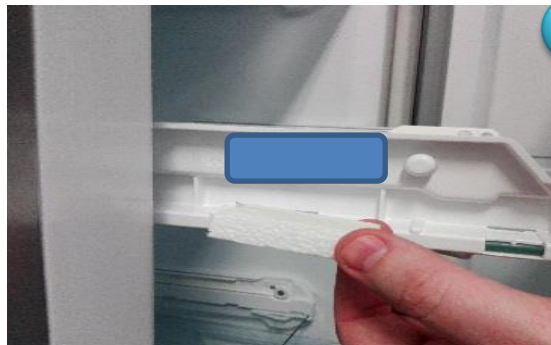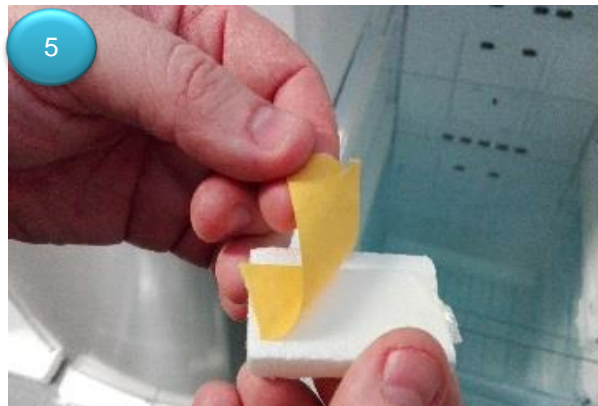

4. Take out the whole drawer unit from the inner liner
5. Remove the cover of the double sided-tape
6. Fix the EPS cube behind the screw-holder of the plastic holder- Do it on both the left and right side to set the gaps equal
7. Put back the unit to the inner liner
8. Check the gaps on both sides
9. If the unit is stable then the moving should be eliminated

**SPARE PART NUMBER:**

Spare Part code	Description	Quantity
<b>2801829017</b>	EPS cube with tape	2

MODELS INVOLVED:

PNC	ELC	Service Kit
925041402	00	2801829017
925041402	01	2801829017
925041402	02	2801829017
925041403	00	2801829017
925041403	01	2801829017
925041403	02	2801829017
925041403	03	2801829017
925041408	00	2801829017
925041408	01	2801829017
925041409	00	2801829017
925041409	01	2801829017
925041413	00	2801829017
925041413	01	2801829017
925041413	02	2801829017
925041414	00	2801829017
925041414	01	2801829017
925041415	00	2801829017
925041415	01	2801829017
925041415	02	2801829017
925041416	00	2801829017
925041416	01	2801829017
925041416	02	2801829017

925041423	00	2801829017
925041423	01	2801829017
925041423	02	2801829017
925041428	00	2801829017
925041428	01	2801829017
925041428	02	2801829017
925041438	00	2801829017
925041441	00	2801829017
925041442	00	2801829017
925041450	00	2801829017
925041451	00	2801829017
925041454	00	2801829017
925041455	00	2801829017
925041456	00	2801829017
925041457	00	2801829017
925041458	00	2801829017
925052751	00	2801829017
925052751	01	2801829017
925052751	02	2801829017
925052753	00	2801829017
925052753	01	2801829017
925052753	02	2801829017
925052756	01	2801829017
925052756	02	2801829017
925052757	01	2801829017
925052757	02	2801829017
925052760	00	2801829017
925052760	01	2801829017
925052760	02	2801829017
925052761	00	2801829017



925052761	01	2801829017
925052761	02	2801829017
925052762	00	2801829017
925052762	01	2801829017
925052762	02	2801829017
925052762	03	2801829017
925052763	00	2801829017
925052763	01	2801829017
925052763	02	2801829017
925052764	00	2801829017
925052764	01	2801829017
925052764	02	2801829017
925052765	00	2801829017
925052765	01	2801829017
925052765	02	2801829017
925052765	03	2801829017
925052766	00	2801829017
925052766	01	2801829017
925052766	02	2801829017
925052766	03	2801829017
925052770	00	2801829017
925052770	01	2801829017
925052770	02	2801829017
925052771	01	2801829017
925052772	00	2801829017
925052773	00	2801829017
925052774	00	2801829017
925052775	00	2801829017
925052775	01	2801829017
925052775	02	2801829017

925052776	00	2801829017
925052776	01	2801829017
925052776	02	2801829017
925052777	00	2801829017
925052777	01	2801829017
925052777	02	2801829017
925052781	00	2801829017
925052781	01	2801829017
925052781	02	2801829017
925052783	01	2801829017
925052793	00	2801829017
925052793	01	2801829017
925052793	02	2801829017
925052815	00	2801829017
925052815	01	2801829017
925052815	02	2801829017
925052820	00	2801829017
925052820	01	2801829017
925052820	02	2801829017
925052821	00	2801829017
925052821	01	2801829017
925052821	02	2801829017
925052826	00	2801829017
925052826	01	2801829017
925052831	00	2801829017
925052831	01	2801829017
925052831	02	2801829017
925052832	00	2801829017
925052832	01	2801829017
925052833	00	2801829017

<b>925052842</b>	<b>00</b>	<b>2801829017</b>
<b>925052843</b>	<b>00</b>	<b>2801829017</b>
<b>925052849</b>	<b>00</b>	<b>2801829017</b>
<b>925052849</b>	<b>01</b>	<b>2801829017</b>
<b>925052855</b>	<b>00</b>	<b>2801829017</b>
<b>925052870</b>	<b>00</b>	<b>2801829017</b>

Revision:

Revision	Date	Description	Written by	Approved by - on
00	06/ 2017	Document creation	Zsuzsanna Mihalik	Attila Héri -21/06/2017