



© ELECTROLUX HOME PRODUCTS
ITALY S.p.A.
Spares Operations Italy
Corso Lino Zanussi, 30
I - 33080 PORCIA /PN

Fax +39 0434 394096

Edition: 2007-08-11

Publication no.

599 70 39-88

EN

**Washing machines
&
Washer-dryers**

**with electronic control
system**

**EWM21xx
EWM25xx**

**Technical and functional
characteristics**

ENV06

AEG Styling

SERIES 6 / 7

CONTENTS

1	Purpose of this manual	5
2	PRECAUTIONS	5
3	SERIES 6	6
3.1	GENERAL CHARACTERISTICS.....	6
3.1.1	General characteristics WM	6
3.1.2	General characteristics WD	7
3.2	CONTROL PANEL	8
3.2.1	Styling SERIES 6.....	8
3.2.2	Configuration of control panel	9
3.2.3	Programme selector (S1)	9
3.2.4	Programme configuration	9
3.2.5	Pushbuttons – LEDs and LCD	10
4	SERIES 7	13
4.1	GENERAL CHARACTERISTICS.....	13
4.1.1	General Characteristics WM.....	13
4.1.2	General Characteristics WD	14
4.2	CONTROL PANEL	15
4.2.1	Styling SERIES 7.....	15
4.2.2	Configuration of control panel	16
4.2.3	Programme selector (S1)	16
4.2.4	Pushbuttons and LCD SERIES 7 Special	17
4.2.5	Pushbuttons and LCD Version WD Series 7	22
4.2.6	DEMO MODE SETTING	24
4.3	Exiting DEMO mode	24
5	DIAGNOSTICS SYSTEM	24
5.1	Access to diagnostics mode	24
5.2	Exiting diagnostics mode	24
5.3	Diagnostics phases.....	25
6	ALARMS	27
6.1	Displaying the alarms to the user	27
6.2	Reading the alarm codes.....	27
6.2.1	Displaying the alarm	28
6.2.2	Examples of alarm display.....	28
6.2.3	Operation of alarms during diagnostics.....	28
6.3	Rapid reading of alarm codes.....	29
6.4	Cancelling the last alarm	29
7	OPERATING TIME COUNTER	30
7.1.1	Reading of operating time	30
7.1.2	Display of total operating time with LEDs.....	30
8	WASHING PROGRAMMES AND OPTIONS WM.....	31
8.1	Options (for appliances EWM 21xx with universal motor).....	31
8.2	Options (for appliances EWM 25xx with asynchronous motor and inverter).....	32
9	DRYING PROGRAMMES AND WD OPTIONS.....	34
9.1	EWM21xx & 25xx	34
9.2	Description of options	36
10	TECHNICAL CHARACTERISTICS.....	38
10.1	Control system memory	38
10.1.1	General structure of the memory system	38
10.1.2	FLASH	38
10.1.3	RAM.....	39
10.2	Door interlock	40
10.2.1	Voltmetric interlock with PTC.....	40
10.2.1.1	Operating principle	40
10.2.2	Instantaneous door interlock	41
10.2.2.1	Operating principle	41
10.2.2.2	Conditions required for opening the door.....	41
10.2.2.3	Automatic unlock.....	41
10.3	Water fill system.....	42
10.3.1	Flow meter	42
10.3.2	Operating principle of flow meter.....	43
10.4	Analogue pressure switch of water level control in the tub.....	44
10.5	11.5 Drain pump.....	44
10.5	11.5 Drain pump.....	45
10.6	Recirculation pump (if featured).....	45

10.7	Heating.....	46
10.8	Temperature sensor.....	46
10.9	Universal motor (EWM 21xx).....	47
10.9.1	Power supply to motor.....	47
10.10	Three-phase asynchronous motor (EWM25xx).....	47
10.10.1	Power supply to motor.....	47
10.11	Anti-foam control system.....	48
10.12	“FUCS” (Fast Unbalance Control System).....	49
11	DRYING CIRCUIT.....	51
11.1	Temperature control.....	52
	Calculating the drying time:.....	52
11.2	Table of alarm codes.....	53
11.3	Diagram WM with UNIVERSAL MOTOR EWM 21xx.....	57
11.4	Diagram WM with THREE-PHASE ASYNCHRONOUS MOTOR EWM 25xx.....	59
11.5	Diagram WD with UNIVERSAL MOTOR EWM 21xx.....	61
11.6	Diagram WD with THREE-PHASE ASYNCHRONOUS MOTOR EWM 25xx.....	63
12	ACCESSIBILITY TO THE ELECTRONIC CONTROL SYSTEM.....	65
12.1	WM Version.....	65
12.1.1	Work top.....	65
12.1.2	Control panel.....	65
12.2	WD VERSION.....	67
12.2.1	Work top.....	67
12.2.2	Control panel.....	67

1 Purpose of this manual

The purpose of this manual is to provide service engineers who are already familiar with the repair procedures for traditional washing machines with information regarding appliances fitted with the ENV06 electronic control system and produced in Porcia (Italy) and Olawa (Poland).

The characteristic of the ENV06 electronic control system is to use only an electronic pressure switch to check the various water levels in the tub (with the elimination of the mechanical pressure switches: anti-overflow, anti-boiling, 1st-2nd level), and a new heater with two thermal fuses which interrupt if the temperature degree overcomes the values by which they are calibrated.

The following are described:

- general characteristics
- control panel and washing programmes
- technical and functional characteristics
- access to the electronic control system

For detailed information concerning hydraulic circuit, structural characteristics of the appliances and accessibility, please refer to Service Manual:

- *Publication no. 599 37 67-82 – washing machines with HEC-ARCHED cabinet.*

Identification table between styling (SERIES 6 / 7) and functionality (EWM 21xx/25xx)

Styling	EWM 21xx		EWM 25xx	
	Washing type	Motor	Washing type	Motor
SERIES 6	<ul style="list-style-type: none"> •Traditional with ECO-BALL •Jet-System 	Universal	<ul style="list-style-type: none"> •Traditional with ECO-BALL •Jet-System 	Three-phase asynchronous with Inverter
SERIES 7	-----	-----	<ul style="list-style-type: none"> •Traditional with ECO-BALL •Jet-System 	Three-phase asynchronous with Inverter

2 PRECAUTIONS




- **Electrical appliances must be serviced only by qualified Service Engineers.**
- **Always remove the plug from the power socket before touching internal components.**
- **In case of replacement of the heater, replace it with one with the same characteristics in order not to compromise the safety of the appliance.**

3 SERIES 6

3.1 GENERAL CHARACTERISTICS



The ENV060 electronic control system consists of a single PCB, which incorporates the power, control and display (where the LCD is connected) functions. The programme selector is incorporated in the board. The PCB is mounted on a casing fitted to the control panel.

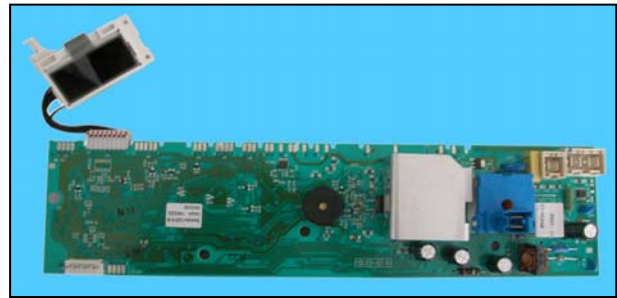

3.1.1 General characteristics WM

<p>Version</p> <p>SERIES 6</p>	
<p>Version</p> <p>SERIES 6 Special</p>	
<p>Number of buttons</p>	<ul style="list-style-type: none"> Max. 7 (6 options + start/pause)
<p>Number of LEDs</p>	<ul style="list-style-type: none"> Max. 12 + LCD
<p>Programme selector</p>	<ul style="list-style-type: none"> 21 positions with main switch (incorporated in the PCB)
<p>Serial port</p>	<ul style="list-style-type: none"> DAAS-EAP communications protocol up to 115.200 baud
<p>Power supply</p>	<ul style="list-style-type: none"> 220/240V 50/60 Hz (configurable)
<p>Type of washing</p>	<ul style="list-style-type: none"> Traditional with “eco-ball” sphere Jet-system
<p>Rinsing system</p>	<ul style="list-style-type: none"> Traditional with “eco-ball” sphere Jet-system
<p>Motor</p>	<ul style="list-style-type: none"> Collector, with tachometric generator Two-pole asynchronous, with three-phase tachometric generator (with Inverter)
<p>Spin speed</p>	<ul style="list-style-type: none"> 1000 ÷ 1600 rpm
<p>Anti-unbalancing system</p>	<ul style="list-style-type: none"> FUCS
<p>Water fill</p>	<ul style="list-style-type: none"> 1 solenoid valve with 1 inlet – 2/3 outlets
<p>Detergent drawer</p>	<ul style="list-style-type: none"> 3/4 compartments: prewash/stains, wash, conditioners
<p>Control of water level in the tub</p>	<ul style="list-style-type: none"> Electronic/analogue pressure switch
<p>Door safety device</p>	<ul style="list-style-type: none"> Traditional (with PTC) Instantaneous
<p>Power of heating element</p>	<ul style="list-style-type: none"> 1950W with thermal fuses incorporated
<p>Temperature control</p>	<ul style="list-style-type: none"> NTC sensor incorporated in the heater
<p>Buzzer</p>	<ul style="list-style-type: none"> Traditional incorporated in the electronic board
<p>Sensors</p>	<ul style="list-style-type: none"> Water fill gauge (flowmeter) Aqua control

3.1.2 General characteristics WD

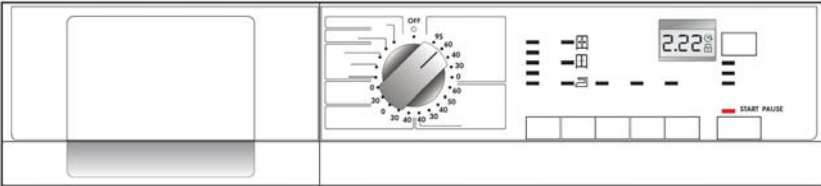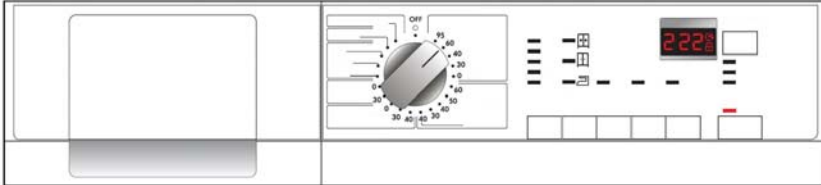
<p>Version</p> <p>SERIES 6</p>	
<p>Version</p> <p>SERIES 6 Special</p>	
<p>Number of buttons</p>	<ul style="list-style-type: none"> ▪ Max. 7 (6 options + start/pause)
<p>Number of LEDs</p>	<ul style="list-style-type: none"> ▪ Max. 14 + LCD
<p>Programme selector</p>	<ul style="list-style-type: none"> ▪ 25 positions with main switch (incorporated in the PCB)
<p>Serial port</p>	<ul style="list-style-type: none"> ▪ DAAS-EAP communications protocol up to 115.200 baud
<p>Power supply</p>	<ul style="list-style-type: none"> ▪ 220/240V ▪ 50/60 Hz (configurable)
<p>Type of washing</p>	<ul style="list-style-type: none"> ▪ Traditional with “eco-ball” sphere ▪ Jet-system
<p>Rinsing system</p>	<ul style="list-style-type: none"> ▪ Traditional with “eco-ball” sphere ▪ Jet-system
<p>Motor</p>	<ul style="list-style-type: none"> ▪ Collector, with tachometric generator ▪ Two-pole asynchronous, with three-phase tachometric generator (with Inverter)
<p>Spin speed</p>	<ul style="list-style-type: none"> ▪ 1000 ÷ 1600 rpm
<p>Anti-unbalancing system</p>	<ul style="list-style-type: none"> ▪ FUCS
<p>Water fill</p>	<ul style="list-style-type: none"> ▪ 1 solenoid valve with 1 inlet – 2/3 outlets
<p>Detergent drawer</p>	<ul style="list-style-type: none"> ▪ 3 compartments: prewash/stains, wash, conditioners
<p>Control of water level in the tub</p>	<ul style="list-style-type: none"> ▪ Electronic/analogue pressure switch
<p>Door safety device</p>	<ul style="list-style-type: none"> ▪ Traditional (with PTC) ▪ Instantaneous
<p>Power of heating element washing</p>	<ul style="list-style-type: none"> ▪ 1950W with thermal fuses incorporated
<p>Power of heating element drying</p>	<ul style="list-style-type: none"> ▪ 1840W (920+920)
<p>Washing temperature control</p>	<ul style="list-style-type: none"> ▪ NTC sensor incorporated in the heater
<p>Drying temperature control</p>	<ul style="list-style-type: none"> ▪ NTC sensor ▪ Thermostats
<p>Buzzer</p>	<ul style="list-style-type: none"> ▪ Traditional incorporated in the electronic board
<p>Sensors</p>	<ul style="list-style-type: none"> ▪ Water fill gauge (flowmeter) ▪ Aqua control

3.2 CONTROL PANEL

3.2.1 Styling SERIES 6


- max. 7 buttons
- 21-position programme selector
- LEDs 14 for WM and LEDs 16 for WD
- LCD

Version **WM**

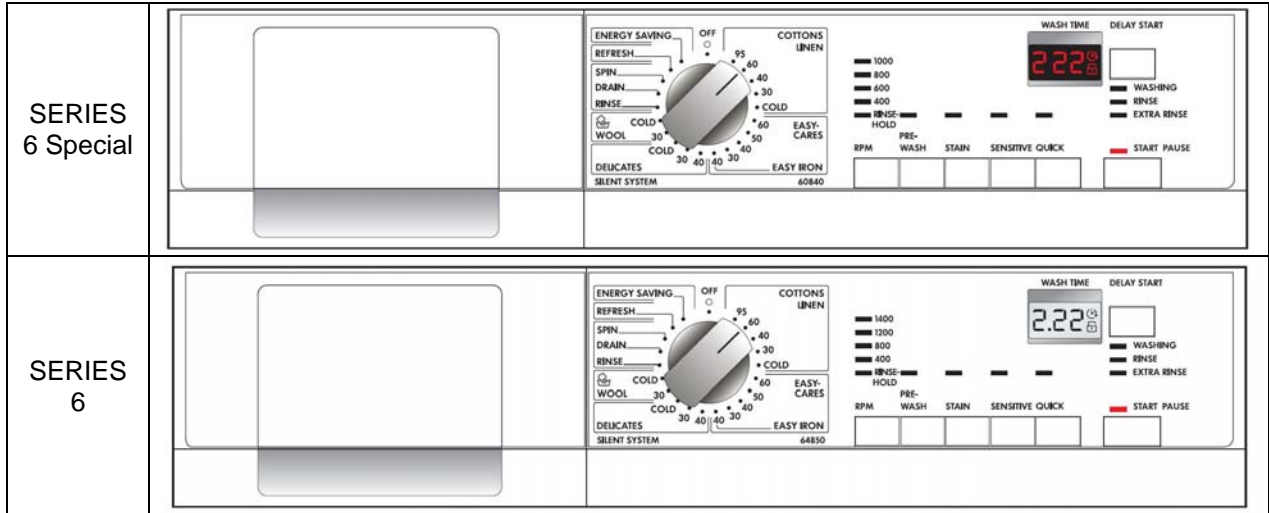


The two versions differ for the background colour of the LCD: one black, the other white.

Version **WD**

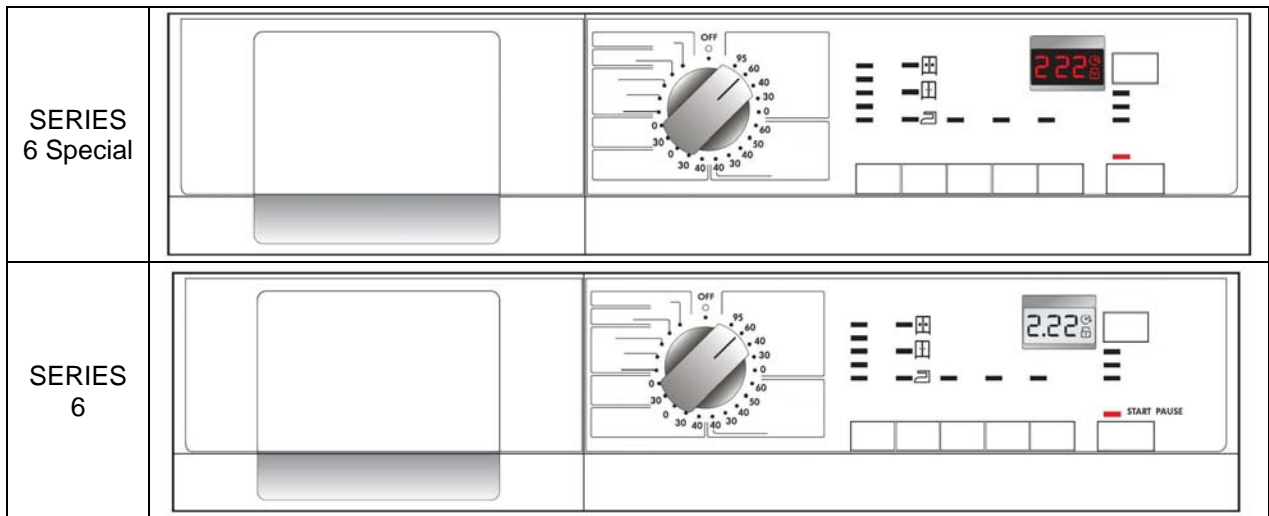


The two versions differ for the background colour of the LCD: one black, the other white.

- Dispositions of LEDs and buttons

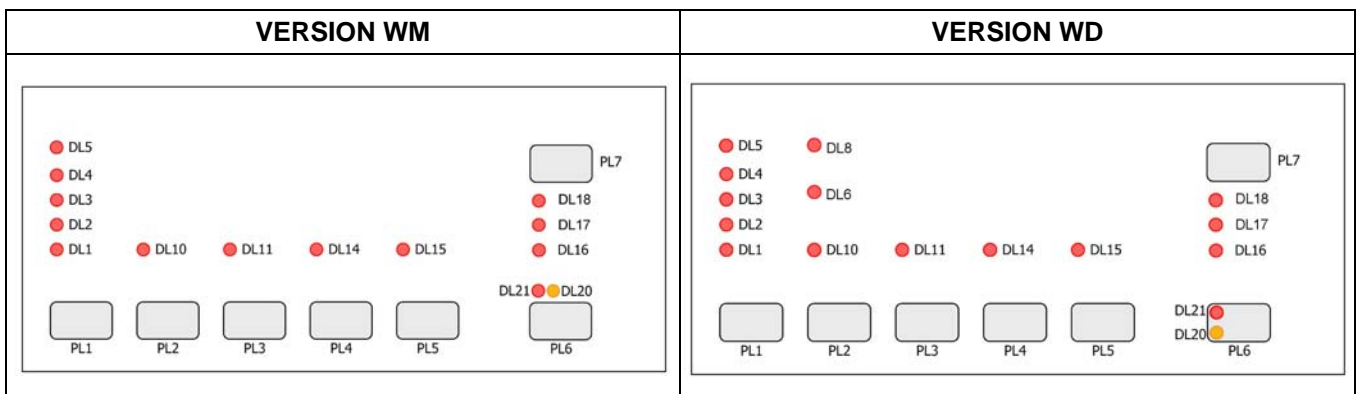

3.2.2 Configuration of control panel

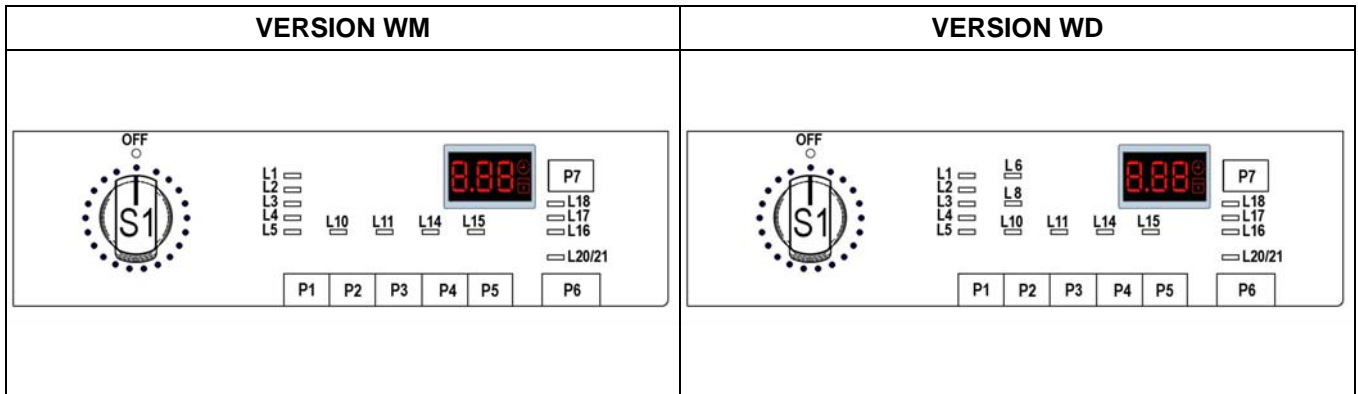

The washing programmes, the functions of the selector knob and the various pushbuttons vary according to the model, since these are determined by the configuration of the appliance.

3.2.3 Programme selector (S1)

The selector features 25 positions and incorporates the ON/OFF switch. The various positions of the selector may be configured to perform different washing programmes (ex: water level, drum movement, no. of rinses and the washing temperature to be selected according to the type of clothes). It can be turned both clockwise and anti-clockwise.

In the first position, the appliance is switched off and the current programme is cancelled.

For each programme, the compatible options and other parameters are defined.



3.2.4 Programme configuration

The table below lists the parameters that can be used to define the washing programmes.

Types of fabric	Cotton/linen, Synthetic fabrics, Delicates, Wool, Hand-wash, Shoes, Jeans, Duvet, Silk.
Special programmes	Soak, Miniprogramme, Easy-Iron, Conditioner, Rinses, Delicate rinses, Drain, Delicate spin, Spin, Drying.
Temperature	Determined by the chosen programme.
Spin	It can be selected with the "Spin" button.
Options (Normal / Possible)	Rinse Hold, Night-time cycle, Pre-wash, Stains, Sensitive, Extra rinse, Easy-Iron, Economy (energy label), Intensive, Normal, Daily, Short, Very short, Reduced spin speed, No spin.
Programme phases	Pre-wash, Wash, Rinses, Spin, Delayed start, Drying.


3.2.5 Pushbuttons – LEDs and LCD

The functions of each button are defined by the configuration of the appliance.


- **Button no. 1:** this button is related to LEDs (L1-L5) and pressing it sequentially the spin speed varies from max., to no spin or rinse hold.




- **Button no. 2:** this button is configurable:
 in WM versions is related to LED (L10),
 while
 in WD versions is related to LEDs L6-L8-L10.

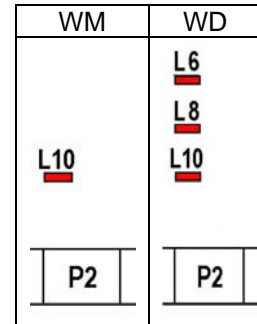


- **Button no. 3:** this button is configurable and is related to LED (L11).

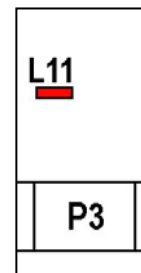

- **Button no. 4:** this button is configurable and is related to LED (L14).

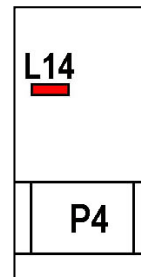


- **Button no. 5:** this button is configurable and is related to LED (L15).

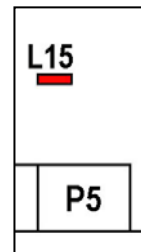


- **Button no. 6:** this button is configurable and has the function of START/PAUSE and is related to LEDs 20-21.

Two LEDs, one yellow that flashes in case of alarm and one red:

- > that flashes when the appliance is in pause, in selection, or in combination with the yellow one to indicate the alarm code.
- > remains lit during the cycle execution.

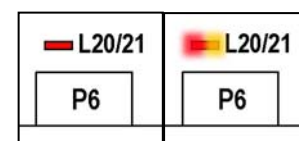


- **Button no. 7:** this button is configurable, has the function of DELAYED START. During the cycle selection phase, it is possible to select a delayed start from 30' to 20 hours (30' ↻ 60' ↻ 90' ↻ 2h ↻ 3h... ↻ 20h ↻ 0h) and the time displayed in the LCD, during the last hour, the time decreases minute by minute.

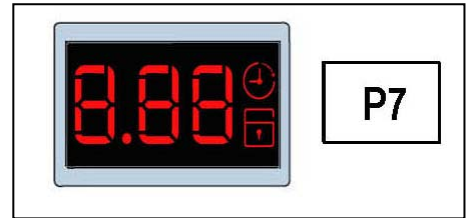

- **LED wash phase indicators:**

The LEDs L16, L17, L18 are configurable and are used as indicators of the wash phases.

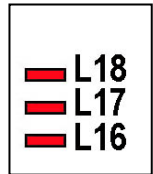

Indications	
Pre-wash	Lights during selection mode if the programme includes the pre-wash phase, and during the execution of the pre-wash
Wash	Lights during selection mode if the programme includes the wash phase, and during the execution of the wash
Pre-wash/Wash	Lights during selection mode if the programme includes the pre-wash or wash phases, and during the execution of these phases
Rinses	Lights during selection mode if the programme includes rinse phases, and during the execution of the rinses
Spin	Lights during selection mode if the programme includes the spin phase, and during the execution of the spin
Rinses / Spin	Lights during selection mode if the programme includes rinses and spin and during the execution of these phases
Drain	Lights during selection mode if the programme includes the drain phase, and during the execution of the drain
Extra rinse	Lights when this option has been memorized (if included in the cycle)
Rinse-hold	Lights if the programme includes the rinse-hold option and at the end of the cycle, when the appliance stops with water in the tub
Current cycle	Lights during selection mode Lights during execution of the cycle and switches off during the drain phase if selected
End of cycle	Lights when the programme has been completed
Door locked	Lights when the door lock prevents opening of the door, and switches off when the door can be opened. Flashes when the interlock is about to release the door (may be seen if PTC devices are used, as these require one or two minutes before releasing the lock)
Child lock	Lights when the child safety is on and all buttons are deactivated
Drying	Lights during selection mode if the programme includes the drain phase and during the execution of this phase

- **LCD**

The following information appear on the LCD:

- ↻ **The duration of the washing programme**, which appears after having selected it. This time corresponds to that necessary for the maximum wash load for each programme type. After starting the programme the time decreases minute by minute.
- ↻ **The end of the programme** is indicated by **three zero flashing** (when it is possible to open the door).
- ↻ **The stop of the appliance with water in tub**, after the programmes with RINSE HOLD option, is displayed by **one zero flashing**. The LED that indicates the door remains lit and the LED of the START/PAUSE button switches off.
- ↻ The **anti-crease** phase at the end of the drying cycle is displayed by **one zero flashing**.



↩ - **The delayed start**, selected through the relative button. After pressing the START/PAUSE button the countdown starts and the delay time decreases hour by hour. In the last 2 hours it diminishes by 30 min. and in the last hour minute by minute.



↩ - **The padlock**: when is on, it indicates that all the buttons are disabled to prevent the children from modifying, starting or pausing the cycle. To disable this function it is necessary to push a key combination. (See User Manual).



↩ - **Wrong choice of an option** is displayed by Err, when a function not compatible with the chosen programme is selected. The wrong selection is also signalled by an acoustic alarm (if activated).



↩ - **An alarm code** indicates an error of the appliance operation. Simultaneously to the displaying of the code, in the display the yellow LED above the START/PAUSE button flashes.



- **Buzzer** (configurable)

- A **"beep"** when the programmes are selected, an option, when the START/PAUSE button is pressed to start or pause the cycle.
- Three **"beeps"** when an option not compatible with the selected programme is chosen, or when a button is pressed or the knob turned during a cycle.
- A particular sequence of **"beeps"** for a two-minute duration when the cycle has terminated.
- A particular sequence of three **"beeps"**, to signal a malfunctioning of the appliance.



4 SERIES 7

4.1 GENERAL CHARACTERISTICS


The ENV060 electronic control system consists of a single PCB, which incorporates the power, control and display (where the LCD display is connected) functions and the programme selector is incorporated in the board. The PCB is mounted on a casing fitted to the control panel.



4.1.1 General Characteristics WM

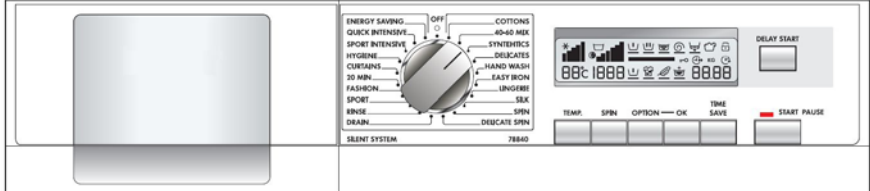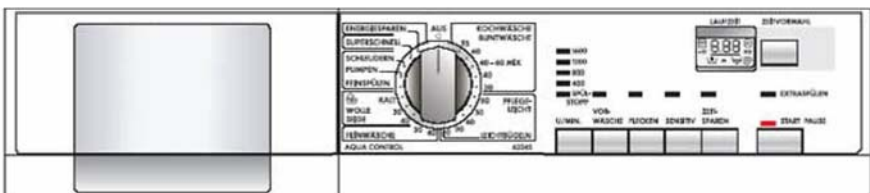Version SERIES 7	
Version SERIES 7 Special	
Number of buttons	<ul style="list-style-type: none"> Max. 7 (6 options + 1 start/pause)
Number of LEDs	<ul style="list-style-type: none"> Max. 12 + LCD display
Programme selector	<ul style="list-style-type: none"> 21 positions with main switch (incorporated in the PCB)
Serial port	<ul style="list-style-type: none"> DAAS-EAP communications protocol up to 115.200 baud
Power supply	<ul style="list-style-type: none"> 220/240V 50/60 Hz (configurable)
Type of washing	<ul style="list-style-type: none"> Traditional with "eco-ball" sphere Jet-system
Rinsing system	<ul style="list-style-type: none"> Traditional with "eco-ball" sphere Jet-system
Motor	<ul style="list-style-type: none"> Collector, with tachometric generator Two-pole asynchronous, with three-phase tachometric generator (with Inverter)
Spin speed	<ul style="list-style-type: none"> 1200 ÷ 1600 g/
Anti-unbalancing system	<ul style="list-style-type: none"> FUCS
Water fill	<ul style="list-style-type: none"> 1 solenoid valve with 1 inlet – 2/3 outlets
Detergent drawer	<ul style="list-style-type: none"> 3/4 compartments: prewash, wash, conditioners, (bleach)
Control of water level in the tub	<ul style="list-style-type: none"> Electronic/analogue pressure switch
Door safety device	<ul style="list-style-type: none"> Traditional (with PTC) Instantaneous
Power of heating element	<ul style="list-style-type: none"> 1950W with thermal fuse incorporated
Temperature control	<ul style="list-style-type: none"> NTC sensor incorporated in the heater
Buzzer	<ul style="list-style-type: none"> Traditional incorporated in the electronic board
Sensors	<ul style="list-style-type: none"> Water fill gauge (flowmeter) Aqua control

4.1.2 General Characteristics WD

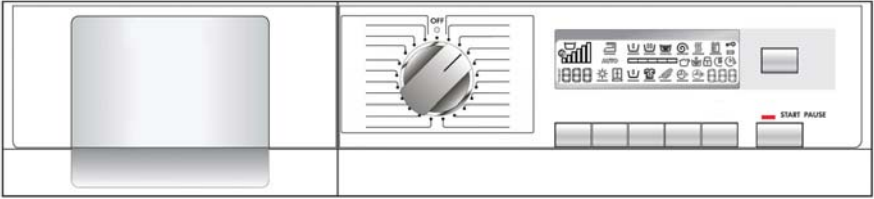
<p>Version</p> <p>SERIES 7</p>	
<p>Number of buttons</p>	<ul style="list-style-type: none"> ▪ Max. 7 (6 options + 1 start/pause)
<p>Number of LEDs</p>	<ul style="list-style-type: none"> ▪ Max. 1 + LCD display
<p>Programme selector</p>	<ul style="list-style-type: none"> ▪ 25 positions with main switch (incorporated in the PCB)
<p>Serial port</p>	<ul style="list-style-type: none"> ▪ DAAS-EAP communications protocol up to 115.200 baud
<p>Power supply</p>	<ul style="list-style-type: none"> ▪ 220/240V ▪ 50/60 Hz (configurable)
<p>Type of washing</p>	<ul style="list-style-type: none"> ▪ Traditional with “eco-ball” sphere ▪ Jet-system
<p>Rinsing system</p>	<ul style="list-style-type: none"> ▪ Traditional with “eco-ball” sphere ▪ Jet-system
<p>Motor</p>	<ul style="list-style-type: none"> ▪ Two-pole asynchronous, with three-phase tachometric generator (with Inverter)
<p>Spin speed</p>	<ul style="list-style-type: none"> ▪ 1200 ÷ 1600 rpm
<p>Anti-unbalancing system</p>	<ul style="list-style-type: none"> ▪ FUCS
<p>Water fill</p>	<ul style="list-style-type: none"> ▪ 1 solenoid valve with 1 inlet – 2/3 outlets
<p>Detergent drawer</p>	<ul style="list-style-type: none"> ▪ 3/4 compartments: prewash, wash, conditioners, (bleach)
<p>Control of water level in the tub</p>	<ul style="list-style-type: none"> ▪ Electronic/analogue pressure switch
<p>Door safety device</p>	<ul style="list-style-type: none"> ▪ Traditional (with PTC) ▪ Instantaneous
<p>Power of heating element washing</p>	<ul style="list-style-type: none"> ▪ 1950W with thermal fuse incorporated
<p>Power of heating element drying</p>	<ul style="list-style-type: none"> ▪ 1840W (920+920)
<p>Temperature control washing</p>	<ul style="list-style-type: none"> ▪ NTC sensor incorporated in the heater
<p>Temperature control drying</p>	<ul style="list-style-type: none"> ▪ NTC sensor ▪ Thermostats
<p>Buzzer</p>	<ul style="list-style-type: none"> ▪ Traditional incorporated in the electronic board
<p>Sensors</p>	<ul style="list-style-type: none"> ▪ Water fill gauge (flowmeter) ▪ Aqua control

4.2 CONTROL PANEL

4.2.1 Styling SERIES 7


- max. 7 buttons
- 25-position programme selector
- 14 LEDs
- LCD display

Version **WM**

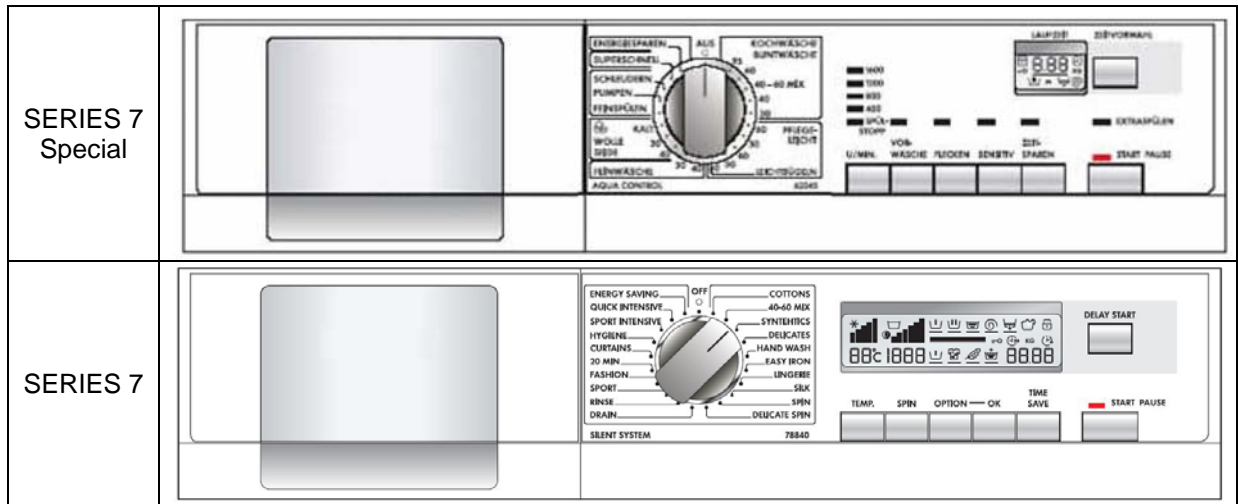


The two versions differ for the size of the LCD: in the Low version, the displaying of the choice of the options is performed through the lighting of the LEDs.


Version **WD**

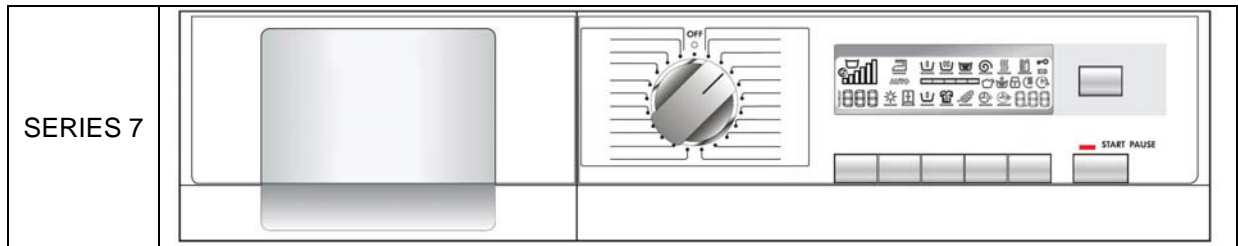

- Disposition of the LEDs and of the buttons in the display board

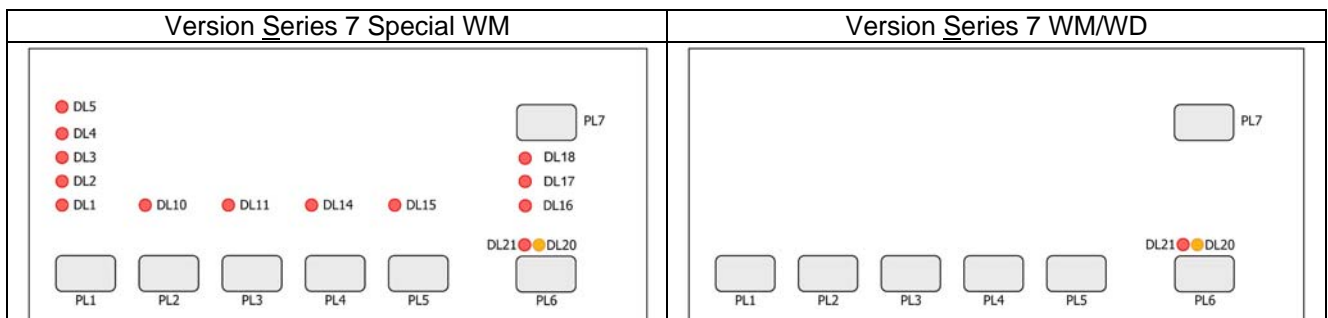

4.2.2 Configuration of control panel

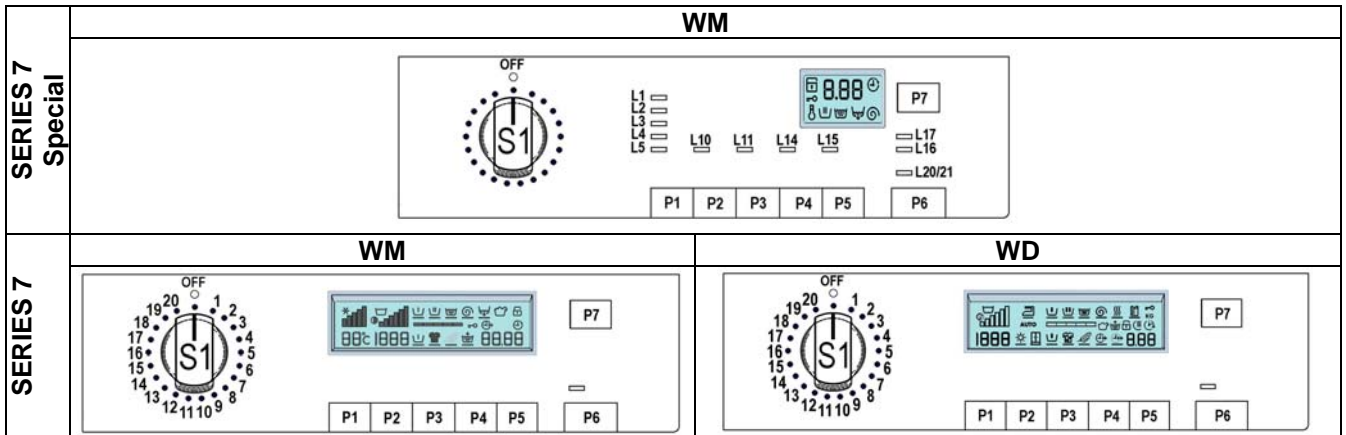

The washing programmes, the functions of the selector knob and the various pushbuttons vary according to the model, since these are determined by the configuration of the appliance.

4.2.3 Programme selector (S1)

The selector features 25 positions and incorporates the ON/OFF switch. The various positions of the selector may be configured to perform different washing programmes (ex: water level, drum movement, no. of rinses and the washing temperature to be selected according to the type of clothes) and can be turned both clockwise and anti-clockwise. In the first position, the appliance is switched off and the current programme is cancelled. For each programme, the compatible options and other parameters are defined.



- **Programme configuration**


The table below lists the parameters that can be used to define the washing programmes.

Types of fabric	Cotton/linen, Synthetic fabrics, Delicates, Wool, Hand-wash, Shoes, Jeans, Duvet, Silk.
Special programmes	Soak, Miniprogramme, Easy-Iron, Conditioner, Rinses, Delicate rinses, Drain, Delicate spin, Spin.
Temperature	Normal, Maximum: the initial temperature is the maximum that can be selected for a specific washing programme.
Spin	Normal, Minimum, Maximum.
Options (Normal / Possible)	Rinse Hold, Night-time cycle, Pre-wash, Stains, Sensitive, Extra rinse, Easy-Iron, Economy (energy label), Intensive, Normal, Daily, Short, Very short, Reduced spin speed, No spin.
Programme phases	Pre-wash, Wash, Rinses, Spin, Delayed start, Drying.


4.2.4 Pushbuttons and LCD SERIES 7 Special

The functions of each button are defined by the configuration of the appliance.


- **Button no. 1:** this button is related to LEDs (L1÷L5) and pressing it sequentially the spin speed varies from max., to no spin or rinse hold.

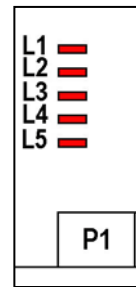


- **Button no. 2:** this button is configurable and is related to LED (L10).

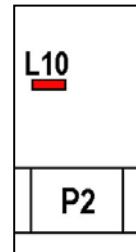


- **Button no. 3:** this button is configurable and is related to LED (L11).

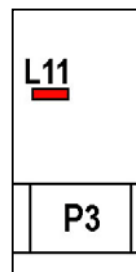

- **Button no. 4:** this button is configurable and is related to LED (L14).

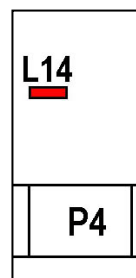


- **Button no. 5:** this button is configurable and is related to LED (L15).

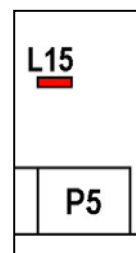


- **Button no. 6:** this button is configurable and has the function of START/PAUSE and is related to LEDs 20-21.

Two LEDs, one yellow that flashes in case of alarm and one red:

- > that flashes when the appliance is in pause, in selection, or in combination with the yellow one to indicate the alarm code.
- > remains lit during the cycle execution.

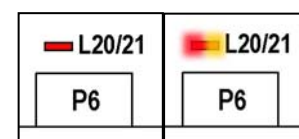


Button no. 7: this button is configurable, has the function of DELAYED START. During the cycle selection phase, it is possible to select a delayed start from 30' to 20 hours (30' ↻ 60' ↻ 90' ↻ 2h ↻ 3h... ↻ 20h ↻ 0h) and the time displayed in the LCD, during the last hour, the time decreases minute by minute.

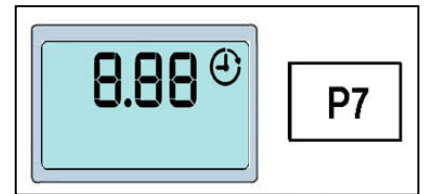

- **Indicator LEDs:**

The LEDs L16, L17 can be configured.

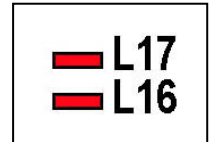

- **LCD**

The following information appear on the LCD:



↻ **The duration of the washing programme**, which appears after having selected it. This time corresponds to that necessary for the maximum wash load for each programme type. After starting the programme the time decreases (and updates) minute by minute.



↻ **Washing phases**

- Pre-wash
- Washing
- Drain
- Spin



↻ - **The end of the programme** is indicated by **one zero flashing**.



↻ - **The stop of the appliance with water in tub**, after the programmes with RINSE HOLD option, is displayed by **one zero flashing**. The key icon indicates that the door is locked and the LED of the START/PAUSE button switches off.



↻ **The padlock:** when is on, it indicates that all the buttons are disabled to prevent the children from modifying, starting or pausing the cycle. To disable this function it is necessary to push a key combination. (See User Manual).



↩ **Wrong choice of an option** is displayed by Err, when a function not compatible with the chosen programme is selected.
The wrong selection is also signalled by an acoustic alarm (if activated).



↩ **An alarm code** indicates an error of the appliance operation.
Simultaneously to the displaying of the code, the START/PAUSE flashes.




- **Buzzer**

See page12.

The functions of each button are defined by the configuration of the appliance.

- **Button no. 1: TEMPERATURE**


The programme shows the base temperature, but pushing the button it is possible to modify it from a max. to a min. (allowed by the programme) and it is represented by the number of bars displayed and by the 2 digits. The star symbol appears when the cold cycle is selected.

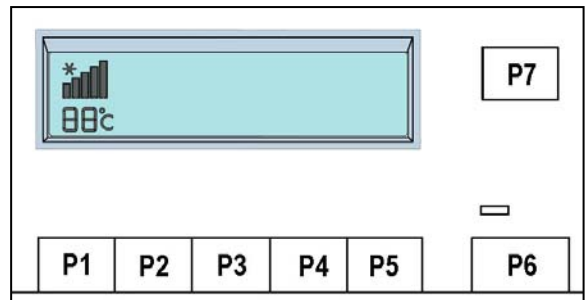

- **Button no. 2: SPIN**

The programme shows the maximum spin, but pushing the button, it is possible to vary the speed up to 400 rpm (represented by the number of bars displayed and by the 4 digits).


When the NIGHT CYCLE or RINSE HOLD is selected, the relative symbols light up (no value relative to the bars or the digits appears). At the end of the cycle the RINSE HOLD button flashes.

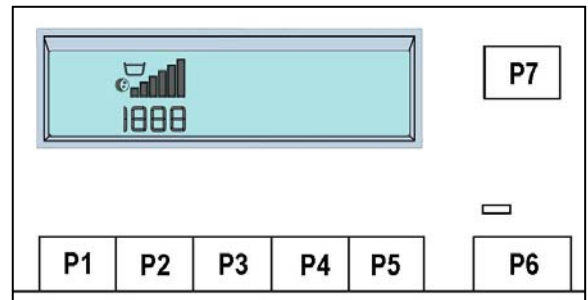

- **Button no. 3: OPTIONS**

Configurable button: the available options for this button are:

- Pre-wash (it can be configured also as programme)
- Stains
- Sensitive
- Extra-rinse

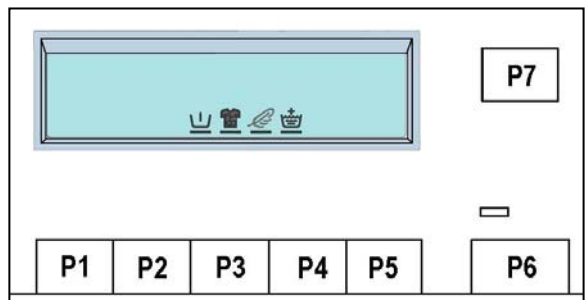


- **Button no. 4: OK**

-Configurable button: it confirms the chosen options.

- **Button no. 5: TIME SAVE**


-Configurable button, the "TIME SAVE" function reduces the washing time.

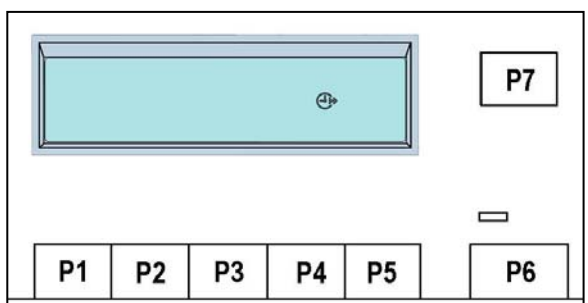


- **Button no. 6: START/PAUSE**

This button is configurable and it is combined to LEDs 20-21. Two LEDs, one yellow that flashes in case of alarm and one red:


- > that flashes when the appliance is in pause, or in combination with the yellow one to indicate the alarm code.
- > remains lit during the cycle execution.

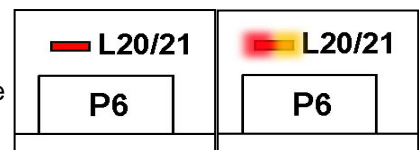

Button no. 7: this button is configurable and has the function of DELAYED START. During the programme setting phase, it is possible to select a delayed start from 30' to 20 hours (30' ↻ 60' ↻ 90' ↻ 2h ↻ 3h... ↻ 20h ↻ 0h) and the time is displayed in the LCD, during the last hour the time decreases every minute.

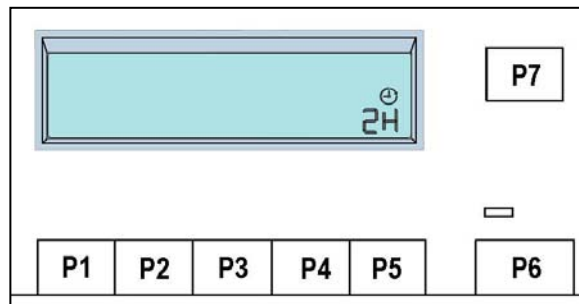

↻ Padlock
See page 12

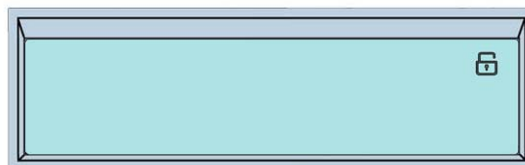

↻ Washing phases

Pre-wash, wash, rinses, drain and spin light up during the selection phase if the programme includes these phases, during and after the execution of the phase. The bar under the symbol flashes when the relative phase is being executed. The symbols of the phases to execute remain off.



Pre-wash lights up when it is configured as an option and selected with the relative button.

↻ Door closure

Lights up when the door is locked
Switches off when the door is not locked.
Flashes when the door is being unlocked (it is evident above all in the models with PTC safety device).




↻ Duration of the cycle

Displaying of the time to end of the selected programme.



↻ Overdosing

Lights up when the cycle is ended to indicate that there has been an overdosing of detergent.

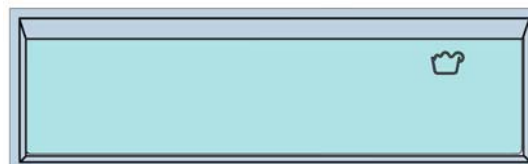


- Buzzer
See page 12.

4.2.5 Pushbuttons and LCD Version WD Series 7

- **Button no. 1: SPIN**

The programme shows the maximum spin, but pushing the button, it is possible to vary the speed up 400 rpm (represented by the number of bars displayed and by the 4 digits).

When the NIGHT CYCLE or RINSE HOLD is selected, the relative symbols light up (no value relative to the bars or the digits appears). At the end of the cycle the symbol RINSE HOLD flashes.

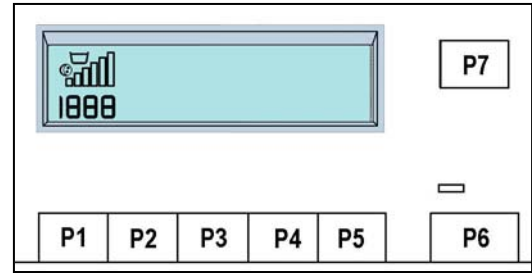

- **Button no. 2: AUTOMATIC DRYING**

Pushing button 2 it is possible to choose one of the three levels of drying:




IRON



CUPBOARD



EXTRA

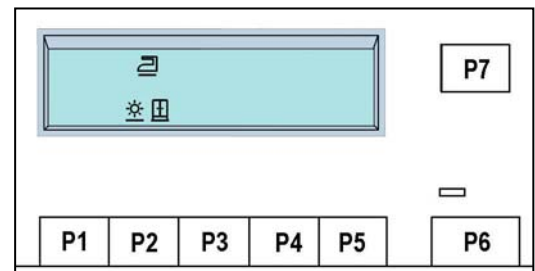


- **Button no. 3: TIME DRYING**

During the selection phase, pushing this button the “time drying” is selected and simultaneously the writing **AUTO** appears. For 3” the symbol and the duration of the drying time (right bottom) are displayed, and then the whole time of the washing programme.


The time is displayed in hours and minutes and is updated every minute.

The max. duration is 130 minutes.

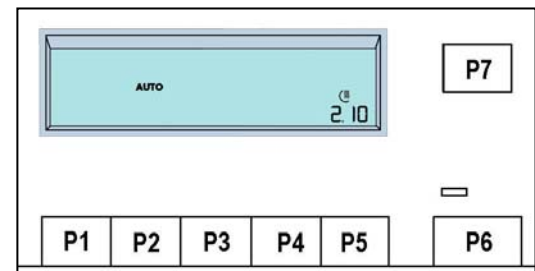

- **Button no. 4: OPTIONS**

Configurable button, the available options are: Pre-wash, Stains, Sensitive, Short, Super short can be selected for each programme.

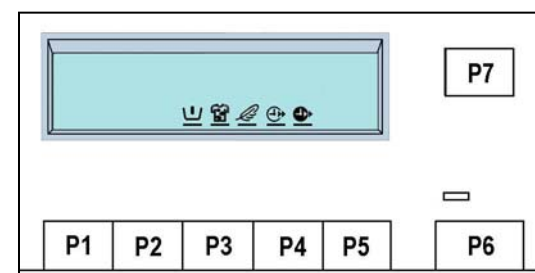

- **Button no. 5: OK**

Configurable button: it confirms the chosen options.


- **Button no. 6: START/PAUSE**

This button is configurable and it is combined to LEDs 20-21.


Two LEDs, one yellow that flashes in case of alarm and one red:

> that flashes when the appliance is in pause, in selection, or in combination with the yellow one to indicate the alarm code.

> remains lit during the cycle execution.

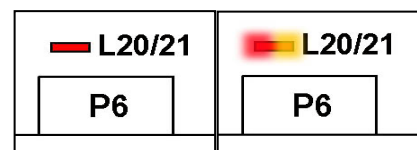

Button no. 7: this button is configurable and has the function of DELAYED START. During the programme setting phase, it is possible to select a delayed start from 30' to 20 hours (30' ↻ 60' ↻ 90' ↻ 2h ↻ 3h... ↻ 20h ↻ 0h) and the time is displayed in the LCD, during the last hour the time decreases every minute.

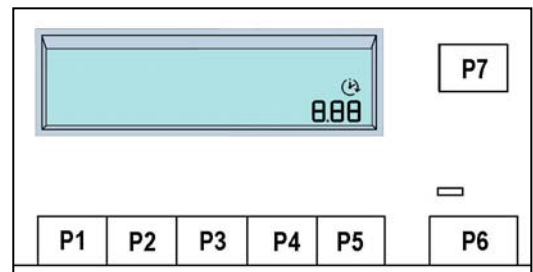

↻ Padlock
See page 12.




↻ Washing phases

Pre-wash, wash, rinses, drain and spin light up during the selection phase if the programme includes these phases, during and after the execution of the phase. The bar under the symbol flashes when the relative phase is being executed. The symbols of the phases to execute remain off. Pre-wash lights up when it is configured as an option and selected with the relative button.



↻ Programme duration

After selecting the programme, the time is displayed in hours and minutes. The duration is calculated on the basis of the maximum load of the selected programme. The time that remains to end the programme is updated every minute.

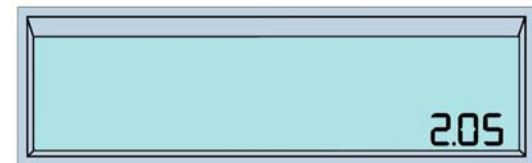



↻ Door closure

Lights up when the door is locked. Switches off when the door is not locked. Flashes when the door is being unlocked (it is evident above all in the models with PTC safety device).



- Buzzer
See page 12.

4.2.6 DEMO MODE SETTING

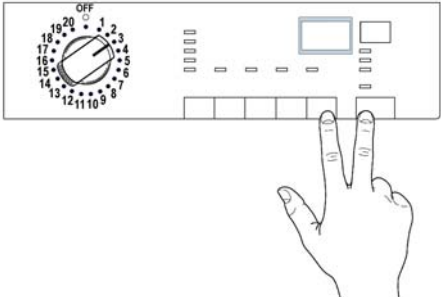
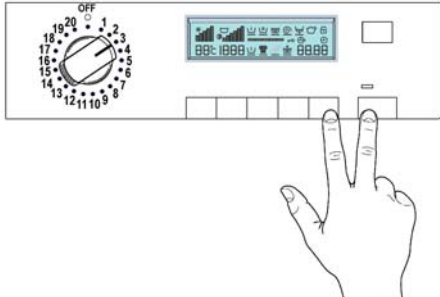
SERIES 6 WM/WD - SERIES 7 Special WM	SERIES 7 WM/WD
	
<ol style="list-style-type: none"> 1. Switch off the appliance. 2. Press and hold down START/PAUSE button and the nearest option button simultaneously (as represented in figure). 3. Holding down both buttons, switch the appliance on by turning the programme selector by three positions clockwise. 4. Hold the buttons down till "dEM" flashes for a short time. 	

4.3 Exiting DEMO mode

To exit the demo cycle, switch the appliance off (programme selector in off/cancel position).

5 DIAGNOSTICS SYSTEM

5.1 Access to diagnostics mode

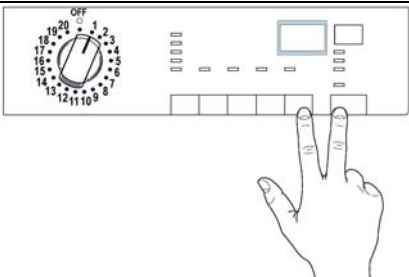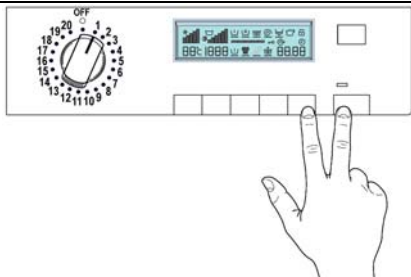


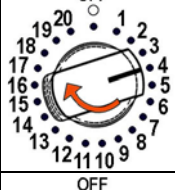
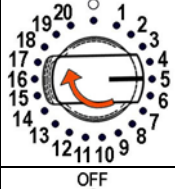
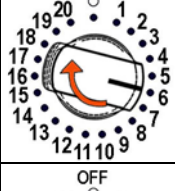
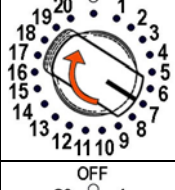
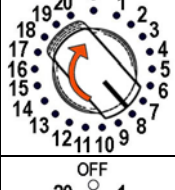
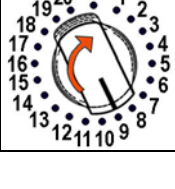
SERIES 6 WM/WD - SERIES 7 Special WM	SERIES 7 WM/WD
	
<ol style="list-style-type: none"> 1. Switch off the appliance. 2. Press and hold down START/PAUSE button and the nearest option button (as represented in figure). 3. Holding down both buttons, switch the appliance on by turning the programme selector by one position clockwise. 4. Continue to hold down the buttons till the LEDs and the symbols begin to flash (at least 2 seconds). In the first position, the operation of the buttons and the relative LEDs is checked; turning the selector knob clockwise the diagnostics cycle for the operation of the various components and the alarm reading is activated. 	


5.2 Exiting diagnostics mode

→ To exit the diagnostics cycle, switch the appliance off, then on, and then off again.

5.3 Diagnostics phases

Irrespective of the type of PCB and the configuration of the programme selector it is possible, after entering diagnostics mode, to perform diagnostics on the operation of the various components and to read the alarms by turning the programme selector **clockwise**. All the alarms are enabled during the diagnostics cycle.

Selector position	Components actioned	Operating conditions	Function checked	LCD
1	 <ul style="list-style-type: none"> - All the LEDs and symbols light in sequence. - When a button is pressed, the corresponding LED or symbol light. 	Always activated	Operation of the user interface	
2	 <ul style="list-style-type: none"> - Door interlock - Wash solenoid 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through washing compartment	Displays the water level in tub
3	 <ul style="list-style-type: none"> - Door interlock - Pre-wash solenoid 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through pre-wash compartment (bleach)	Displays the water level in tub
4	 <ul style="list-style-type: none"> - Door interlock - Pre-wash and wash solenoids 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through conditioner compartment	Displays the water level in tub
5	 <ul style="list-style-type: none"> - Door interlock - Bleach/stains solenoids 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through conditioner/stains compartments	Displays the water level in tub
6	 <ul style="list-style-type: none"> - Door interlock - Wash solenoid if the level of water in the tub does not cover the heater - Heating element - Recirculation pump 	Door locked Water level above the heater Maximum time 10 minutes or up to 90°C (*)	Heating Recirculation	Wash water temperature
7	 <ul style="list-style-type: none"> - Door interlock - Wash solenoid if the level of water in the tub does not cover the heater - Motor (55 rpm clockwise, 55 rpm counter-clockwise, 250 rpm impulse) 	Door locked Water level above the heater	Check for leaks from the tub	Displays the drum speed (the real value divided by ten)
8	 <ul style="list-style-type: none"> - Door interlock - Drain pump - Motor up to 650 rpm then at maximum spin speed 	Door locked Water level lower than anti-boiling level for spinning	Drain and spin; control of congruence in closure of level pressure switches	Displays the drum speed (the real value divided by ten)
9	 <ul style="list-style-type: none"> - Door interlock - Drain pump - Motor fan - Condensation solenoid valve - Drying heater 	Door locked Water level lower than anti-boiling level	Drying	Displays the air temperature

10		- Reading/Cancellation of the last alarm	-----	----	
----	-----------------------------------------------------------------------------------	------------------------------------------	-------	------	--

(*) In most cases, this time is sufficient to check the heating. However, the time can be increased by repeating the phase without draining the water: pass for a moment to a different phase of the diagnostics cycle and then back to the heating control phase (if the temperature is higher than 80°C, heating does not take place).

(**) The check at the maximum speed occurs without control of the FUCS and no clothes have to be inserted inside the appliance.


6 ALARMS

6.1 Displaying the alarms to the user

The alarms are displayed by the flashing of the yellow LED placed above the START/PAUSE button and simultaneously through the LCD.

The alarms displayed to the user are listed below:

- ↻ E10 - Water fill difficulty (closed tap)
- ↻ E20 - Drain difficulty (dirty filter)
- ↻ E40 - Door open

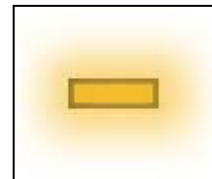

They are represented through the flashing of the yellow LED above the START-PAUSE button and can be solved directly by the end user.

The alarms listed below, instead:

- ↻ EF0 – Water leakage (Aqua Control System)
- ↻ EH0 – Voltage or frequency out of the normal values

are displayed to the user, but for their solution it is necessary the intervention of the Service.

The alarms are enabled during the execution of the washing programme, with the exception of alarms associated with configuration and the power supply (voltage/frequency), which are also displayed during the programme selection phase.

The door can normally be opened (except where specified) when an alarm condition has occurred on condition that:

- The level of the water in the tub is below a certain level
- Water temperature lower than 55°C
- Motor stopped



Certain alarm conditions require that a drain phase be performed before the door can be opened for safety reasons:

- Cooling water fill if the temperature is higher than 65°C
- Drain until the analogue pressure switch is on empty, during a max. 3-minute time.

6.2 Reading the alarm codes

It is possible to display the last three memorised alarms in the FLASH memory of the electronic board:

- Enter diagnostics mode (par. 6.1).
- Irrespective of the type of PCB and configuration, turn the programme selector **clockwise** to the **tenth position**.
- The last alarm is displayed.
- To display the previous alarms, press sequentially the left button of the START/PAUSE button (as represented in figure).

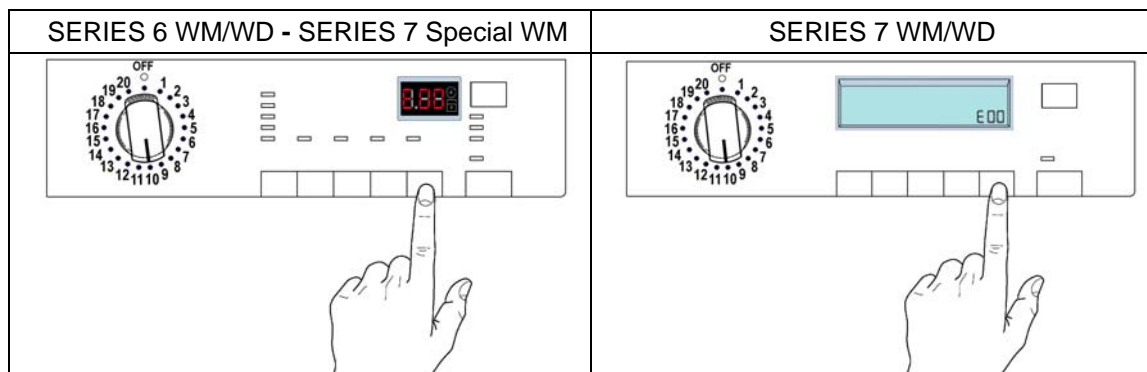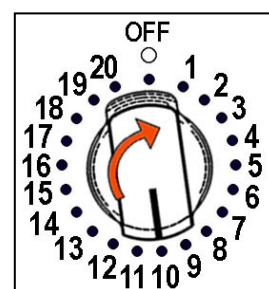


- To return to the last alarm, press the START/PAUSE button.

6.2.1 Displaying the alarm

The alarm is displayed by a repeated flashing sequence of the START / PAUSE button with yellow and red light (0,5 seconds on, 0,5 seconds off with a 2,5 second pause between the sequences).

- button indicator START / PAUSE with yellow light → indicates the first digit of the alarm code (family)
- button indicator START / PAUSE with red light → indicates the second digit of the alarm code (internal number of the family)

These two LEDs are featured in all models.

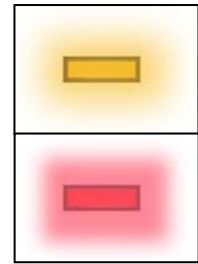

















Notes:

- The first letter of the alarm code "E" (Error) is not displayed, since this letter is common to all alarm codes.
- The alarm code "families" are shown in hexadecimal; in other words:
 - **A** is represented by **10** flashes
 - **B** is represented by **11** flashes
 - ...
 - **F** is represented by **15** flashes

6.2.2 Examples of alarm display

Example: Alarm E43 (problems with the door interlock Triac) will display the following:

- the sequence of four flashes of the START / PAUSE button with yellow light, indicates the first number **E43**;
- the sequence of three flashes of the START / PAUSE button with red light, indicates the second number **E43**;

START / PAUSE button with yellow light			START / PAUSE button with red light		
ON / OFF	Time (Sec.)	Value	ON / OFF	Time (Sec.)	Value
	0.5	1		0.5	1
	0.5			0.5	
	0.5	2		0.5	2
	0.5			0.5	
	0.5	3		0.5	3
	0.5			0.5	
	0.5	4		2.5	Pause
	0.5				
	1.5	Pause			

6.2.3 Operation of alarms during diagnostics

All alarms are enabled during the components diagnostics phase.

6.3 Rapid reading of alarm codes



The last three alarm codes can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- Press and hold down **START/PAUSE** and the nearest **option button** (as to enter the DIAGNOSTICS), for at least two seconds: the LEDs initially switch off, and then display the flashing sequence indicating the last alarm.
- To display the previous alarms press the left button of the START/PAUSE button sequentially.
- To return to the last alarm, press the START/PAUSE button.
- The alarm sequence continues as long as the two buttons are held down.
- The alarm reading system is as described in paragraph 7.2.
- While the alarms are displayed, the appliance continues to perform the cycle or, if in the programme selection phase, maintains the previously-selected options in memory.

6.4 Cancelling the last alarm

It is good practice to cancel the last alarm:

- after reading the alarm code, to check whether the alarm re-occurs during diagnostics;
- after repairing the appliance, to check whether it re-occurs during testing.

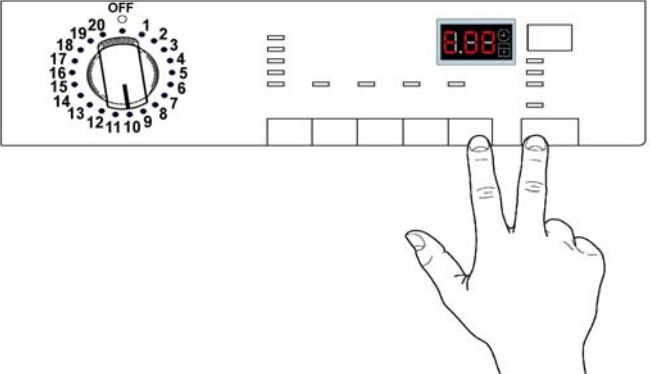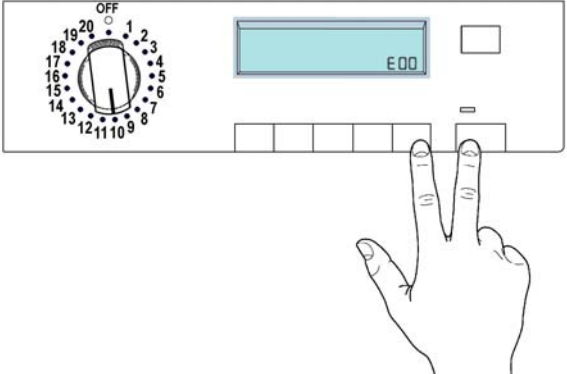SERIES 6 WM/WD - SERIES 7 Special WM	SERIES 7 WM/WD
	
<ol style="list-style-type: none">1. Select diagnostics mode and turn the programme selector to the tenth position (reading of alarms).2. Press and hold down START/PAUSE and the nearest option button (as represented in figure).3. Hold down the buttons till the LEDs stop to flash the LCD display shows "E00" (at least 5 seconds).	

N.B. With this operation all the memorised alarms are deleted.



7 OPERATING TIME COUNTER

Using a specific procedure, the operator can display the total operating time for the appliance, which is counted from the moment it is first switched on.

This option is available only on models equipped with a display. The unit can count up to a maximum of **6550** hours of operating time.

- Only the operating time of normal programmes (and not diagnostic programmes) is counted
- The actual operating time for the cycle is counted (which does not include pauses, delayed start time, time of a stop with water in the drum, and soaking phases)
- The precision of the counter is 30 seconds per programme
- Only whole hours of operation are counted (1 hr and 59 min = 1 hr)

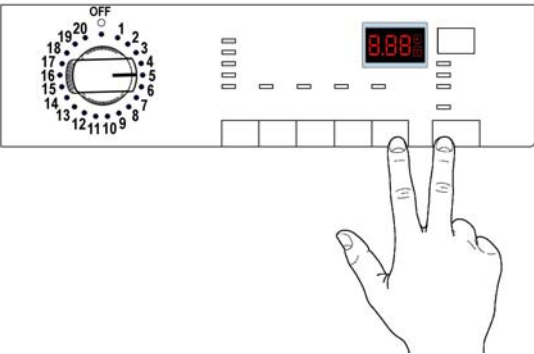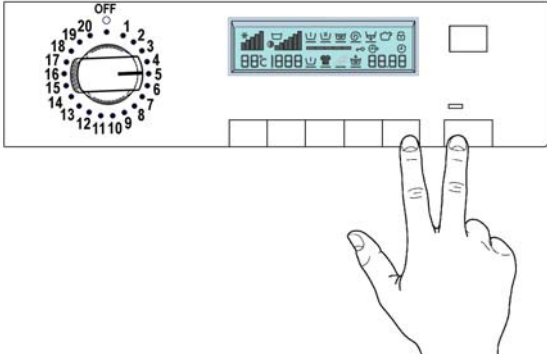


7.1.1 Reading of operating time

SERIES 6 WM/WD - SERIES 7 Special WM	SERIES 7 WM/WD
	
<ol style="list-style-type: none"> 1. Switch off the appliance. 2. Press the START/PAUSE button and the nearest option button (see figure) simultaneously. 3. Holding the buttons down, switch on the appliance turning the programme selector of five positions clockwise. 4. Hold the buttons down till the LCD or the display show the working hours (at least 5 seconds). 	

7.1.2 Display of total operating time with LEDs

This time is displayed two digits at a time. The first two digits indicate the thousands and hundreds. The second two digits indicate the tens and units.

For example, if the operating time is **6550** hours, the display will show the following sequence:

	Phase 1 →	Phase 2 →	Phase 3 →
Styling	Nothing is displayed for <u>two seconds</u>	The following digits are displayed for <u>two seconds</u> : ↵ thousands (6) ↵ hundreds (5)	The following digits are displayed for the next <u>two seconds</u> : a. tens (5) b. units (0)
SERIES 6 & 7 Special			
SERIES 7		65	50

At the end of the phase 3 (after displaying the tens and units) the cycle repeats. To return to normal mode it is possible to: switch the appliance off or press a button or turn the selector knob.

				OPTIONS															Phases								
				Spin speed		Temp.	Rinse-hold	Night cycle	Pre-wash	Stains	Sensitive	Extra rinse	Easy-iron	Economy (*)	Intensive	Normal	Daily	Quick	Super Quick	Reduced spin speed	No spin	Pre-wash	Wash	Rinses	Spin	Delay	Drying
				Max.	Min.																						
Compatibility with PROGRAMMES	Sport intensive	1200	0	40°C	X	X	X		X				X				X	X									
				30°C	X	X	X		X				X					X	X	X	X	X	X	X	X		
				cold	X	X	X		X				X					X	X	X	X	X	X	X	X		
	Quick 20 min.	1200	0	30C												X	X	X	X	X	X	X	X				
	Mix. 40°-60°	1800	0	40°C	X	X	X	X	X		X							X	X	X	X	X	X				
	Hygienize	1800	0	90°C	X	X		X	X	X				X				X	X								
				60°C	X	X		X	X	X				X				X	X			X	X	X			
				50°C	X	X		X	X	X				X				X	X			X	X	X	X		
				40°C	X	X		X	X	X				X				X	X			X	X	X	X		
	Curtains	1200	0	40°C	X	X	X		X					X				X	X			X	X	X			
				30°C	X	X	X		X					X				X	X			X	X	X	X		
				cold	X	X	X		X					X				X	X			X	X	X	X		
	Viscose	1200	0	40°C	X	X	X	X	X	X				X				X	X			X	X	X			
				30°C	X	X	X		X	X				X				X	X			X	X	X	X		
				cold	X	X	X	X	X	X				X				X	X			X	X	X	X		
	Sport	800	0	40°C	X				X	X				X				X	X			X	X	X			
				30°C	X				X	X				X				X	X			X	X	X	X		
				cold	X				X	X				X				X	X			X	X	X	X		
	Short Intensive for JET	1200	0	60°C	X				X	X				X				X	X			X	X	X			
				40°C	X				X	X				X				X	X			X	X	X	X		
Short Intensive for ECO	1200	0	60°C	X				X	X						X		X	X			X	X	X				
			40°C	X				X	X							X		X	X			X	X	X			
Sanitise 60°	1800	0	60°C	X		X	X	X	X				X				X	X			X	X	X				
Rinses	1800	0		X	X			X	X							X	X			X	X	X					
Rinses delicates	1200	0		X	X			X								X	X			X	X	X					
Drain	0	0																				X					
Spin	1800	400															X					X	X				
Spin delicate	1200	400															X					X	X				

(*) Economy

➤ Cotton: 90°C = Eco 67°C; 60°C = Energy Label; 50°= Eco 48°C;40°C = Eco 44°C AA

➤ Synthetics: 60-60°C = Eco 40°C

X Option included in the programme and cannot be deleted

X Only for Jetsystem + Flowmeter

X Option included in the programme, it can be activated/deactivated through the option menu

9 DRYING PROGRAMMES AND WD OPTIONS

9.1 EWM21xx & 25xx

PROGRAMMES				OPTIONS			
				Extra-Dry	Cupboard-Dry	Iron Dry	Max. time (minutes)
	Spin speed		Temp.				
	Max.	Min.					
Cotton	1600	0	90°C	X	X	X	130
			60°C	X	X	X	130
			50°C	X	X	X	130
			40°C	X	X	X	130
			30°C	X	X	X	130
			cold	X	X	X	130
Synthetics	900	0	60°C		X		130
			50°C		X		130
			40°C		X		130
			30°C		X		130
			cold		X		130

Compatibility between Options

		OPTIONS																	
		Rinse-hold	Night cycle	Pre-wash	Stains	Bleach	Extra rinse	Easy-iron	Economy	Intensive	Normal	Daily	Light	Quick	Super Quick	Sensitive	Reduced spin speed	No spin	Half-load
Compatibility with OPTIONS	Rinse-hold	■		X	X	X	X	X	X	X	X	X	X	X	X	X			X
	Night cycle		■	X	X	X	X		X	X	X	X	X	X	X				X
	Pre-wash	X	X	■	(*)	(*)	X	X	X	X	X	X	X	X	X	X	X	X	X
	Stains	X	X	(*)	■	(*)	X	X	X	X	X	X	X	X	X	X	X	X	X
	Bleach	X	X	(*)	(*)	■	X	X	X	X	X	X	X	X	X	X	X	X	X
	Extra rinse	X	X	X	X	X	■	X	X	X	X	X	X	X	X		X	X	X
	Easy-iron	X		X	X	X	X	■	X	X	X	X	X	X	X		X	X	X
	Economy	X	X	X	X	X	X	X	■							X	X	X	X
	Intensive	X	X	X	X	X	X	X	X	■						X	X	X	X
	Normal	X	X	X	X	X	X	X	X		■					X	X	X	X
	Daily	X	X	X	X	X	X	X	X			■				X	X	X	X
	Light	X	X	X	X	X	X	X	X				■				X	X	
	Quick	X	X	X	X	X	X	X	X					■			X	X	
	Super Quick	X	X	X	X	X	X	X	X						■		X	X	
	Sensitive	X		X	X	X			X	X	X	X				■	X	X	X
	Reduced spin speed			X	X	X	X	X	X	X	X	X	X	X	X	X	■		X
No spin			X	X	X	X	X	X	X	X	X	X	X	X	X		■	X	
Half-load	X	X	X	X		X	X	X	X	X	X				X	X	X	■	
Phases in which selection or modification are possible	Selection	X	X	X	X	X	X	X	X	X	X	X	X	X		X	X	X	
	Pre-wash	X	X				X	X								X	X		
	Wash	X	X				X	X								X	X		
	Rinses	X																	
	Spin																		
	Drying			X	X	X	X		X	X	X	X	X	X	X	X	X		X

- (*) Prewash, Stains and Bleach are compatible depending on which detergent drawer is used.
 The delayed start is compatible with all programmes, except for the drain; the max. time that can be selected is 20 hours
- The spin selection is available for all programmes except for the drain/soak.

9.2 Description of options

- **Rinse-hold**

- Stops the appliance with water in the tub before the final spin cycle.
- To drain the water, reset the programme and then select a drain or spin cycle.

- **Night cycle**

- Eliminates all spin phases and adds **three** rinses in COTTON cycles and **two** rinses in SYNTHETICS cycles.
- Stops the appliance with water in the tub before the final rinse.
- Eliminates the buzzer (if configured).
- To drain the water, reset the programme and then select a drain or spin cycle.

- **Pre-wash**

- Adds a pre-wash phase at the start of the cycle with water heating to 30°C (or cold, if selected).
- In COTTON and SYNTHETICS cycles, performs a short spin before passing to the washing phase.
- This option cannot be selected for WOOL and HAND-WASH cycles.

- **Stains**

- Adds a 5-minute motor movement phase after heating to 40°C.
- Ducts water to the pre-wash/stains compartment in order to introduce the special stain-removal product.
- This option cannot be selected for DELICATES, WOOL and HAND-WASH cycles.

- **Bleach**

- Ducts water through the bleach compartment at the beginning of the first rinse in COTTON cycles.

- **Economy / Energy label**

- Modifies the structure of the COTTON 40-60 and SYNTHETICS 50/60 programmes in order to reduce energy consumption.
- Reduces the washing temperature.
- Increases the duration of the wash phase.

- **Super-rinse**

- Adds **two** rinses in the COTTON, SYNTHETICS and DELICATES cycles.
- Eliminates the intermediate spin cycles, with the exception of the final rinse, which is reduced to 450 rpm.

- **Half-load**

- Eliminates one rinse in COTTON programmes.

- **Easy-Iron**

- In COTTON programmes:
 - adds **three** rinse cycles
 - eliminates the intermediate spin cycles
 - performs an impulse spin phase
 - adds an "untangling" phase after the spin cycle
- In SYNTHETICS cycles:
 - reduces the heating temperature in 50/60° cycles to 40°C
 - increases the washing time
 - prolongs the cooling phase at the end of the washing phase
 - adds **one** rinse
 - adds an "untangling" phase after the impulse spin cycle

- **No spin**

- Eliminates **all** the spin phases.
- If selected, three rinses are added in the COTTON cycle and one in the SYNTHETICS cycle.

- **Intensive**

- Performs a specific intensive cycle.

- **Daily**

- Modifies the structure of the COTTON - SYNTHETICS - DELICATES cycles to obtain a good washing performance with a short time.

- **Light**

→ Modifies the structure of the wash phase of the COTTON - SYNTHETICS - DELICATES cycles in a short time.

- **Short**

→ Modifies the structure of the COTTON - SYNTHETICS - DELICATES cycles to obtain very short washing times (optimized for reduced wash loads and very dirty).

→ Reduces the number of rinses (one rinse less).

→ Increases the water level of the other two rinses.

- **Very short**

→ Modifies the structure of the wash phase of the COTTON - SYNTHETICS - DELICATES cycles for half load.

- **Delayed-start time**

→ Adds a pause before the start of the programme. The delay time is displayed on the corresponding LEDs starting from a 2-hour till a 20-hour delay (☞ 30' ☞ 60' ☞ 90' ☞ 2h ☞ 3h... ☞ 20h ☞ 0h).

→ To start the cycle immediately after selecting a delayed start:

press START/PAUSE, cancel the delay time by pressing the appropriate button, then press START/PAUSE again.

- **Electronic drying (WASHER-DRYERS – certain models only)**

Three different degrees of drying can be selected for COTTON, and one for SYNTHETIC fabrics:

☞ Extra-dry (cotton only)

☞ Cupboard-dry (cotton and synthetics)

☞ Iron dry (cotton only)

The appliance automatically calculates the drying time is selected using “fuzzy logic”.

The drying phase may be performed automatically (i.e. without interrupting the programme) if selected together with a washing programme, or as a separate programme.

- **“Drying time” button**

This button is used to select the drying time for COTTON and SYNTHETIC cycles. The time increases by 5 minutes each time it is pressed (from 10 to 130 minutes).

→ The drying function can be selected for automatic execution after a washing cycle, or as a separate programme.


10 TECHNICAL CHARACTERISTICS

10.1 Control system memory



10.1.1 General structure of the memory system

The system features an EEPROM memory module, fitted externally to the microprocessor, which serves to memorize the configuration data, the description of the cycle, the status of the appliance in the event of a power failure, and the alarms.

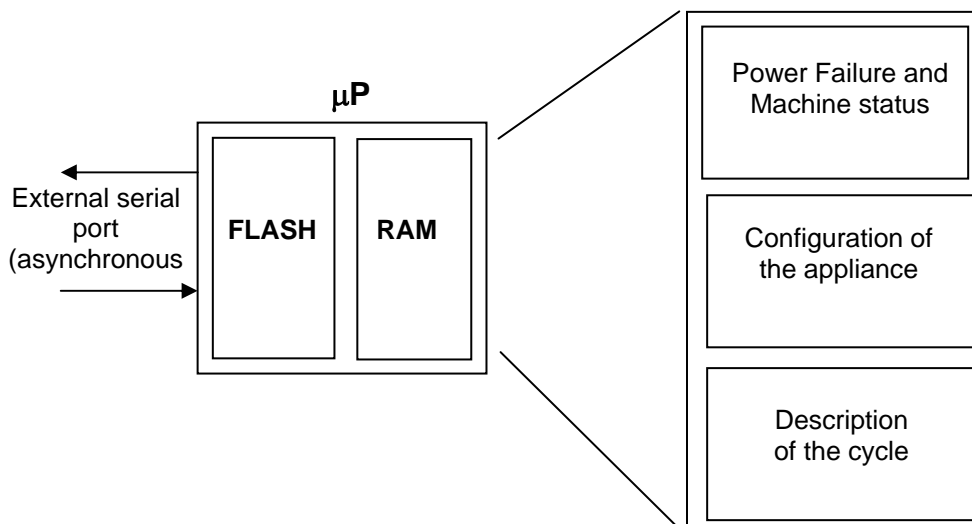

10.1.2 FLASH

This area memory contains the firmware code relative to the functions of the appliance:

- ⇒ Control of electrical loads (motor, pump, solenoid valves etc.).
- ⇒ Control of the sensors (pressure switches, motor speed, door status etc.).
- ⇒ Control of the user interface
- ⇒ Control of the serial port
- ⇒ Control of power failure procedure and alarms
- ⇒ Execution of the washing programme
- ⇒ Power failure, i.e. the information necessary to restart the appliance in the event of a power failure:
 - Selected cycle and options
 - Current phase and sub-phase
- ⇒ Machine status, used to perform special cycles such as:
 - Electrical test (used in the assembly line)
 - Continuous cycles (used in the factory workshop)
- ⇒ Machine configuration: the data contained in the EEPROM define the characteristics of the model and are interpreted by the function software. The variables are as follows:
 - Type of appliance (front-loader, top-loader, compact)
 - Type of door interlock (PTC or instantaneous)
 - Anti-flooding safety device
 - Transmission ratio between drum pulley and motor pulley
 - Structure of the washing group
 - Power supply frequency (50/60 Hz)
 - Type of PCB (horizontal or vertical buttons)
 - Detergent drawer (3 or 4 compartments)
 - Final spin speed (600 – 1400 rpm)
- ⇒ Identification of the appliance:
 - Prod. N.
 - ELC
 - Serial number
- ⇒ Configuration of the user interface:
 - Programmes on main selector
 - Function of secondary selector (if featured)
 - Number and functions of buttons
 - Functions of the LEDs
 - Operation of the buzzer

- ⇒ Washing cycle tables: Each washing cycle consists of a series of phases (steps); the steps are the basic instructions which comprise the description of the cycle, which is common to all appliances having the same characteristics:
 - Water fill
 - Motor movement
 - Reset
 - Heating
 - Drain
 - Spin
 - "IF" conditions (options, temperatures etc.)
- ⇒ Configuration of the washing cycle: for each family of appliances, certain parameters associated with the washing programme are defined:
 - Operational limits (voltage/frequency)
 - Transmission ratios
 - Parameters for control of the signal from the tachometric generator
 - Parameters for half-range operation of the motor
 - Structure of the washing group
 - Control parameters for the FUCS anti-unbalancing system
 - Water fill control algorithm
 - Alarm control system
 - Sensor parameters (flowmeter etc...)

10.1.3 RAM

The RAM (Random-Access Memory) contains the variables, i.e. all the dynamic information used during execution of the programme:

- ⇒ Motor speed
- ⇒ Water temperature
- ⇒ Alarms
- ⇒ Cycle selected
- ⇒ Machine status

The RAM is cancelled when the power supply is disconnected (power failure or appliance switched off).

The contents of the RAM can be read using a computer connected via a DAAS interface.

The same system can be used to send commands to the electronic control unit such as:

- ⇒ Select remote control mode
- ⇒ Action the various loads in remote mode
- ⇒ Select diagnostics mode
- ⇒ Select a cycle and options, and start the cycle

10.2 Door interlock


There are two types of door interlock:

- voltmetric with PTC
- instantaneous

10.2.1 Voltmetric interlock with PTC

- 10 Suppressor
- 19 Door interlock
- 20 PCB

ON/OFF = Main switch (programme selector)

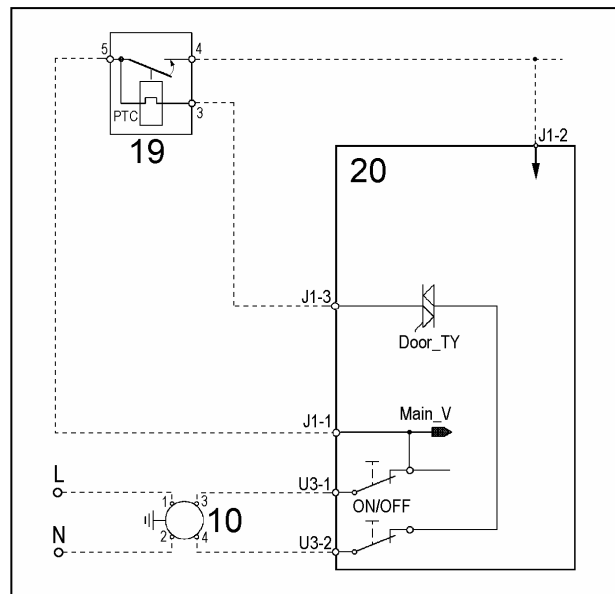

10.2.1.1 Operating principle


- ↻ When the washing programme is started by pressing the START/PAUSE button, the bi-metal PTC (contacts 3-5) is powered by the triac on the PCB: after 2 – 4 seconds, this closes the switch (5-4) which powers the electrical components of the appliance (only if the door is closed).
- ↻ The door interlock prevents aperture of the door while the appliance is in operation.
- ↻ At the end of the washing programme, the PCB disconnects the interlock from the power supply, but the door remains locked for 1 to 3 minutes (PTC cooling time).

10.2.2 Instantaneous door interlock

- With this safety device it is possible to open the door immediately after the end of the cycle.

9 Door interlock
 19 Suppressor
 20 PCB

ON/OFF = Main switch (programme selector)

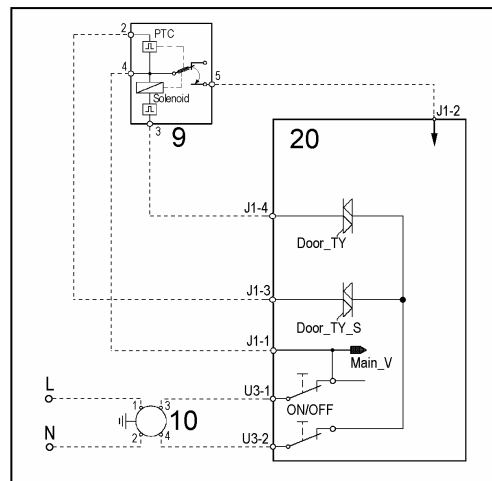

10.2.2.1 Operating principle

- ↪ When the ON/OFF switch closes and the appliance is switched on, power is applied to the bimetallic PTC switch (contact 4-2), but the door remains unlocked.
- ↪ When the programme starts (Start/Pause button), the main board sends a 20 msec pulse to contacts 4-3 on the solenoid (at least 6 seconds must have passed since the appliance was switched on). This locks the door and simultaneously closes the main switch (contacts 4-5), thus applying power to all components on the appliance.
- ↪ When the programme ends, the main board sends two additional 20 msec pulses (200 msec apart):
 - the first pulse does not unlock the door
 - the second pulse (which is sent only if the appliance is operating properly) unlocks the door lock device and simultaneously opens the contacts on the main switch.

10.2.2.2 Conditions required for opening the door

- ↪ Before pulses are sent to open the door, the main board checks for the following conditions:
 - The drum must not be moving (no signal from the tachometric generator).
 - The water level must not be higher than the bottom of the door.
 - The water temperature must not exceed 40° C.


10.2.2.3 Automatic unlock

If a power failure occurs, if the appliance is shut off, or if the solenoid malfunctions, the bimetallic PTC will cool down and the door will unlock in 1 - 4 minutes.

10.3 Water fill system

The electric valves are powered by the PCB by means of the triac and the control of the water level in the tub is carried out by the analogue pressure switch.

- 3 Analogue pressure switch
- 5 Prewash electric valve
- 6 Wash electric valve
- 7 Bleach electric valve
- 20 PCB

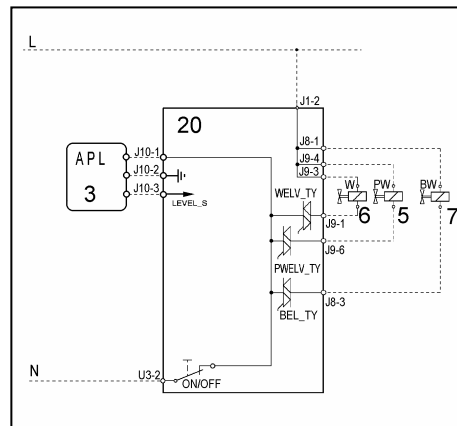

10.3.1 Flow meter

Some models of solenoid valves have a built-in flow sensor which measures the quantity of water in litres that is loaded into the appliance.


If the sensor malfunctions, the water level is controlled by the analogue pressure switch.

Solenoid valve – exploded view	Main board	Turbine
<p>1-Circuit board 2-Turbine 3-Deflector</p> <p>4-Diffuser 5-Double filter</p>	<p>6- Reed switch</p>	<p>7-Magnet</p>

10.3.2 Operating principle of flow meter

The main components of the flow sensor are:

1. Turbine (with magnet and counterweight mounted on the outside)
2. Reed switch (normally open)
3. Magnet
4. Counterweight

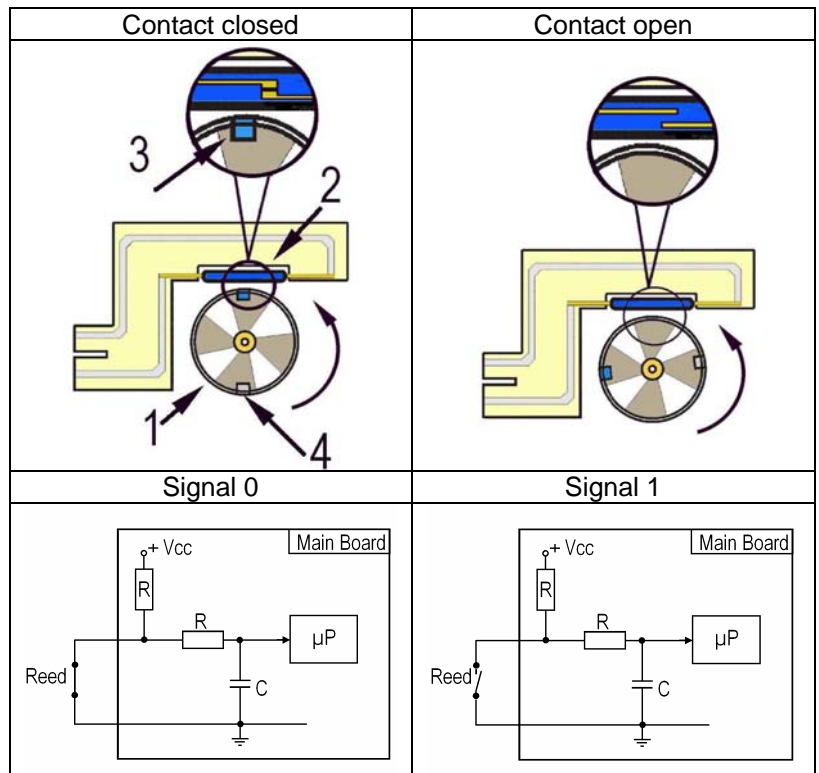

Water entering the solenoid valve rotates the turbine (1) and magnet (3), which passes in front of the reed switch (2), thus closing it. As this contact opens and closes, it generates pulses at a frequency that is a function of water flow.

The turbine completes 230 revolutions for each litre of water. The operating range of the flow sensor is 0.2-10 bar.

Using the signal it receives, the microprocessor can calculate the number of litres of water passing through the solenoid valve.

Mechanical jamming of solenoid valve

The solenoid valve may jam open without being actuated (which will cause flooding if the pressure switch controlling the water level does not trip). If this occurs, the electronic control system (which continuously monitors the flow sensor) will lock the door, start the drain pump and display an alarm.

Low water pressure




If the flow sensor does not generate a signal during water fill even though power is being applied to the solenoid valve, the cause of this condition may be a closed water tap or clogged filter on the solenoid valve (with consequent low water pressure). If this occurs, a warning will be displayed and the cycle will continue for five minutes, after which time an alarm will be signalled.

The solenoid valve controlling residual condensed water operates during the drying phase on washer-dryers. The alarm is deactivated because the amount of water fill is very small.

10.4 Analogue pressure switch of water level control in the tub

General features

The electronic pressure switch is an analogue device that controls the water level in the tub, used in the models with electronic control and it is directly connected to the main PCB.

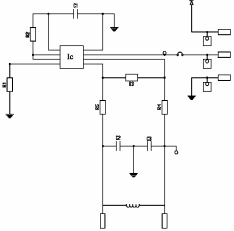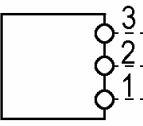ELECTRONIC PRESSURE SWITCH		
Electronic circuit	Electric symbol	
		

The pressure switch is connected by a hose to the pressure chamber.



When the tub is filled with water, the pressure created inside the hydraulic circuit expands the diaphragm. This in turn modifies the position of the core inside the coil, thus changing the inductance and the frequency of the oscillating circuit.

The electronic PCB, according to the frequency, recognizes the quantity of the water in the tub.

- 1 hose
- 3 coil
- 5 core


Frequency variation according to the water quantity in the tub

10.5

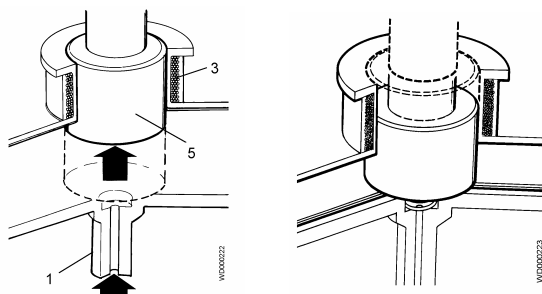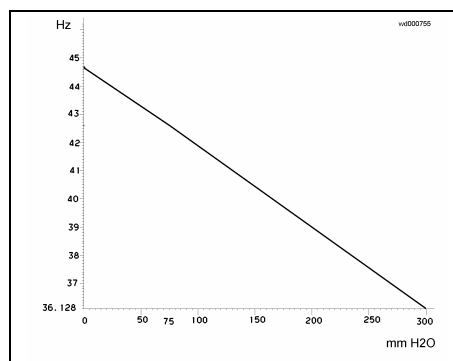

11.5 Drain pump

- 15 Drain pump
- 16 Thermal protector
- 20 PCB

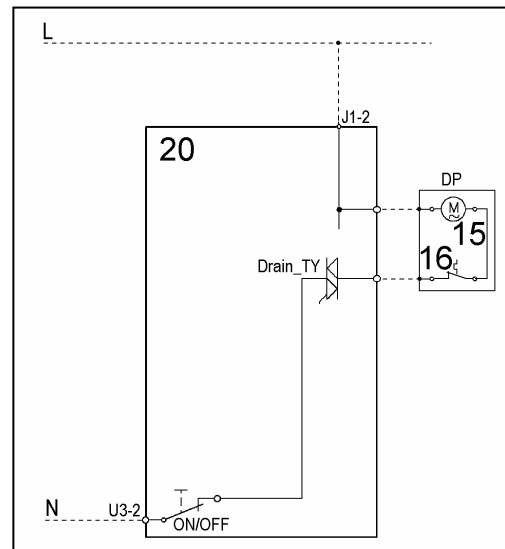


The PCB powers the drain pump via a triac as follows:

- until the electronic pressure switch closes on empty, after which the pump is actioned for a brief period or passes to the subsequent phase;
- for a pre-determined period (and eventually an alarm appears).

10.6 Recirculation pump (if featured)

On jetsystem models, the main board powers the recirculation pump through a triac.


- 17 Drain pump
- 18 Thermal protector
- 20 PCB

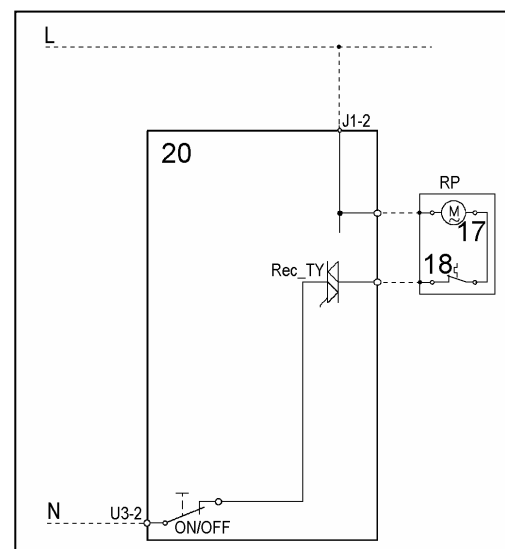


10.7 Heating



- 2 NTC temperature sensor
- 13 Heating element (with thermal fuses)
- 14 PCB
- K1 Relay

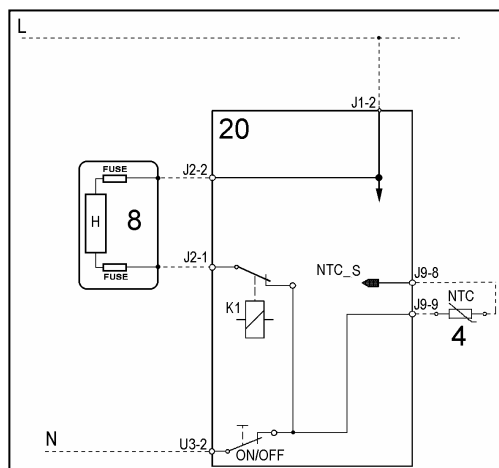

- 1. Tubular casing
- 2. Thermal fuses
- 3. NTC Sensor
- 4. Connectors

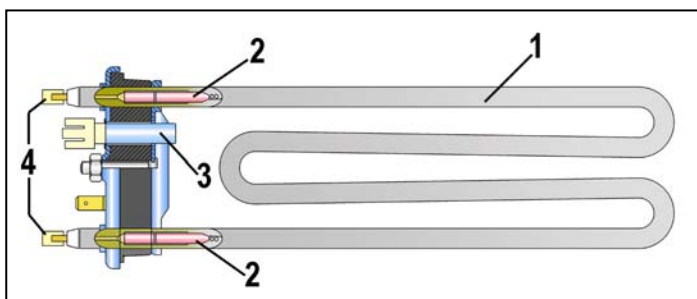

The heating element is powered by a relay (K1) of the electronic board and is provided with two thermal fuses, which interrupt if the temperature degree exceeds the values by which they are calibrated.

WARNING




In case of replacement of the heater, replace it with one with the same characteristics in order not to compromise the safety of the appliance.

10.8 Temperature sensor

The temperature is controlled by the PCB by means of a NTC temperature sensor incorporated in the heating element.


- 1. NTC resistor
- 2. Metallic capsule
- 3. Terminals
- 4. Plastic casing

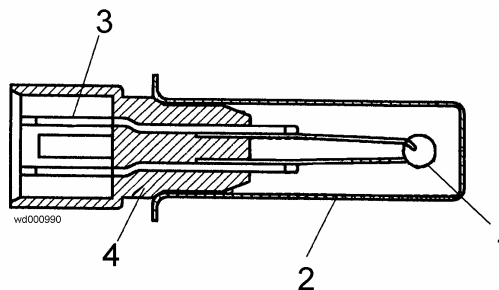

TEMPERATURE (°C)	RESISTANCE (Ω)		
	Nominal value	Maximum value	Minimum value
20	6050	6335	5765
60	1250	1278	1222
80	640	620	660

10.9 Universal motor (EWM 21xx)

- 11 Tachometric generator
- 12 Stator
- 13 Protector
- 14 Rotor
- 20 PCB

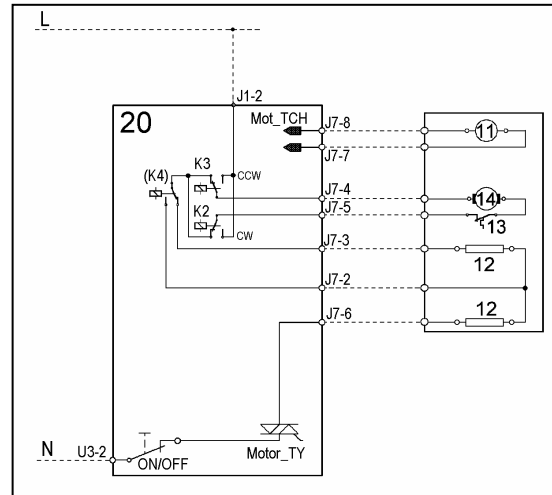


10.9.1 Power supply to motor

The PCB powers the motor via a triac. The direction of rotation is reversed by switching of the contacts on the two relays (K2-K3), which modify the connection between the rotor and the stator. In certain models, a third relay (K4) is used to power the stator (full or half field) according to the spin speed. The speed of rotation of the motor is determined by the signal received from the tachometric generator. During the spin phases, the microprocessor performs the anti-foam and the anti-unbalancing control procedure.

10.10 Three-phase asynchronous motor (EWM25xx)

- 11. Tachometric generator
- 20. PCB
- 23. Inverter
- 24. Motor

X-Y-X = Motor windings

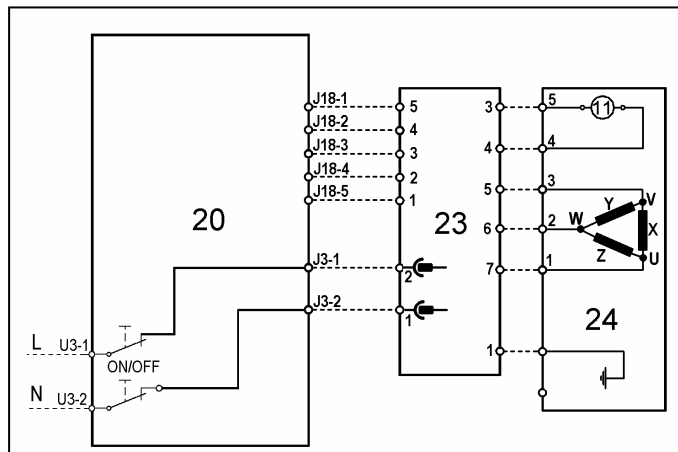


10.10.1 Power supply to motor

Three-phase power is fed by the inverter (4) which sends, through the connectors 5-6-7, the three phases to connectors 1-2-3 on the motor (nodes V-W-U), where the windings (Y-X-Z-) are connected. The phase shift between the phases is 120° and peak amplitude is 310V.

The condition of the motor can be determined by measuring the resistance of the windings:

- Winding y ohm 5,4 ~ ±7% (contacts 2-3)
- Winding x ohm 5,4 ~ ±7% (contacts 1-2)
- Winding z ohm 5,4 ~ ±7% (contacts 1-3)
- Winding T (tachometric) ohm 121 ~ ±7% (contacts 4-5)

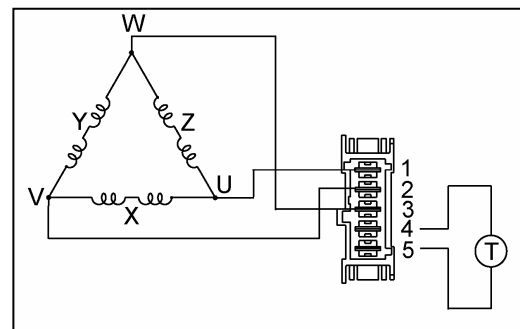


- The electrical components must be serviced by qualified personnel only.
- Unplug the appliance before accessing internal components.


10.11 Anti-foam control system

The anti-foam control procedure (if featured) is performed via the electronic pressure switch.

Spin phase without foam

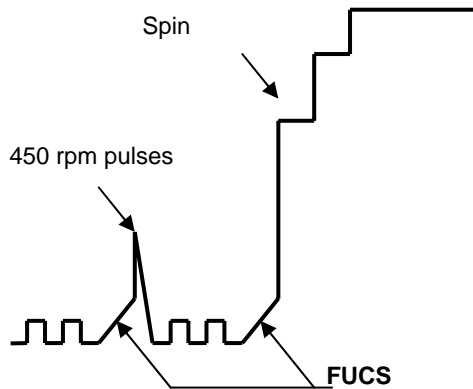

Spin phase with little foam

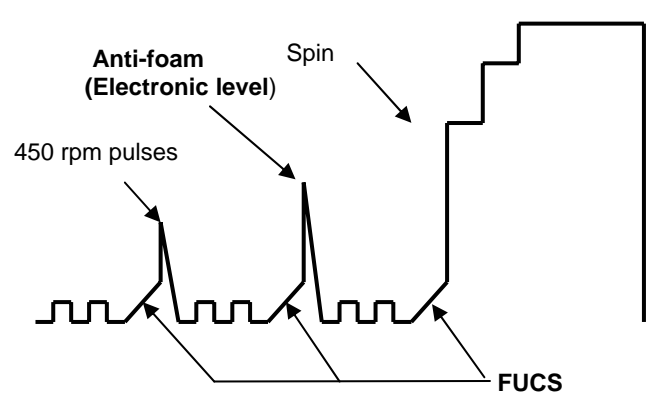


- **Spin with little foam:** if the contact of the electronic pressure switch closes on FULL, the spin phase is interrupted; the drain pump continues to operate and, when the contact returns to EMPTY, the spin phase is resumed.
- **Spin with excessive foam in the tub (critical situation):** The control system detects whether the electronic pressure switch commutates 5 times to FULL. In this case, the spin phase is skipped, and a one-minute drain cycle is performed with the motor switched off; in the case of a washing phase, a supplementary rinse is added.

10.12 “FUCS” (Fast Unbalance Control System)

The control procedure for unbalanced loads is performed dynamically, before each spin cycle, as follows:

- ↻ The phase begins at a speed of 55 rpm; the speed can never fall below this threshold, otherwise the check is repeated.
- ↻ At intervals of 300 ms, the balance is calculated and compared with predetermined limits. If the value is less than the lower limit, the speed of the drum is increased by a certain value depending on the transmission relation between motor pulley/drum; if the unbalancing is higher, it is decreased by the same value. The reduction in the speed of the drum distributes the washing correctly; this procedure is repeated until the wash load is completely balanced.
- ↻ Correct balancing of the wash load is achieved at a speed of 115 rpm, after which the spin cycle begins.

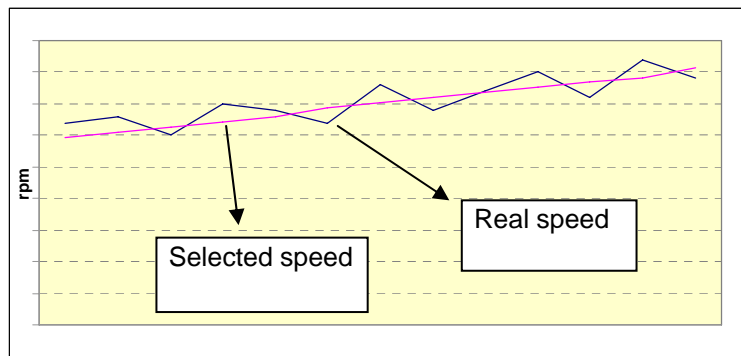

The Unbalancing Control function takes place in different phases: each phase is characterized by:


- ↻ an unbalancing index (0-1-2-3)
- ↻ an unbalancing threshold value (ex: 850, 350, 650, 1100rpm)
- ↻ a time out (max. time)

• Ending of the FUCS balancing phase


The phase is ended when:

- ↻ The drum rotation speed is 115 rpm (or 85rpm in some cases of unbalancing index). In this case the spin is performed.
- ↻ In some cases the optimal balancing value is not reached: a reduced spin is performed depending on the unbalancing.
- ↻ In the worst case, in which all phases are not sufficient to reach a minimum balancing value, the spin is not performed.

• Example of perfect balancing

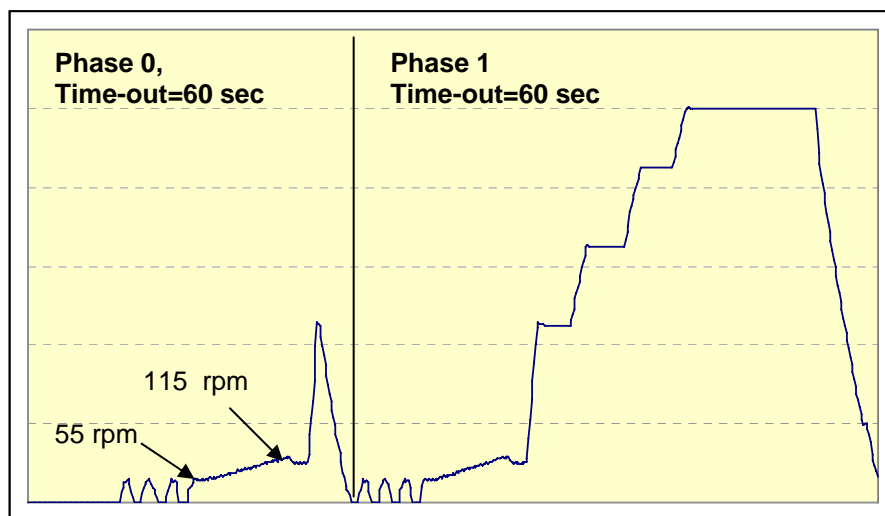


- **Balancing in the available longer interval**

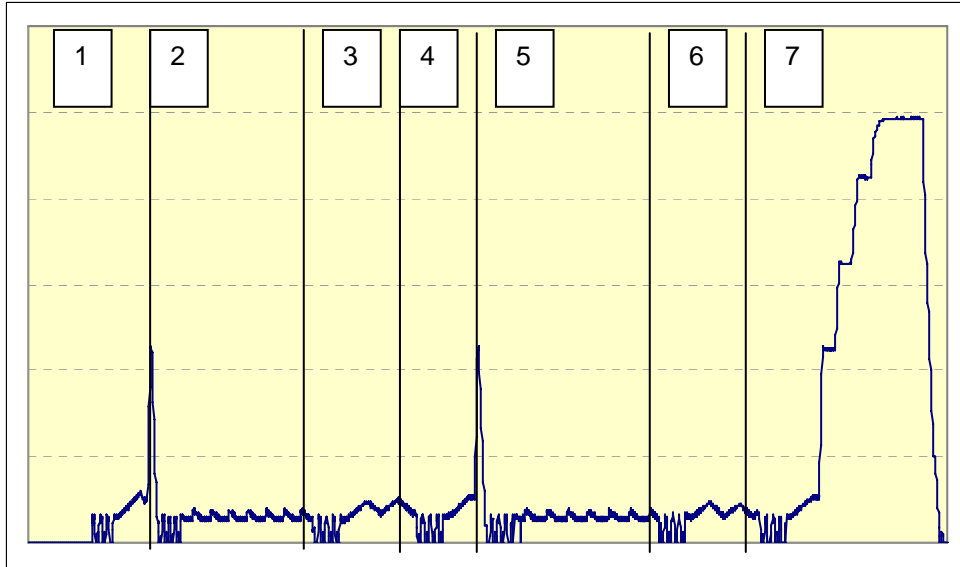

Phase	Unbalancing index	Time-out (sec)
1	0	60
2	1	120
3	2	60
4	3	90
5	1	120
6	2	90
7	3	90


- **Unbalancing after all phases**

In this case the spin (or impulse) is not performed.

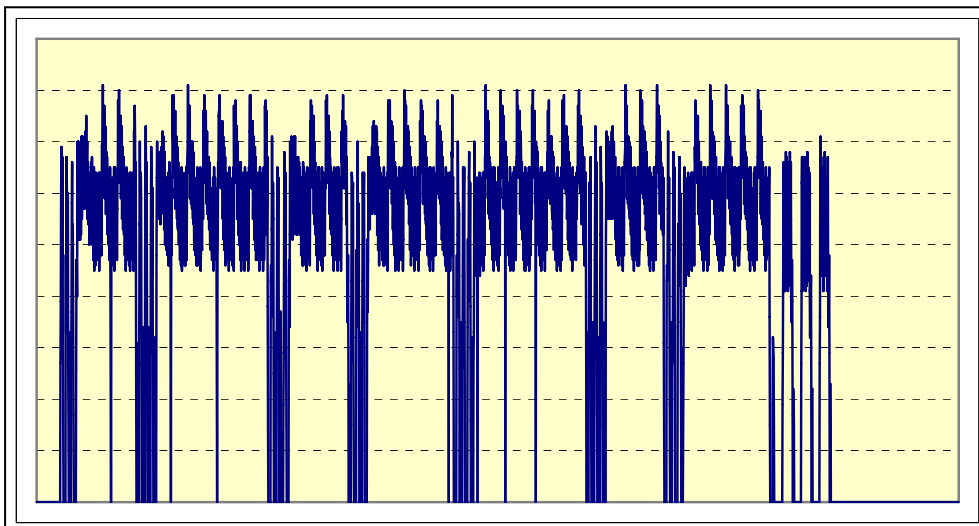

11 DRYING CIRCUIT

1. Fan
2. Fan motor
3. Drying heater
4. Heater casing
5. Duct
6. Door seal
7. Tube from tub to condenser
8. Condenser
9. Water fill solenoid
10. Condenser water intake and steam vent tube
11. Solenoid tube-airbreak
12. Coupling (Air-break)
13. Filter body
14. Drain pump

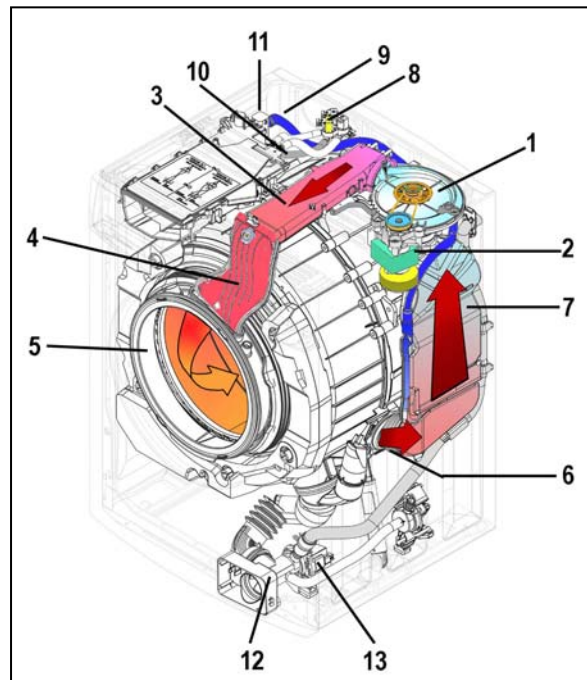

Automatic drying cycles: the drying time is governed by the microprocessor so that the desired degree of dryness is achieved.

The drying cycle can be performed at the end of the washing cycle, or as a separate programme. Various types of drying can be selected:

- extra-dry
- cupboard-dry
- iron-dry

Time-controlled cycle: the drying time is selected by the user (maximum 130 minutes for cotton and synthetic fabrics).

Cooling: a cooling cycle is performed at the end of every drying cycle.

Anti-crease: after the cooling phase an anti-crease phase of a 10-minute duration is performed.

The drying heaters are powered directly by the main board via two relays.

In cycles for synthetic fabrics, drying is performed with only one heater switched on (half power); in cotton/linen cycles, both the heaters are switched on (full power).


The fan motor is powered via a relay; the **condensation solenoid** is powered by a triac.

The washing of the condenser occurs at the beginning of the last rinse.

11.1 Temperature control

The drying temperature is controlled by an NTC sensor positioned on the duct. The heater casing features two safety thermostats (one of which is a manual-reset type).

1. Circuit board
2. Anti-boiling pressure switch AE1
3. Safety thermostat (auto-reset)
4. Drying heater
5. Safety thermostat (manual reset)
6. Anti-boiling pressure switch AE2
7. Fan motor
8. Drying control sensor (NTC)
9. Humidity control sensor (NTC)

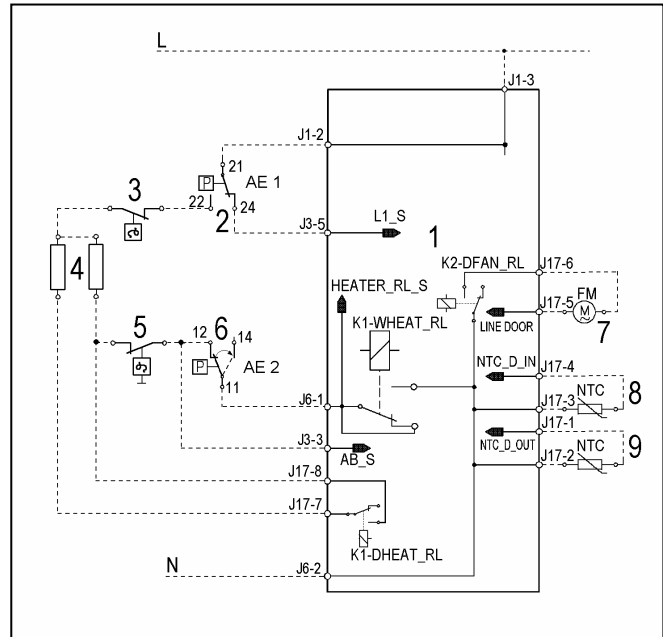


<ol style="list-style-type: none"> 1. Drying temperature control thermostat (NTC) 2. Safety thermostat (auto reset) 3. Manual-reset safety thermostat (150°C) 4. Drying heater 			
NTC sensor: resistance at 25°C		5000Ω	
Manual-reset safety thermostat		Normally closed Opens at 150°±5°C	
Auto-reset safety thermostat		Normally closed Opens at 110°±3°C Closes at 94°±5°	
Heater group	Power	920+920 W	
	Voltage	230V	240V
	Resistance	56,5Ω+56,5Ω	61,5Ω+61,5Ω
Fan capacity		80 m ³ – hour	

Calculating the drying time:

In automatic cycles, the NTC sensor fitted to the drying duct is used to calculate the drying time.

1. NTC temperature sensor
2. Tube from tub to condenser
3. Drying condenser

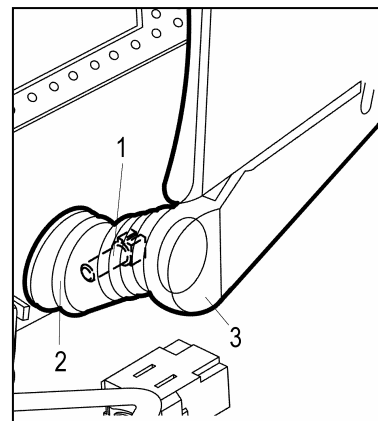

11.2 Table of alarm codes


Alarm	Possible fault	Action/machine status	Reset
E11	Tap closed or water pressure too low; Drain tube improperly positioned; Water fill solenoid valve is faulty; Leaks from water circuit on pressure switch; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused with door locked.	START/RESET
E12	Tap closed or water pressure too low; Drain tube improperly positioned; Water fill solenoid valve is faulty; Leaks from water circuit on pressure switch; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused with door locked.	START/RESET
E13	Drain tube improperly positioned; Water pressure too low; Water fill solenoid valve is faulty; Water circuit on pressure switch is leaking/clogged; Pressure switch faulty.	Cycle is paused with door locked.	START/RESET
E21	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Pressure switch faulty; Wiring faulty; PCB faulty; Electrical current leak between heating element and ground.	Cycle is paused (after 2 attempts).	START/RESET
E22	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Pressure switch faulty; Wiring faulty; PCB faulty; Electrical current leak between heating element and ground.	Cycle is paused	START/RESET
E23	Drain pump faulty; Wiring faulty; PCB faulty.	Safety drain cycle - Cycle stops with door unlocked.	RESET
E24	PCB faulty.	Safety drain cycle - Cycle stops with door unlocked.	RESET
E31	Pressure switch; Wiring; Main PCB.	Cycle stops with door locked.	RESET
E32	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Water circuit on pressure switch; pressure switch; Wiring; main board.	Cycle is paused.	START/RESET
E35	Water fill solenoid valve is faulty; Leaks from water circuit on pressure switch; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle stops. Safety drain cycle. Drain pump continues to operate (5 min. on, then 5 min. off, etc.).	RESET
E38	Water circuit on pressure switches; Pressure switches; Motor belt broken.	Heating phase is skipped.	ON/OFF RESET
E3A	PCB faulty.	Cycle stops with door locked.	RESET
E41	Door lock unit faulty; Wiring faulty; PCB faulty.	Cycle is paused.	START/RESET
E42	Door lock unit faulty; Wiring faulty; PCB faulty. Current dispersion from heating element to ground.	Cycle is paused.	START/RESET
E43	Door lock unit faulty; Wiring faulty; PCB faulty.	(Safety drain cycle) Cycle stops.	ON/OFF RESET
E44	PCB faulty.	(Safety drain cycle) Cycle stops.	ON/OFF RESET
E45	PCB faulty.	(Safety drain cycle) Cycle stops.	ON/OFF RESET

Alarm	Possible fault	Action/machine status	Reset
E51	PCB faulty; current leakage from motor or from wiring.	Cycle blocked, door locked (after 5 attempts).	RESET
E52	Motor faulty; wiring faulty; PCB faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E53	PCB faulty.	Cycle blocked, door locked.	RESET
E54	PCB faulty; current leakage from motor or from wiring.	Cycle blocked, door locked (after 5 attempts).	RESET
E57	Wiring defective on inverter for motor, inverter board defective.	Cycle stops with door locked (after 5 attempts).	RESET
E58	Wiring defective on inverter for motor, inverter board defective, abnormal motor operation (motor overloaded); Motor defective.	Cycle stops with door locked (after 5 attempts).	RESET
E59	Motor defective; Wiring defective on inverter for motor; Inverter board defective.	Cycle stops with door locked (after 5 attempts).	RESET
E5A	Inverter board defective. NTC open (on the inverter board). Overheating caused by continuous operation or ambient conditions (let appliance cool down).	Cycle stops with door locked (after 5 attempts).	RESET
E5H	Wiring defective, Inverter board defective.	Cycle stops with door locked (after 5 attempts).	RESET
E5C	Inverter board defective, the masters voltage is too high (measure the masters voltage).	Cycle stops with door locked (after 5 attempts).	RESET
E5d	Line interference, Wiring defective, defective main board or inverter board.	Cycle stops with door locked (after 5 attempts).	RESET
E5E	Defective wiring between main board and inverter board, Defective inverter board, defective main board.	Cycle stops	ON/OFF
E5F	Defective inverter board, Defective wiring, defective main board.	Cycle stops with door locked (after 5 attempts).	RESET
E61	NTC sensor faulty; heating element faulty; wiring faulty; PCB faulty.	The heating phase is skipped.	START/RESET
E62	NTC sensor faulty; heating element faulty; wiring faulty; PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET
E66	PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET
E68	Earth-leakage between heater and earth.	Cycle blocked with door open.	RESET
E69	Washing heating element interrupted (thermofuse open)	-----	START/RESET
E71	Faulty NTC sensor; Wiring faulty; PCB faulty.	Heating is skipped.	START/RESET
E72	Wiring faulty; Drying NTC sensor (condenser) faulty; PCB faulty.	Drying heating is skipped	START/RESET
E73	Wiring faulty; Drying NTC sensor (duct) faulty; PCB faulty.	Drying heating is skipped	START/RESET
E74	NTC sensor improperly positioned; Faulty NTC sensor; Wiring faulty; PCB faulty.	Heating is skipped.	START/RESET

Alarm	Possible fault	Action/machine status	Reset
E82	PCB faulty (Wrong configuration data). Selector, wiring	-----	RESET
E83	PCB faulty (Wrong configuration data). Selector, wiring	Cycle cancelled.	START/RESET
E91	Wiring faulty; Faulty control/display board PCB faulty.	-----	RESET
E92	Wrong control/display board; Wrong PCB (do not correspond to the model).	Cycle interrupted.	OFF/ON START
E93	Incorrect configuration data; PCB faulty.	Cycle interrupted.	OFF/ON
E94	Incorrect configuration data; PCB faulty.	Cycle interrupted.	OFF/ON
E95	PCB faulty.	Cycle interrupted.	RESET
E97	Faulty PCB (Wrong configuration data).	Cycle interrupted.	RESET
E98	Incompatibility between main board and Inverter.	Cycle interrupted.	OFF/ON
E9b / E9H	Display board.	Cycle interrupted.	ON/OFF RESET
E9C	Display board.	Cycle interrupted.	ON/OFF RESET
E9d	Display board.	Cycle interrupted.	ON/OFF RESET
E9F	PCB.	Cycle interrupted.	OFF/ON
EH1	Power supply problems (incorrect / disturbance); PCB faulty.	Wait for frequency nominal conditions.	OFF/ON
EH2	Power supply problems (incorrect / disturbance); PCB faulty.	Wait for voltage nominal conditions.	OFF/ON
EH3	Power supply problems (incorrect / disturbance); PCB faulty.	Wait for voltage nominal conditions.	OFF/ON
EHE	Wiring faulty; PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET
EHF	PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET
EC1	Solenoid valve faulty/blocked; PCB faulty.	Cycle interrupted with door closed. Drain pump functions always (5 min., then it stops for 5 min. etc.)	RESET
EC3	Wiring faulty; Weight sensor faulty; PCB faulty.	-----	START/RESET
Ed1	Wiring faulty between PCB and WD board; WD board faulty; PCB faulty.	Cycle interrupted.	OFF/ON
Ed2	Wiring faulty between PCB and WD thermostats; WD board faulty; PCB faulty.	Cycle interrupted with door open.	RESET
Ed3	Wiring faulty between PCB and WD thermostats; WD board faulty; PCB faulty.	Cycle interrupted with door open.	RESET
Ed4	Wiring faulty; WD board faulty; PCB faulty.	Cycle interrupted with door open.	RESET
EF1	Drain tube blocked/kinked/too high; Drain filter dirty/blocked.	Warning displayed at the end of cycle (specific LED).	START/RESET
EF2	Excessive detergent dosing; drain tube kinked/blocked; Drain filter dirty/blocked.	Warning displayed after 5 attempts or by the specific LED.	RESET
EF3	Water leaks onto base frame; water control system defective.	Machine drains and cycle stops	ON/OFF RESET
EF4	Tap closed, water pressure too low.	-----	RESET

Alarm	Possible fault	Action/machine status	Reset
EF5	Load too unbalanced; final spin phases skipped.	-----	RESET
E00	-----	-----	-----


11.3 Diagram WM with UNIVERSAL MOTOR EWM 21xx

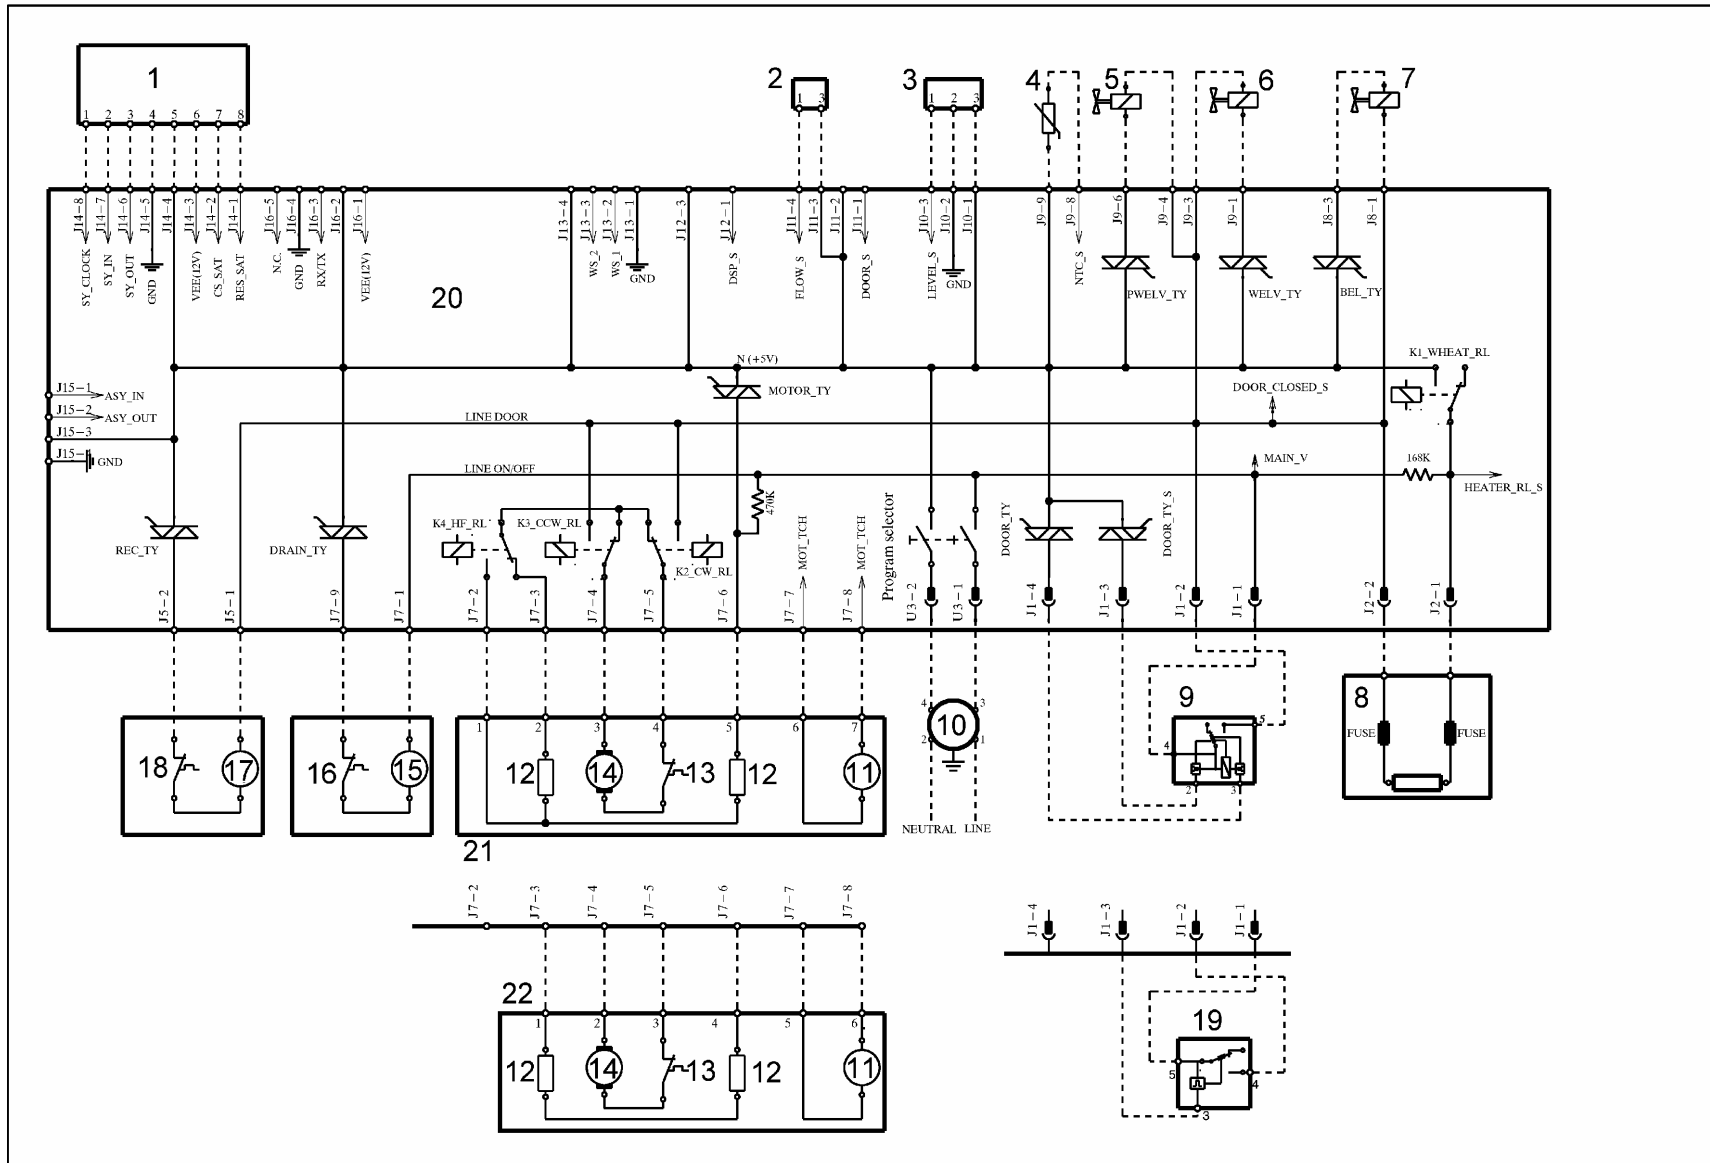

- Key to diagram WM with UNIVERSAL MOTOR EWM EWM 21xx

Electrical components on appliance	Components on main board	
1. Display board	DOOR_TY	Door interlock Triac
2. Flowmeter	DRAIN_TY	Drain pump Triac
3. Analogue pressure switch	REC-TY	Recirculation pump Triac
4. NTC temperature sensor	K1	Heating element relay
5. Solenoid valve for prewash	K2	Motor relay: clockwise rotation
6. Solenoid valve for wash	K3	Motor relay: anti-clockwise rotation
7. Solenoid valve for bleach	K4	Motor relay: half field power supply (some models)
8. Heating element (with thermofuses)	MOTOR_TY	Motor Triac
9. Door interlock (instantaneous)	ON/OFF	Main switch (programme selector)
10. Suppressor	PWELV_TY	Pre-wash solenoid Triac
11. Tachometric generator (motor)	WELV_TY	Wash solenoid Triac
12. Stator (motor)	BEL_TY	Bleach solenoid Triac
13. Thermal cut-out (motor)		
14. Rotor (motor)		
15. Drain pump		
16. Thermal cut-out (drain pump)		
17. Recirculation pump		
18. Thermal cut-out (recirculation pump)		
19. Door interlock (with PTC)		
20. PCB		
21. Motor with half field		
22. Motor without field		


11.4 Diagram WM with THREE-PHASE ASYNCHRONOUS MOTOR EWM 25xx

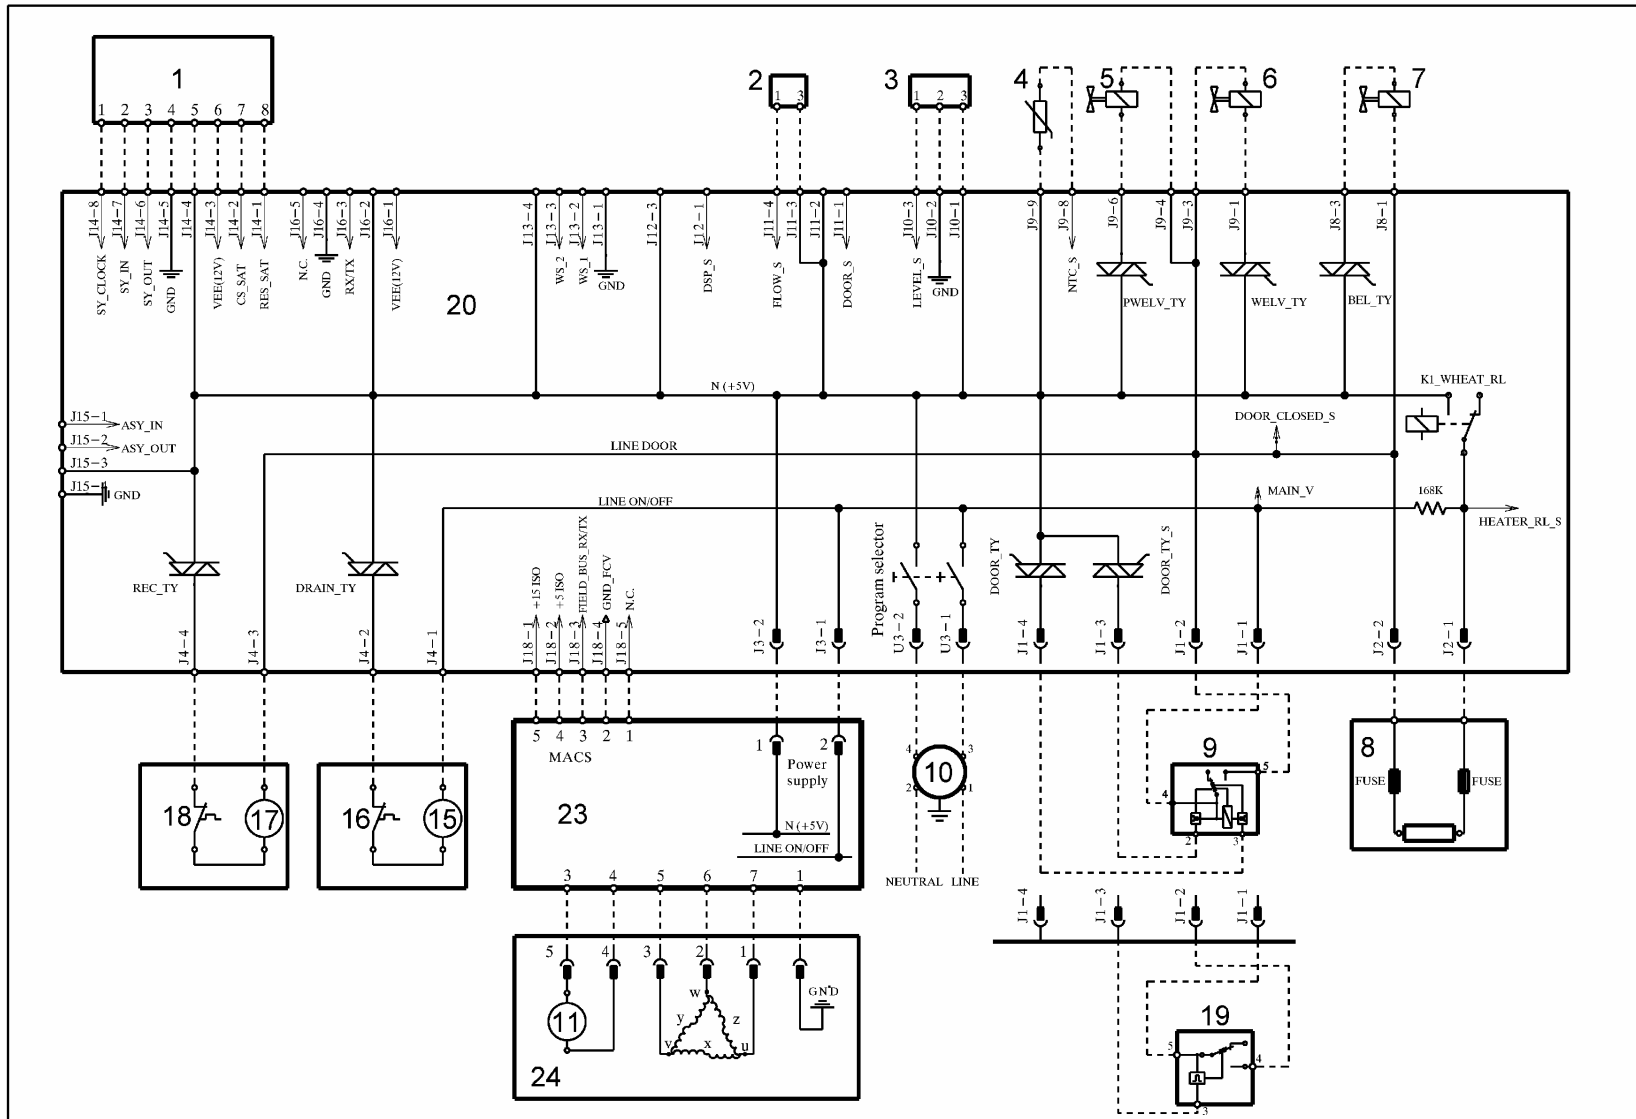

- Key to diagram WM with THREE-PHASE ASYNCHRONOUS MOTOR EWM 25xx

Electrical components on appliance	Components on main board	
1. Display board 2. Flowmeter 3. Analogue pressure switch 4. NTC temperature sensor 5. Solenoid valve for prewash 6. Solenoid valve for wash 7. Solenoid valve for bleach 8. Heating element (with thermofuses) 9. Door interlock (instantaneous) 10. Suppressor 15. Drain pump 16. Thermal cut-out (drain pump) 17. Recirculation pump 18. Thermal cut-out (recirculation pump) 19. Door interlock (with PTC) 20. PCB 23. Inverter 24. Three-phase	DOOR_TY DRAIN_TY REC-TY K1 ON/OFF PWELV_TY WELV_TY BEL_TY	Door interlock Triac Drain pump Triac Recirculation pump Triac Heating element relay Main switch (programme selector) Pre-wash solenoid Triac Wash solenoid Triac Bleach solenoid Triac


11.5 Diagram WD with UNIVERSAL MOTOR EWM 21xx

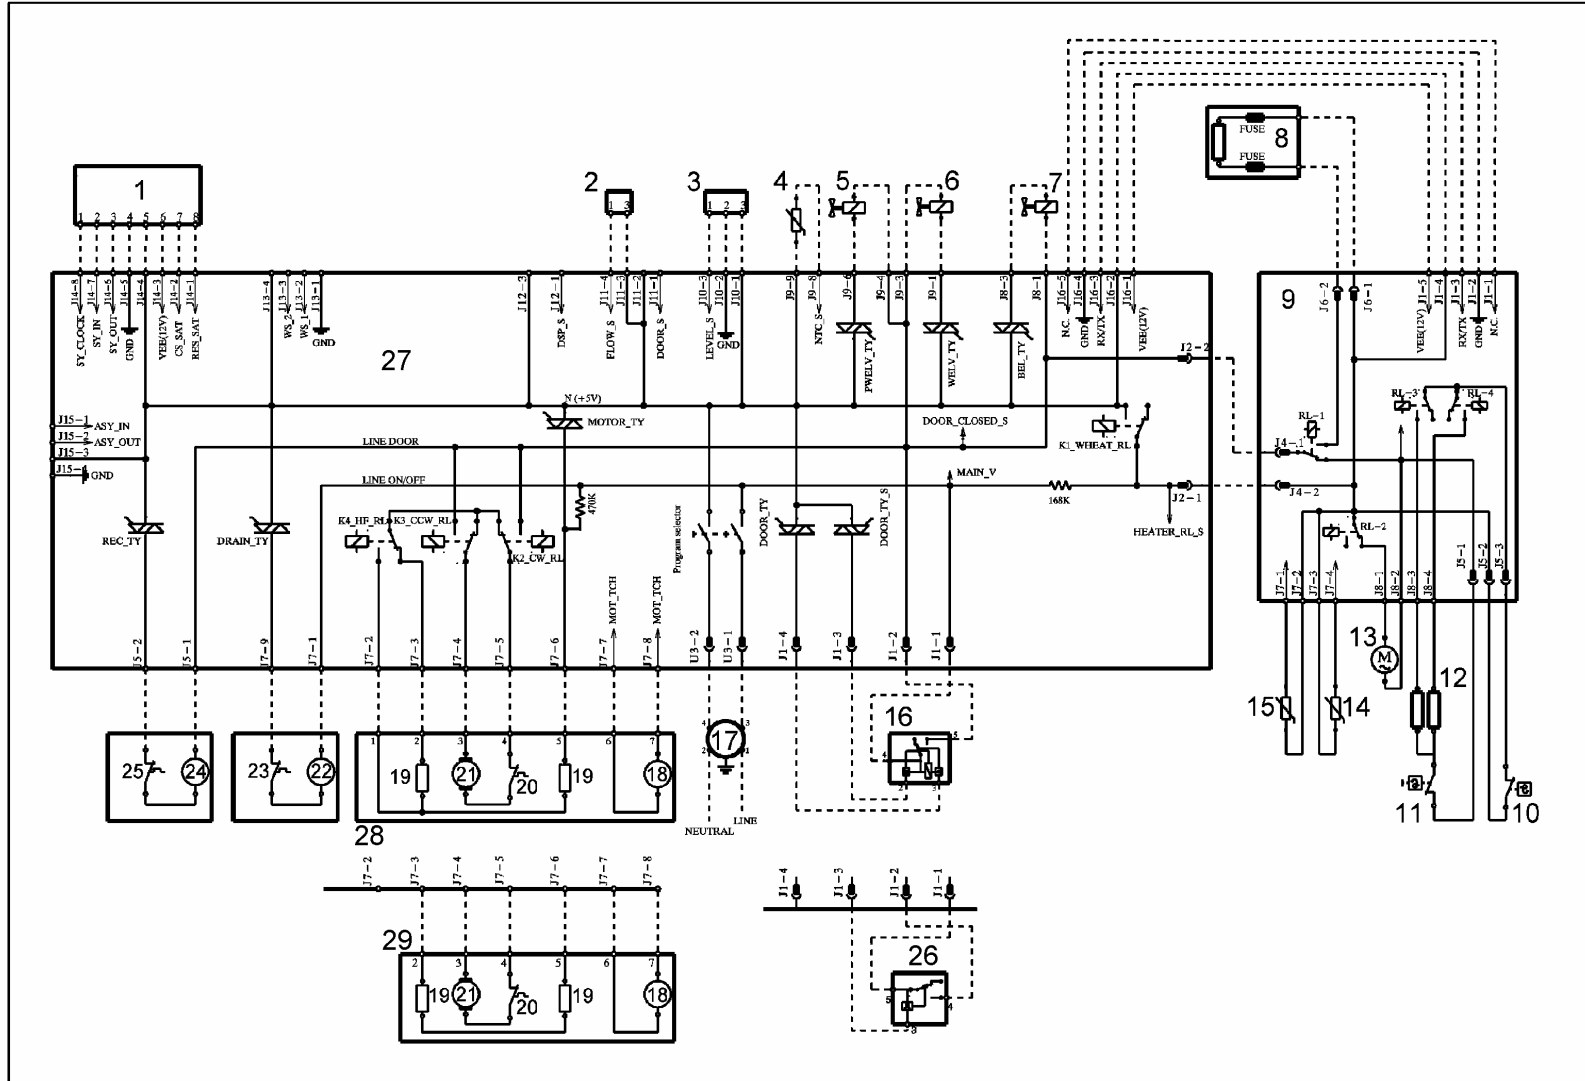

- Key to diagram WD with UNIVERSAL MOTOR EWM 21xx

Electrical components on appliance	Components on main board	
1. Display board or LCD	DOOR_TY	Door interlock Triac
2. Flowmeter	DRAIN_TY	Drain pump Triac
3. Analogic pressure switch	REC-TY	Recirculation pump Triac
4. NTC temperature sensor (wash)	K1	Relay
5. Solenoid valve for prewash	K2	Motor relay: clockwise rotation
6. Solenoid valve for wash	K3	Motor relay: anti-clockwise rotation
7. Solenoid valve for condensation	K4	Motor relay: half field power (some models)
8. Washing heating element (with thermofuses)	MOTOR_TY	Motor Triac
9. WD board	PROGRAM SELECTOR	Main switch (programme selector)
10. Safety thermostat R.A.	PWELV_TY	Pre-wash solenoid Triac
11. Safety thermostat R.M.	WELV_TY	Wash solenoid Triac
12. Drying heating element	BEL_TY	Bleach solenoid Triac
13. Motor fan	RL1	Washing or drying heating element relay
23. NTC temperature sensor (drying)	RL2	Motor fan power relay
14. NTC temperature sensor (humidity)	RL3	Power relay of a drying heater branch
15. Door interlock (instantaneous)	RL4	Power relay of a drying heater branch
16. Interference filter		
17. Tachometric generator (motor)		
18. Stator (motor)		
19. Thermal cut-out (motor)		
20. Rotor (motor)		
21. Drain pump		
22. Thermal cut-out (drain pump)		
23. Recirculation pump		
24. Thermal cut-out (recirculation pump)		
25. Door interlock (with PTC)		
26. Main PCB		
27. Motor with half field		
28. Motor without field		

11.6 Diagram WD with THREE-PHASE ASYNCHRONOUS MOTOR EWM 25xx

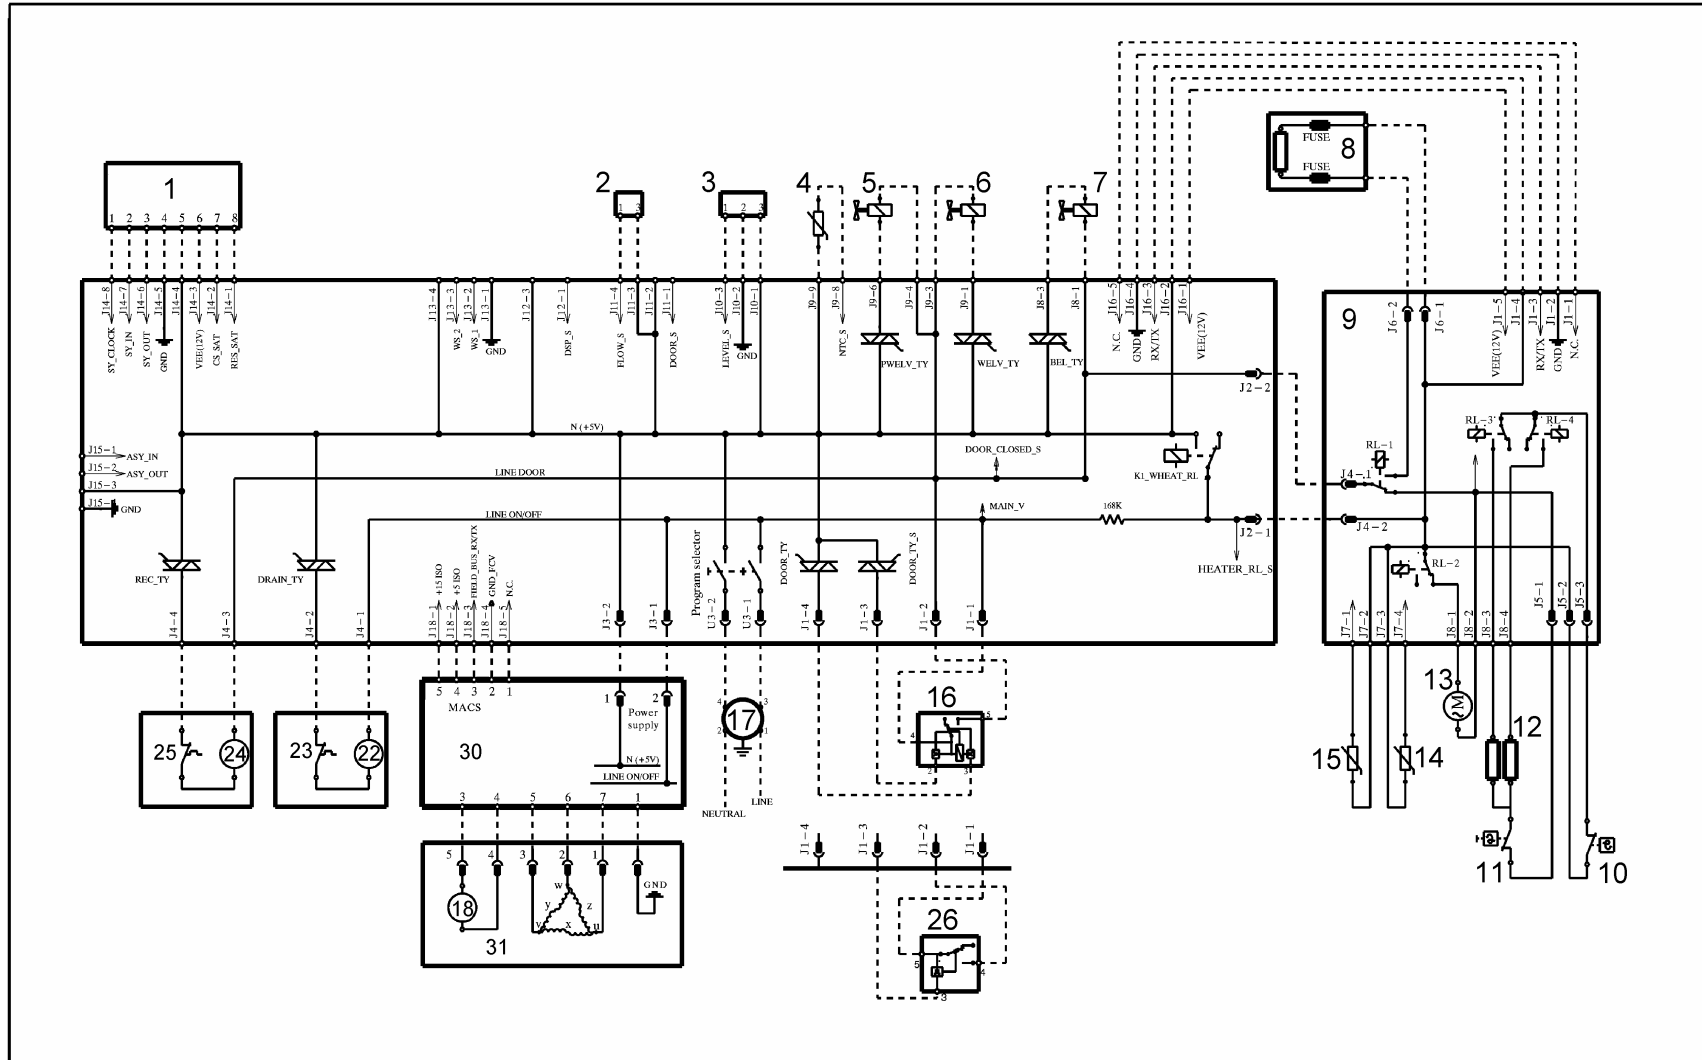

- Key to diagram WD with THREE-PHASE ASYNCHRONOUS MOTOR EWM 25xx

Electrical components on appliance	Components on main board	
1. Display board or LCD 2. Flowmeter 3. Analogue pressure switch 4. NTC temperature sensor (wash) 5. Solenoid valve for prewash 6. Solenoid valve for wash 7. Solenoid valve for condensation 8. Washing heating element (with thermofuses) 9. WD board 10. Safety thermostat R.A. 11. Safety thermostat R.M. 12. Drying heating element 13. Motor fan 14. Drying NTC temperature sensor 15. Humidity NTC temperature sensor 16. Door interlock (instantaneous) 17. Suppressor 18. Tachometric generator (motor) 22. Drain pump 23. Thermal cut-out (drain pump) 24. Recirculation pump 25. Thermal cut-out (recirculation pump) 26. Door interlock (with PTC) 27. Main PCB 30. Inverter 31. One-phase motor	DOOR_TY DRAIN_TY REC-TY K1 K2 K3 K4 MOTOR_TY PROGRAM SELECTOR PWELV_TY WELV_TY BEL_TY RL1 RL2 RL3 RL4	Door interlock Triac Drain pump Triac Recirculation pump Triac Relay Motor relay: clockwise rotation Motor relay: anti-clockwise rotation Motor relay: half field power (some models) Motor Triac Main switch (programme selector) Pre-wash solenoid Triac Wash solenoid Triac Bleach solenoid Triac Washing or drying heating element relay Motor fan power relay Power relay of a drying heater branch Power relay of a drying heater branch

12 ACCESSIBILITY TO THE ELECTRONIC CONTROL SYSTEM

12.1 WM Version

12.1.1 Work top

- a. Remove the two rear screws, push the top panel towards the rear and release from the cabinet.

12.1.2 Control panel


- b. Extract the drawer.




- c. Remove the screw which secures the control panel to the dispenser.



- d. Release the clamp from the cross-member.
e. Cut the clamp which secures the wiring to the board casing (while re-assembling, put a new clamp).

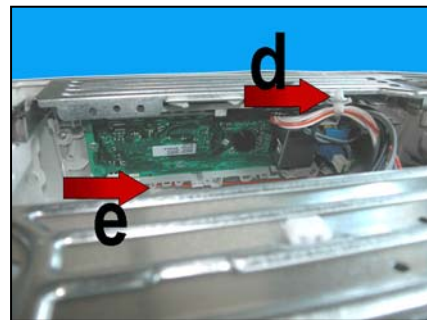

- f. Loosen the screws which secure the cross-member to the cabinet and that central to the conveyor.
g. Release the hook of the dispenser to the cross-member.
h. Loosen the screws and release the hook which secures the control panel to the cross-member.

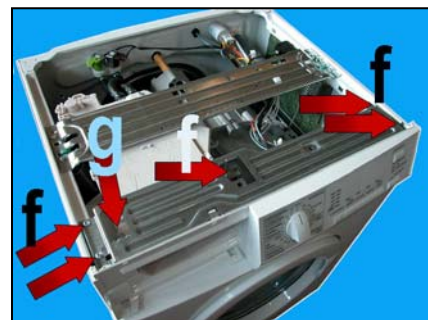

- c. Lift the control panel up and extract it.




- d. Rotate the control panel around itself.




- e. Place it as indicated in figure paying attention not to scrape it.



- e. Remove the screws and release the hooks which secure the board casing to the control panel.

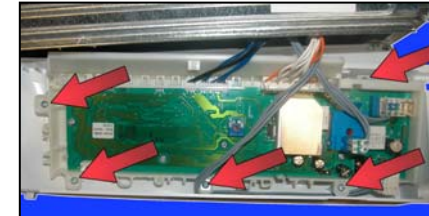

- f. Before mounting the new board extract the knob pressing the hooks indicated by the arrows as represented in figure.

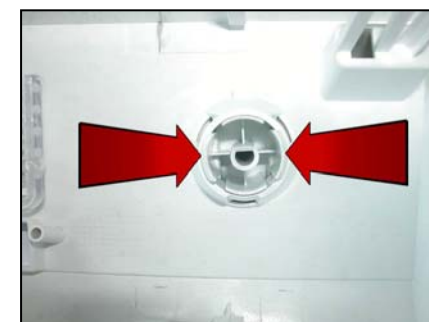

While re-assembling repeat the same operations in reverse order and pay attention to position correctly the knob.



12.2 WD VERSION

12.2.1 Work top

- a. Remove the two rear screws, push the top panel towards the rear and release from the cabinet.

12.2.2 Control panel


- b. Extract the drawer.




- c. Remove the 2 screws which secure the control panel to the dispenser.




- d. Release the wiring clamps from the cross-member.

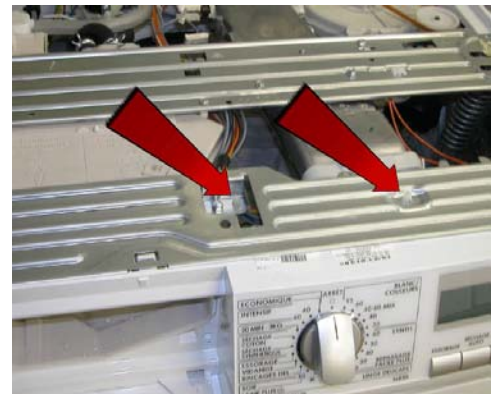


- e. Loosen the screws which secure the cross-member to the cabinet and to the dispenser.

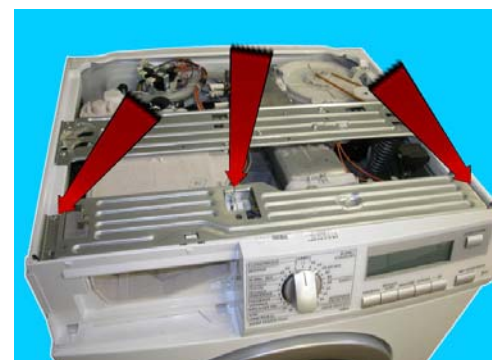


f. Release the hook of the dispenser to the cross-member.

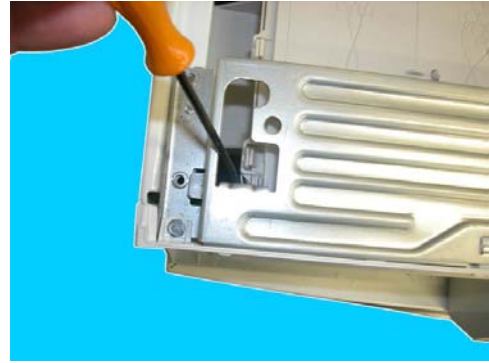


g. Loosen the screw which fits the WD board to the cross-member and extract the board.

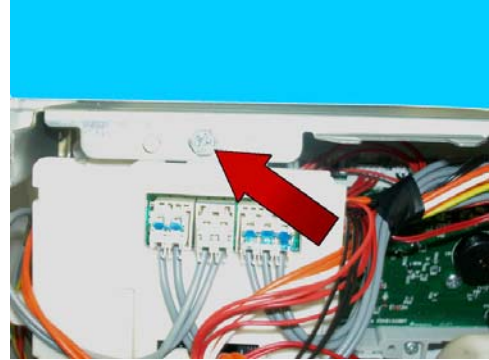


h. Loosen the screws and the hook which fit the control panel to the cross-member.

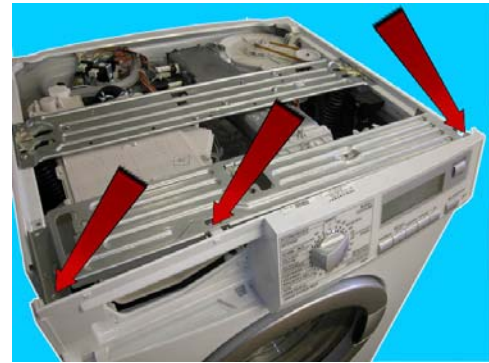


i. Detach the connectors represented in figure.

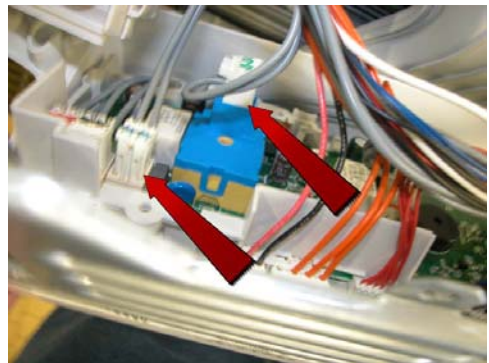

j. Cut the clamp and extract the wiring from the hook which fits it to the board casing.

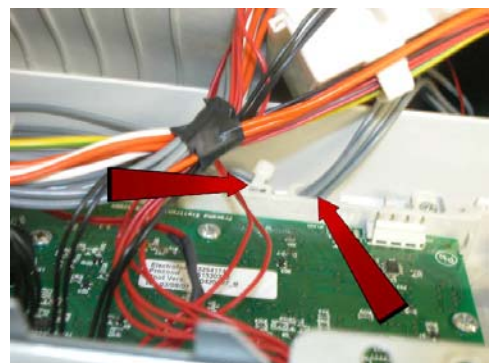

k. Extract the connector from the electronic pressure switch.

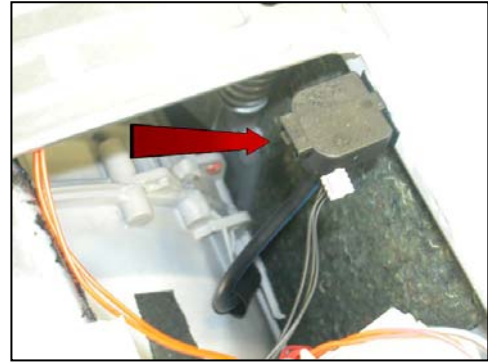

l. Remove the connectors from the thermostat.



Loosen the screws and release the hooks which fix the board assembly to the control panel as represented in the WM version.

While remounting the work top please pay attention not to position it as in fig. A but as in fig. B.

